

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kid Galaxy](#) /

› [Kid Galaxy Claw Climber Tiger 4x4 RC Vehicle Instruction Manual](#)

Kid Galaxy 10300

Kid Galaxy Claw Climber Tiger 4x4 RC Vehicle Instruction Manual

Model: 10300

INTRODUCTION

Welcome to the exciting world of the Kid Galaxy Claw Climber Tiger 4x4 Remote Control Vehicle. This manual provides essential information for setting up, operating, and maintaining your new RC vehicle. Please read all instructions carefully before use to ensure safe and optimal performance.

WHAT'S INCLUDED

- 1 x Claw Climber Tiger 4x4 RC Vehicle
- 1 x Remote Control Transmitter
- 1 x Instruction Guide (this manual)

BATTERY INSTALLATION

Vehicle Battery Installation

1. Locate the battery compartment on the underside of the vehicle.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 6 x AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Remote Control Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.

3. Insert 2 x AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Image: Detailed diagram illustrating the battery installation process for both the RC vehicle and its remote control, showing battery orientation and compartment locations.

PAIRING THE REMOTE CONTROL (2.4 GHz TECHNOLOGY)

Your Kid Galaxy Claw Climber uses 2.4 GHz technology, allowing multiple vehicles to operate without interference. The remote control needs to be paired with the vehicle for proper function.

1. Ensure both the vehicle and the remote control are switched OFF.
2. Wait approximately 10 seconds.
3. Switch ON both the vehicle and the remote control. They should automatically pair.
4. If the vehicle is not moving, turn the On/Off switch of the controller and vehicle to "OFF" position. Powering down 10 seconds for reset purpose. Turn both power switch to "ON" position again to play.

OPERATING CONTROLS

The remote control provides full function control for your Claw Climber Tiger 4x4.

Remote Control Functions:

- **Forward:** Push the left joystick forward.
- **Backward:** Pull the left joystick backward.
- **Turn Left:** Push the right joystick left.

- **Turn Right:** Push the right joystick right.
- **Extreme Climb:** Utilize the 4x4 reaction traction and claw mechanism for enhanced climbing.



Image: An illustration of the remote control, clearly indicating the joystick movements for forward, backward, left, and right steering.

Claw Mechanism Operation:

The unique retractable claws on the wheels provide additional traction for challenging terrains.

1. To **lock** the claws (retract them for normal driving), turn the wheel dial to the left.
2. To **unlock** the claws (extend them for increased traction), turn the wheel dial to the right.



Image: Two close-up images showing a hand turning a dial on the wheel to either retract (lock) or extend (unlock) the claws for different traction needs.

Your browser does not support the video tag.

Video: An official product video demonstrating the Kid Galaxy Claw Climber Tiger 4x4 RC Vehicle in action, showcasing its all-terrain capabilities and claw traction feature.

TROUBLESHOOTING TIPS

- **Vehicle Not Responding:** Ensure both the vehicle and remote control are switched ON and have fresh batteries. Re-pair the remote control as described in the "Pairing the Remote Control" section.
- **Poor Performance/Slow Movement:** Replace old batteries with new ones in both the vehicle and remote control. Low battery power can affect performance.
- **Claws Not Extending/Retracting Properly:** Check for any debris or obstructions around the wheel dial mechanism. Ensure the dial is turned fully in either direction.
- **Interference:** While 2.4 GHz technology minimizes interference, avoid operating near other strong radio frequency sources.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the vehicle after use. Do not use water or chemical cleaners, as this can damage electronic components.
- **Storage:** When not in use for extended periods, remove all batteries from both the vehicle and the remote control to prevent leakage and corrosion. Store in a cool, dry place away from direct sunlight.
- **Battery Care:** Always use fresh, high-quality batteries. Do not mix old and new batteries, or different types of batteries.

SPECIFICATIONS

Feature	Detail
Model Number	10300
Product Dimensions	12 x 9.5 x 6.5 inches
Item Weight	1 pound
Recommended Age	5 - 15 years
Vehicle Batteries	6 x AA batteries (not included)
Remote Batteries	2 x AAA batteries (not included)
Frequency	2.4 GHz

Motors	3 High Torque Motors
Suspension	4-wheel Independent Suspension

IMPORTANT SAFETY INFORMATION

- Not suitable for children under 3 years due to small parts.
- Adult supervision is recommended during operation.
- Do not operate the vehicle in wet conditions or near water.
- Avoid operating near people, pets, or fragile objects to prevent injury or damage.
- Do not attempt to modify or disassemble the vehicle or remote control.
- Always turn off the vehicle and remote control when not in use.
- Dispose of used batteries responsibly according to local regulations.

WARRANTY AND SUPPORT

For technical support, replacement parts, or warranty inquiries, please contact Kid Galaxy customer service.

Phone: 1-800-816-1135

Website: www.kidgalaxy.com

Please have your model number (10300) available when contacting support.