



Manuals.plus /

› Logitech /

› Logitech Cordless Desktop S 510 Media Remote User Manual

Logitech 967555-0403

Logitech Cordless Desktop S 510 Media Remote User Manual

Model: 967555-0403

1. INTRODUCTION

Welcome to the user manual for the Logitech Cordless Desktop S 510 Media Remote. This comprehensive system combines a wireless keyboard, mouse, and a dedicated media remote control, designed to enhance your computing and entertainment experience. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact Logitech support.

- Logitech Cordless Keyboard
- Logitech Cordless Optical Mouse
- Logitech Media Remote
- USB Wireless Receiver
- USB Extension Cable
- AA Batteries (pre-installed or included separately)
- Software CD (may be included for older systems, drivers often available online)



Image 1: Logitech Cordless Desktop S 510 Media Remote components including the mouse, USB receiver, USB extension cable, and media remote.

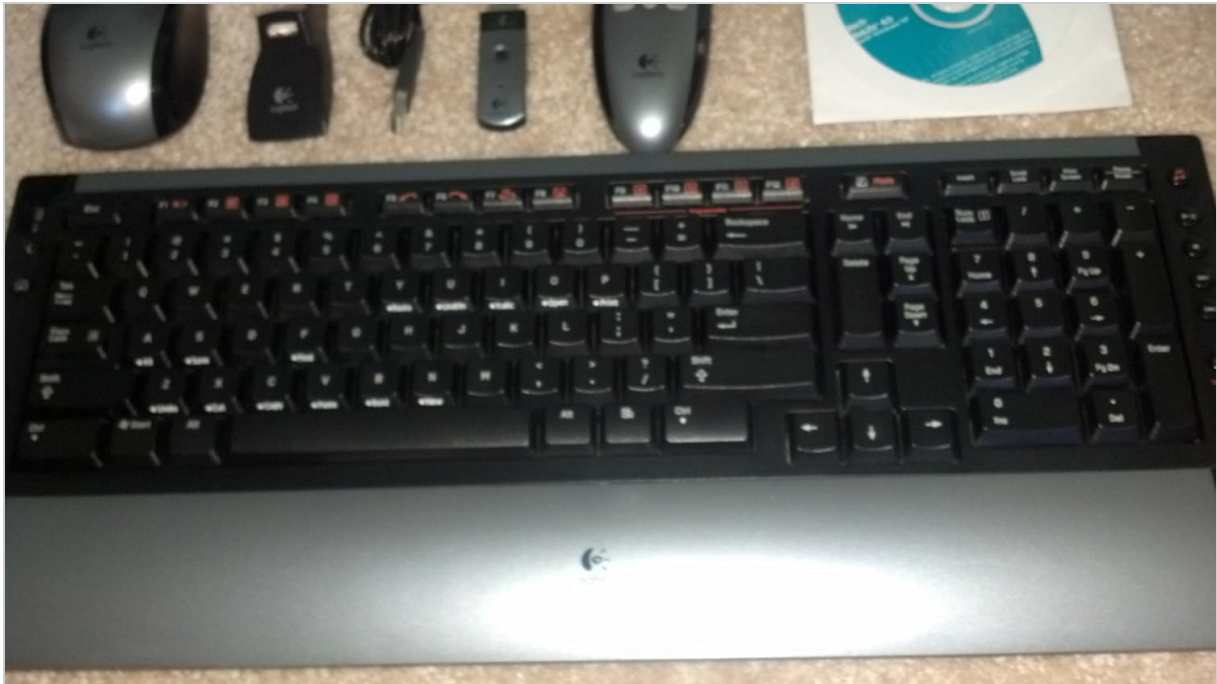


Image 2: The full Logitech Cordless Desktop S 510 keyboard, featuring a comfortable wrist rest and multimedia keys.

3. SETUP GUIDE

3.1. Battery Installation

The keyboard, mouse, and media remote require AA batteries for operation.

1. Locate the battery compartment on the underside of the keyboard, mouse, and remote.
2. Open the compartment cover.
3. Insert the AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.2. Connecting the USB Wireless Receiver

The wireless receiver establishes communication between your computer and the devices.

1. Plug the USB wireless receiver directly into an available USB port on your computer.
2. For optimal signal strength, especially if your computer is under a desk, use the provided USB extension cable to position the receiver closer to your keyboard, mouse, and remote.
3. Your operating system (e.g., Windows XP) should automatically detect the new hardware and install basic drivers.

3.3. Software Installation (Optional)

For advanced customization and full functionality of programmable keys, install the Logitech SetPoint software.

- Insert the included software CD into your computer's CD-ROM drive and follow the on-screen instructions.
- Alternatively, download the latest SetPoint software from the official Logitech support website.

4. OPERATING INSTRUCTIONS

4.1. Keyboard Usage

The keyboard offers standard typing functionality along with dedicated multimedia and programmable keys.

- **Standard Keys:** Use for typing and general computer input.
- **Multimedia Keys:** Located at the top of the keyboard, these keys provide quick access to media playback controls (play, pause, stop, volume up/down, mute) and application shortcuts (e.g., launching media player, email).
- **Programmable Keys:** Customize these keys using the Logitech SetPoint software to launch applications, open files, or perform specific functions.

4.2. Mouse Usage

The optical mouse provides precise cursor control.

- **Left/Right Click:** Standard mouse button functions.
- **Scroll Wheel:** Scroll through documents and web pages. The scroll wheel may also have tilt functionality for horizontal scrolling.
- **Power Switch:** A power switch is typically located on the underside of the mouse to conserve battery life when not in use.

4.3. Media Remote Usage

The media remote is designed for convenient control of your PC's media functions from a distance.

- **Navigation Pad:** Use the directional buttons to navigate menus and select items.
- **Playback Controls:** Dedicated buttons for Play, Pause, Stop, Fast Forward, Rewind, and Skip tracks.
- **Volume Control:** Adjust system volume directly from the remote.
- **Application Launch Buttons:** Buttons to quickly launch common media applications or functions (e.g., "Media", "Music", "Pictures"). These can often be customized via SetPoint software.
- **Range:** The remote operates effectively up to 30 feet (approximately 9 meters) from the receiver, provided there are no significant obstructions.

5. MAINTENANCE

5.1. Battery Replacement

The average battery life is approximately 6 months. Replace batteries when performance degrades or the low battery indicator (if present) illuminates.

1. Open the battery compartment as described in Section 3.1.
2. Remove the old batteries.
3. Insert new AA batteries, observing correct polarity.
4. Dispose of old batteries according to local regulations.

5.2. Cleaning

To maintain optimal performance and appearance, clean your devices regularly.

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Avoid harsh chemicals, abrasive cleaners, or solvents.
- For the mouse's optical sensor, use a dry cotton swab to gently remove any dust or debris.

6. TROUBLESHOOTING

6.1. Device Not Responding

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Check Receiver Connection:** Make sure the USB wireless receiver is securely plugged into a working USB port. Try a different USB port.
- **Proximity:** Ensure the devices are within the operational range (up to 30 feet) of the receiver and that there are no large metallic objects obstructing the signal.
- **Re-establish Connection:** Some Logitech devices have a "Connect" button on both the receiver and the device itself. Press these buttons to re-establish the connection. Refer to the specific device for button locations.
- **Interference:** Other wireless devices (e.g., Wi-Fi routers, cordless phones) can cause interference. Try moving the receiver or the devices away from potential sources of interference.

6.2. Software-Related Issues

- If programmable keys or advanced features are not working, ensure Logitech SetPoint software is installed correctly and is up to date.
- Try uninstalling and reinstalling the SetPoint software.
- Check Logitech's support website for known issues or updated drivers for your operating system (e.g., Windows XP).

7. SPECIFICATIONS

Brand	Logitech
Model Number	967555-0403
Connectivity Technology	USB Wireless
Movement Detection Technology	Optical (Mouse)
Compatible Devices	Laptop, Personal Computer
Operating System	Windows XP (Primary compatibility)
Wireless Range	Up to 30 feet (approx. 9 meters)
Battery Type	AA (2 required, included)
Average Battery Life	6 months
Color	Black
Item Weight	4 Pounds (approx. 1.8 kg)

8. WARRANTY AND SUPPORT

For warranty information, technical support, and frequently asked questions, please visit the official Logitech support website. You can find drivers, software updates, and contact information for customer service there.

Visit [Logitech Support](#)