

Logitech MX3000

Logitech MX3000 Cordless Keyboard and Laser Mouse Desktop User Manual

Model: MX3000 (967553-0403)

[Contents](#) [Setup](#) [Operation](#) [Introduction](#) [Safety](#) [Package](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Logitech MX3000 Cordless Keyboard and Laser Mouse Desktop. This product combines a wireless keyboard and a laser mouse, designed for enhanced precision and comfort.



Figure 1: Logitech MX3000 Cordless Keyboard and Laser Mouse Desktop components.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures or humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Use only specified battery types (AA) and ensure correct polarity during installation.
- Keep batteries out of reach of children.
- Do not attempt to disassemble or modify the device. This will void the warranty.

- Dispose of batteries and electronic components responsibly according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Logitech MX3000 Cordless Keyboard
- Logitech MX3000 Laser Mouse
- USB Wireless Receiver
- AA Batteries (4 required, typically included)
- User Documentation (this manual)

4. SETUP

4.1. Battery Installation

The keyboard requires two (2) AA batteries, and the mouse requires two (2) AA batteries.

1. **For the Keyboard:** Locate the battery compartment on the underside of the keyboard. Open the cover, insert two AA batteries, ensuring correct polarity (+/-), and close the cover.
2. **For the Mouse:** Locate the battery compartment on the underside of the mouse. Open the cover, insert two AA batteries, ensuring correct polarity (+/-), and close the cover.

4.2. Connecting the USB Wireless Receiver

Plug the USB wireless receiver into an available USB port on your computer. Your operating system (Windows 98, Me, XP) should automatically detect the new hardware.

4.3. Software Installation (Optional)

For full functionality, including customization of media keys and advanced mouse settings, it is recommended to install the Logitech SetPoint software. If a software CD was included, insert it into your computer's CD-ROM drive and follow the on-screen instructions. Otherwise, download the latest software from the official Logitech support website.

4.4. Pairing Devices (SecureConnect)

The Logitech MX3000 utilizes SecureConnect wireless technology for a reliable connection. In most cases, the keyboard and mouse will automatically pair with the receiver upon initial setup. If a connection is not established:

1. Ensure the receiver is securely plugged into a USB port.
2. Press the "Connect" button on the underside of the keyboard.
3. Press the "Connect" button on the underside of the mouse.
4. Press the "Connect" button on the USB receiver.

The devices should now be paired and ready for use.

5. OPERATION

5.1. Using the Keyboard

The MX3000 keyboard features a standard layout with additional function keys and media controls.



Figure 2: Logitech MX3000 Cordless Keyboard.

- **Standard Typing:** Use the main alphanumeric keys for text input.
- **Media Controls:** Dedicated one-touch buttons allow control of music and video playback, including play/pause, stop, next/previous track, and volume adjustment. These are typically located above the function keys or on the left/right side.
- **Programmable Keys:** Certain keys may be customized using the Logitech SetPoint software to launch applications, open files, or perform specific functions.
- **Zero-Degree Tilt:** The keyboard is designed with a flat profile for comfortable typing.



Figure 3: Side view of the keyboard, illustrating the Zero-Degree Tilt design.

5.2. Using the Laser Mouse

The MX3000 mouse features advanced laser tracking for precision and multiple programmable buttons.



Figure 4: Logitech MX3000 Laser Mouse.

- **Left/Right Click:** Standard mouse buttons for selection and context menus.
- **Scroll Wheel:** The scroll wheel allows for vertical scrolling of documents and web pages. It also functions as a middle click button.
- **Tilt Wheel:** The scroll wheel can be tilted left or right for horizontal scrolling, useful for wide spreadsheets or images.
- **Zoom Control:** Dedicated zoom buttons (often near the scroll wheel) allow for quick magnification or reduction of screen content.
- **Forward/Back Buttons:** Located on the side of the mouse, these buttons facilitate navigation in web browsers and file explorers.
- **Laser Technology:** Provides precise tracking on a wider variety of surfaces compared to traditional optical mice.
- **LED Battery Level Indicator:** A small LED on the mouse indicates battery status.



Figure 5: Top view of the mouse, highlighting the scroll wheel and additional buttons.

6. MAINTENANCE

6.1. Cleaning

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to clean the surfaces of the keyboard and mouse.
- Avoid using abrasive cleaners, solvents, or aerosol sprays.
- For the keyboard, use compressed air to remove debris from between the keys.
- For the mouse, ensure the laser sensor area on the underside remains clean and free of obstructions for optimal tracking performance.

6.2. Battery Replacement

When the battery indicator LED on the mouse flashes or the keyboard/mouse performance degrades, it is time to replace the batteries.

1. Open the battery compartment on the underside of the respective device.

- 2. Remove the old AA batteries.
- 3. Insert new AA batteries, ensuring correct polarity (+/-).
- 4. Close the battery compartment cover.
- 5. Dispose of old batteries according to local regulations.

The MX3000 is designed for extended battery life, reducing the frequency of replacements.

7. TROUBLESHOOTING

7.1. No Connection or Intermittent Connection

- **Check Batteries:** Ensure batteries are fresh and correctly installed in both the keyboard and mouse.
- **Check Receiver:** Verify the USB wireless receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- **Re-pair Devices:** Follow the pairing instructions in Section 4.4.
- **Reduce Interference:** Move the receiver closer to the keyboard and mouse. Avoid placing the receiver near other electronic devices (e.g., speakers, monitors, other wireless devices) that might cause interference.
- **System Restart:** Restart your computer.

7.2. Mouse Not Tracking Properly

- **Clean Sensor:** Ensure the laser sensor on the underside of the mouse is clean and free of dust or debris.
- **Surface:** Use the mouse on a suitable surface. While laser mice are versatile, highly reflective or transparent surfaces may affect performance. A mouse pad is recommended for optimal tracking.
- **Batteries:** Replace mouse batteries if the indicator light suggests low power.

7.3. Keyboard Input Lag or Missed Keystrokes

- **Distance:** Ensure the keyboard is within the effective range of the receiver.
- **Interference:** As with connection issues, minimize interference from other wireless devices.
- **Batteries:** Replace keyboard batteries if performance is inconsistent.
- **Software:** Ensure Logitech SetPoint software (if installed) is up to date.

8. SPECIFICATIONS

Brand	Logitech
Model Number	967553-0403
Connectivity	Wireless (SecureConnect)
Mouse Technology	Laser
Keyboard Features	Zero-Degree Tilt, One-Touch Media Buttons
Mouse Features	5 Buttons, Scroll Wheel, Tilt Wheel, Zoom Control, LED Battery Indicator
Power Source	Battery Powered
Batteries Required	4 x AA (2 for keyboard, 2 for mouse)
Operating System Compatibility	Windows 98, Windows Me, Windows XP

Item Weight	4.4 pounds (approximate, for entire desktop set)
Product Dimensions (LxWxH)	20 x 9.8 x 3.7 inches (approximate)

9. WARRANTY AND SUPPORT






Logitech products are manufactured to high quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official Logitech website.


For technical support, frequently asked questions, and driver downloads, please visit the Logitech support website. You may also find contact information for customer service there.

Logitech Support Website: <https://support.logi.com/>

© 2023 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners.

Related Documents - MX3000

	<p>Logitech V200 Cordless Notebook Mouse: Installation and User Guide</p> <p>A guide to installing and using the Logitech V200 Cordless Notebook Mouse, covering setup, features, troubleshooting, and important safety information.</p>
	<p>Logitech M535 Bluetooth Mouse: Features, Setup, and Compatibility Guide</p> <p>Discover the Logitech M535 Bluetooth Mouse. This guide covers its features, Bluetooth connection steps, customization with Logitech Options software, and compatibility with Windows, Mac OS, Chrome OS, and Android devices.</p>
	<p>Logitech G500s Laser Gaming Mouse Setup Guide</p> <p>Get started with your Logitech G500s Laser Gaming Mouse. This guide provides setup instructions, feature explanations, and troubleshooting tips for optimal gaming performance.</p>
	<p>Logitech Marathon Mouse M705: Getting Started Guide & Features</p> <p>Comprehensive guide to setting up and using the Logitech Marathon Mouse M705, including features, troubleshooting, and Unifying receiver setup.</p>
	<p>Logitech Desktop MK120 Quick Start Guide Setup & Troubleshooting</p> <p>Get started with your Logitech Desktop MK120 keyboard and mouse combo. This quick start guide provides essential setup instructions, troubleshooting tips, and support contact information for the Sequoia MK120 model.</p>



[Logitech LIFT Vertical Ergonomic Mouse User Guide and Setup](#)

Comprehensive guide to setting up, connecting, and using the Logitech LIFT Vertical Ergonomic Mouse. Learn about its features like SmartWheel, Easy-Switch, and Logitech Flow.

Documents - Logitech – MX3000



[\[pdf\] User Manual Installation Guide Guide](#)

Installation Guide logitech souris m187 ne fonctionne plus driver quickcam mx3000 user manual assets 51254 80 |||

Installation Guide 3 1 2 PS/2 USB 2 1 4 3 Logitech www.logitech.com 5 English

Package Contents: 1. Keyboard 2. Mouse 3. Receiver 4. Four AA batteries 5.

Software Español Contenido de la caja: 1. Teclado 2. Ratn 3. Receptor 4. Cuatro pilas

5. Software Français Contenu : 1. Clavier 2. Souris 3...

lang:es **score:41** filesize: 2.28 M page_count: 2 document date: 2014-03-25



[\[pdf\] User Manual Installation Guide Guide](#)

Installation Guide 3 PS 2 USB errors that may appear in this manual Information contained herein is subject to change without notice 623877 0914 A English 1 iNav™ Tilt Wheel with Cruise Control Zoom and zoom back 100% Enhanced F keys 4 Digital Media Library buttons 5 controls 6 Battery LED 7 Communication 8 Calculator 9 Stand by 10 mx3000 user secure logitech assets 51254 80

Installation Guide 3 PS/2 USB 1 2 1 2 Logitech www.logitech.com 4 3 5 English

Package Contents: 1. Keyboard 2. Mouse Norsk Esken inneholder: 1. Tastatur 2.

Mus 3. Receiver 4. Four AA batteries 5. Software 3. Mottaker 4. Fire batterier 5.

Programvare Deutsch Inhalt: 1. Tastatur 2. Maus ...

lang:it **score:26** filesize: 1.46 M page_count: 2 document date: 2014-03-25



[\[pdf\] User Manual Installation Guide Guide Accessories](#)

14 Computers NEW MARGIN 862 933 Charles Rosenstock B H A105 S2021 This system features an Intel Celeron M Processor 390 a DVD burner and 100GB HDD Atheros wireless LAN 802 11b g keeps you connected anyone create cinematic looking presentations iWork 05 imports AppleWorks exports Microsoft Word PowerPoint files along with supporting wide range of file formats including Hi Speed USB 2 0 cable power sharing LaCie Utilities User s Manual Quick Install Guide 2007AVP 14Computers862 bhphotovideo FrameWork Product Resources SourceBookAVP static cdn2

A/VP Trheesentation SourceBook PHOTO - VIDEO - PRO AUDIO Section14

Computers Accessories Apple ... VIDEO - PRO AUDIO COMPUTER ACCESSORIES

933 LOGITECH WIRELESS MICE KEYBOARDS Cordless Desktop **MX3000** Enjoy cordless freedom and laser performance. The Cordless Desktop **MX3000** Laser offers unmatc...

lang:en **score:17** filesize: 5.51 M page_count: 72 document date: 2006-08-01