

manuals.plus /

- › [TIMEX](#) /
- › [Timex Analog-Digital White Dial Men's Watch T44642 - User Manual](#)

TIMEX T446429J

Timex Analog-Digital White Dial Men's Watch

Model: T446429J

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Timex Analog-Digital White Dial Men's Watch, model T446429J. This timepiece combines traditional analog hands with a digital display, offering versatile timekeeping and additional functions.



Image 1.1: Front view of the Timex Analog-Digital Watch T446429J, featuring a white dial, analog hands, a digital display, and a brown leather strap.

Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

2. SETUP

2.1 Setting Analog Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown out to the first position.
3. Rotate the crown clockwise or counter-clockwise to adjust the analog hour and minute hands to the correct time.
4. Once the time is set, push the crown back in completely to start the analog movement.

2.2 Setting Digital Time and Date

The digital display offers various modes including time, date, and potentially an alarm or stopwatch. Refer to the

buttons on the watch case for navigation.



Image 2.1: Side view of the Timex Analog-Digital Watch T446429J, highlighting the crown and push-buttons used for setting and operating the watch's functions.

1. Press the 'MODE' button (typically on the left side) to cycle through the digital display modes until you reach the time setting mode (often indicated by flashing digits).
2. Use the 'SET' button (typically on the right side) to select the digit or setting you wish to change (e.g., hours, minutes, 12/24-hour format).
3. Use the 'START/STOP' or 'ADJUST' button (often on the top right) to increase the value of the flashing digit.
4. Repeat steps 2 and 3 for all time and date settings (month, day, year).
5. Once all settings are correct, press the 'MODE' button again to exit the setting mode.

3. OPERATING YOUR WATCH

3.1 Indiglo Night-Light

Your Timex watch features the INDIGLO night-light for illumination in low-light conditions.

- Press the INDIGLO button (often located on the top left of the watch case) to activate the backlight.
- The light will remain on for a few seconds or as long as the button is held.

3.2 Digital Display Modes

The digital display can show various information. Use the 'MODE' button to cycle through them:

- **Time Mode:** Displays current digital time (hours, minutes, seconds, AM/PM).
- **Date Mode:** Displays month, day, and year.
- **Alarm Mode:** Allows setting and viewing of the alarm time.
- **Stopwatch Mode:** For timing events.

3.3 Alarm Function

To set and use the alarm:

1. Press the 'MODE' button until you reach the Alarm mode.
2. Use the 'SET' button to select the hour or minute digits.
3. Use the 'START/STOP' or 'ADJUST' button to change the alarm time.
4. Press 'MODE' to exit setting.
5. To activate/deactivate the alarm, typically press the 'SET' button while in Alarm mode. An alarm icon will appear/disappear.

4. MAINTENANCE

4.1 Water Resistance

This watch has a water resistance depth of 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling.

- Do not operate the crown or push-buttons when the watch is wet or submerged in water.
- Avoid exposing the watch to hot water or steam, as this can compromise the water-resistant seals.
- If the watch is exposed to saltwater, rinse it with fresh water and dry it thoroughly.

4.2 Cleaning Your Watch

- Wipe the watch case and crystal with a soft, damp cloth.
- For leather straps, avoid prolonged exposure to water and harsh chemicals. Clean with a dry or slightly damp cloth and allow to air dry.

4.3 Battery Replacement

The watch requires 1 Lithium Metal battery. Battery life varies depending on usage. When the digital display fades or the watch stops running, it's time for a battery replacement.

- It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

5. TROUBLESHOOTING

- **Watch not running:** Ensure the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Digital display blank or dim:** This typically indicates a low or depleted battery. Refer to section 4.3 for battery replacement.
- **Condensation inside the crystal:** This may indicate a breach in the water resistance. Avoid further exposure to water and seek professional service immediately.
- **Buttons not responding:** Ensure the watch is not in a locked mode (if applicable) or that the battery is not low.

6. SPECIFICATIONS

Feature	Detail
Model Number	T446429J
Movement Type	Quartz
Display Type	Analog-Digital
Dial Color	White
Band Material	Leather
Band Color	Brown
Case Diameter	40 Millimetres
Case Thickness	11 Millimetres
Water Resistance Depth	50 Meters
Item Weight	68 g
Battery Type	1 Lithium Metal battery (required)

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This Timex Watch (excluding battery, crystal, band, or strap) is warranted to the owner for a period of ONE YEAR from the date of purchase against defects in manufacture by Timex Corporation. Timex will not repair defects relating to servicing not performed by Timex Corporation. This limited warranty applies to US Customers.

7.2 Customer Support

For further assistance, service inquiries, or to explore other Timex products, please visit the official Timex store or contact their customer service.




Visit the **TIMEX** Store






Image 7.1: The official Timex product packaging box.

© 2023 TIMEX. All rights reserved.

Related Documents - T446429J

	<p>Timex Higher-Function Analog Watch User Guide</p> <p>Explore the features and operation of Timex Higher-Function Analog watches with this comprehensive user guide. Learn about time setting, alarms, chronograph functions, Indiglo Night-Light, water resistance, and more. Available in multiple languages.</p>
	<p>Timex LCD Analog Watch User Manual and Guide</p> <p>Official user manual and guide for the Timex LCD Analog watch (model 04K-096000-02), detailing features, operation, settings, water resistance, battery, and warranty information.</p>
	<p>TIMEX Higher-Function Analog Watch User Guide (991-096572-01)</p> <p>Comprehensive user guide for the TIMEX Higher-Function Analog watch (model 991-096572-01). Learn to operate its features including Indiglo night-light, chronograph, alarms, and water resistance. Includes instructions for analog and digital time settings, bracelet adjustment, and warranty information.</p>

	<p>Timex Analog Watch User Manual - Features, Settings, and Care</p> <p>Comprehensive user guide for Timex Analog watches, covering setup, features like INDIGLO® Night-Light, water resistance, alarms, perpetual calendar, and maintenance. Available in multiple languages.</p>
	<p>Timex Higher-Function Analog Watch User Manual</p> <p>This user manual provides comprehensive instructions for operating the Timex Higher-Function Analog watch, covering its various features including analog and digital timekeeping, chronograph functions, alarms, Indiglo® night-light, and more. It also includes important safety information regarding battery handling.</p>
	<p>Timex Watch User Manual: Features, Operation, and Care</p> <p>Comprehensive user manual for Timex watches, detailing features like analog and digital time, multiple time zones, alarms, chronographs, timers, water resistance, and bracelet adjustment.</p>