

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Leifheit](#) /
- › [Leifheit Wall-Mounted Roll Holder Rolly Mobil ComfortLine User Manual](#)

Leifheit 25795

Leifheit Wall-Mounted Roll Holder Rolly Mobil ComfortLine

Model: 25795 | Brand: Leifheit

1. INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your Leifheit Rolly Mobil ComfortLine Wall-Mounted Roll Holder. This product is designed to efficiently store and dispense kitchen paper towels, aluminum foil, and cling film, helping to organize your kitchen space.



Image 1: Front view of the Leifheit Rolly Mobil ComfortLine Wall-Mounted Roll Holder, showing its three compartments for kitchen rolls, aluminum foil, and cling film.

2. PACKAGE CONTENTS

Please verify that all components are present before proceeding with installation:

- 1 x Leifheit Rolly Mobil ComfortLine Wall-Mounted Roll Holder Unit
- Mounting hardware (screws and wall plugs)

3. SAFETY INFORMATION

Please read and understand the following safety precautions before installation and use:

- **Sharp Blades:** The dispenser contains sharp cutting blades for foil and film. Exercise caution when handling these sections to avoid injury. Keep fingers clear of the cutting edges during operation and roll replacement.
- **Secure Mounting:** Ensure the dispenser is securely mounted to a sturdy wall surface using the provided hardware. Improper installation may result in the unit falling, causing damage or injury.
- **Children and Pets:** Keep the product out of reach of small children and pets to prevent accidental injury or misuse.

4. SETUP AND INSTALLATION

The Leifheit Rolly Mobil ComfortLine is designed for wall mounting. No assembly of the unit itself is required.

4.1 Mounting the Dispenser to the Wall

1. **Select Location:** Choose a suitable, sturdy wall surface in your kitchen. Ensure there is enough clear space above and below the chosen mounting point for easy access to all rolls.
2. **Mark Drilling Points:** Hold the dispenser against the wall at the desired height and use a pencil to mark the positions for the mounting screws. Ensure the marks are level.
3. **Drill Holes:** Using an appropriate drill bit for your wall type, drill holes at the marked positions.
4. **Insert Wall Plugs:** Insert the provided wall plugs into the drilled holes.
5. **Secure Dispenser:** Align the dispenser with the wall plugs and secure it firmly to the wall using the provided screws. Ensure the dispenser is stable and does not wobble.

4.2 Loading Rolls

The dispenser accommodates three types of rolls: kitchen paper towels, aluminum foil, and cling film.

4.2.1 Loading Kitchen Paper Towel Rolls

1. The bottom holder is designed for kitchen paper towel rolls.
2. To load, gently pull one side of the paper towel holder arm outwards.
3. Slide the paper towel roll onto the holder. Ensure the roll is centered.
4. Push the holder arm back into place until it clicks securely.



Image 2: Illustration of how to remove or insert a paper towel roll by pulling the side arm.

4.2.2 Loading Aluminum Foil and Cling Film Rolls

1. The top two compartments are for aluminum foil and cling film. The top compartment is typically for cling film (often labeled 'transparent'), and the middle for aluminum foil (often labeled 'alu').
2. To access the roll compartments, gently lift the entire top section of the dispenser upwards and outwards. It is designed to detach easily for refilling.
3. Open the respective compartment cover.
4. Insert the roll, ensuring the leading edge of the foil/film is accessible and positioned correctly for cutting.
5. Close the compartment cover securely.
6. Reattach the top section of the dispenser to the main unit by aligning it and pushing it down until it locks into place.



Image 3: Demonstrates detaching the upper section of the dispenser for loading aluminum foil or cling film rolls.

5. OPERATING INSTRUCTIONS

5.1 Dispensing Kitchen Paper Towels

Simply pull the desired length of paper towel downwards and tear against the edge of the dispenser. The design allows for one-handed operation.

5.2 Dispensing Aluminum Foil and Cling Film

1. Gently pull the leading edge of the foil or film outwards to the desired length. The design ensures the film ends are always accessible for the next use.
2. Hold the film taut with one hand.
3. With the other hand, slide the integrated cutter mechanism across the entire width of the film. The razor-sharp blades are safely housed behind ergonomic slider handles.
4. Ensure a clean, precise cut by applying even pressure as you slide.



Image 4: Shows the process of cutting aluminum foil using the integrated sliding cutter.

6. MAINTENANCE

To ensure the longevity and hygiene of your roll holder:

- **Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, a mild detergent can be used.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface finish.
- **Blade Care:** The cutting blades are designed for durability. Avoid forcing thick materials through the cutters, which could dull or damage them.

7. TROUBLESHOOTING

- **Issue:** Foil or film is not cutting cleanly.
Solution: Ensure the roll is properly seated and aligned within its compartment. Pull the film taut before sliding the cutter. Check if any debris is obstructing the blade path.
- **Issue:** Rolls do not fit into the compartments.
Solution: Verify the dimensions of your rolls. The dispenser is suitable for foil/film rolls up to 30.5 cm (12 inches) in width and 5 cm (2 inches) in diameter. Paper towel rolls should be no wider than 33.5 cm (13.18 inches).
- **Issue:** Dispenser feels loose on the wall.
Solution: Carefully re-tighten the mounting screws. If the issue persists, inspect the wall plugs and wall surface for damage.

8. SPECIFICATIONS

Feature	Specification
Model Number	25795
Material	Plastic
Color	White
Mounting Type	Wall Mount
Overall Dimensions (L x D x H)	42.5 cm x 8.5 cm x 13.2 cm (16.73 in x 3.35 in x 5.20 in)
Item Weight	700 Grams (1.54 pounds)
Foil/Film Roll Capacity (Max)	30.5 cm (12 in) width, 5 cm (2 in) diameter
Paper Towel Roll Capacity (Max)	33.5 cm (13.18 in) width
Included Components	Wall-mounted roll holder, mounting hardware



Image 5: Dimensional diagram of the roll holder, indicating key measurements.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Leifheit website. For further assistance or support, please contact Leifheit customer service through their official channels.

