

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Karcher](#) /
- › [Karcher A2001 Vacuum Filter Bag Instruction Manual](#)

Karcher 6.904-051.0

Karcher A2001 Vacuum Filter Bag Instruction Manual

Model: 6.904-051.0

1. INTRODUCTION

Thank you for choosing Karcher A2001 Vacuum Filter Bags. These genuine replacement filter bags are designed to provide high-performance and reliable dust retention for your Karcher A2001 vacuum cleaner. Made from high-quality material, they ensure efficient operation and help maintain the longevity of your appliance. This manual provides essential instructions for the proper installation, use, and maintenance of your filter bags.



Image showing the Karcher A2001 Vacuum Filter Bags, typically a pack of 10, designed for efficient dust collection.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions when handling and replacing vacuum filter bags:

- **Disconnect Power:** Always unplug your Karcher vacuum cleaner from the power outlet before attempting to open the vacuum or replace the filter bag.
- **Handle with Care:** Used filter bags may contain fine dust and allergens. Handle them carefully to avoid releasing dust into the air.
- **Proper Disposal:** Dispose of used filter bags according to local waste disposal regulations.
- **Keep Out of Reach of Children:** Store new filter bags in a safe place away from children.
- **Use Genuine Parts:** Only use genuine Karcher replacement filter bags (Model 6.904-051.0) to ensure proper fit, performance, and to avoid damage to your vacuum cleaner.

3. PACKAGE CONTENTS

Your package contains:

- 10 x Karcher A2001 Vacuum Filter Bags (Model 6.904-051.0)

4. INSTALLATION (SETUP)

Follow these steps to properly install a new filter bag in your Karcher A2001 vacuum cleaner:

1. **Prepare the Vacuum:** Ensure the vacuum cleaner is unplugged from the power supply.
2. **Open the Vacuum:** Release the latches or clips on your Karcher A2001 vacuum cleaner to open the main housing or dust compartment. Refer to your vacuum cleaner's specific manual for exact opening procedures.
3. **Remove Old Bag:** Carefully remove the full or old filter bag. Seal the opening of the old bag if possible to prevent dust leakage during disposal.
4. **Insert New Bag:** Take a new Karcher A2001 filter bag from the pack. Align the cardboard collar of the new bag with the inlet nozzle inside the vacuum cleaner's dust compartment. Push the collar firmly onto the nozzle until it is securely seated.
5. **Position Bag:** Ensure the bag is fully unfolded and positioned correctly within the compartment, not obstructing any filters or closing mechanisms.
6. **Close the Vacuum:** Close the vacuum cleaner housing, ensuring all latches or clips are securely fastened.

Note: For detailed instructions on opening your specific Karcher A2001 vacuum model, please consult the vacuum cleaner's original instruction manual.

5. OPERATING INSTRUCTIONS (USAGE)

Once the filter bag is installed, your Karcher A2001 vacuum cleaner is ready for use. The filter bag collects dust and debris, protecting the motor and maintaining suction efficiency.

- **Regular Checks:** Periodically check the fill level of the filter bag. Some Karcher models may have an indicator for a full bag.
- **Timely Replacement:** Replace the filter bag when it is full or when you notice a decrease in suction power. Do not overfill the bag, as this can reduce vacuum performance and potentially damage the motor.

6. MAINTENANCE

Proper maintenance of your filter bags ensures optimal performance of your vacuum cleaner.

- **Disposal:** Once a filter bag is full, remove it carefully as described in the "Installation" section and dispose of it in a sealed waste bin. Do not attempt to empty and reuse paper filter bags, as this compromises their filtration efficiency and strength.
- **Storage:** Store unused filter bags in a dry, cool place, away from direct sunlight and moisture, to preserve their material integrity.

7. TROUBLESHOOTING

If you experience issues with your vacuum cleaner related to the filter bag, consider the following:

- **Reduced Suction Power:** If your vacuum cleaner's suction power decreases, the filter bag may be full. Replace it with a new one. Also, check if the bag is correctly installed and not obstructed.
- **Dust Leakage:** Ensure the filter bag's collar is securely attached to the inlet nozzle and that the vacuum cleaner's housing is properly closed. If dust still leaks, inspect the bag for tears or damage.
- **Unusual Odors:** A full or old filter bag can sometimes cause odors. Replacing the bag often resolves this issue.

For further troubleshooting, refer to your Karcher A2001 vacuum cleaner's main instruction manual or contact Karcher customer support.

8. SPECIFICATIONS

Brand	Karcher
Model Number	6.904-051.0
Product Dimensions	12.2 x 8.07 x 2.95 inches (Package)
Item Package Quantity	1 (containing 10 bags)
Number Of Pieces	10
Special Features	Lightweight, High-performance, High-strength, Reliable and fine dust retention

9. WARRANTY AND SUPPORT

These Karcher A2001 Vacuum Filter Bags are genuine Karcher accessories, designed to meet the high standards of Karcher products. For information regarding warranty on Karcher accessories or for technical support, please visit the official Karcher website or contact Karcher customer service directly.

Karcher Official Website: www.karcher.com

