

Taylor 3800N

Taylor Digital Kitchen Scale Model 3800N Instruction Manual

Model: 3800N | Brand: Taylor

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Taylor Digital Kitchen Scale Model 3800N. Designed for precision, this scale accurately weighs food and household items up to 8 pounds 13 ounces (4 kilograms) in 0.1 oz / 1 g increments. It features a tempered glass platform, a clear LCD readout, and a convenient tare function.



Image 1: Taylor Digital Kitchen Scale Model 3800N. This image shows the black scale with its clear tempered glass weighing platform and digital display.

GENERAL SAFETY INFORMATION

- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.
- **Button Cell Battery Warning:** This product contains a button cell or coin battery. If swallowed, a button cell battery can cause severe internal burns in as little as two hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Image 2: Illustration of various button cell batteries with a warning about ingestion hazard and keeping them away from children.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.

3. Insert one CR2450 mercury-free lithium battery, ensuring correct polarity (+/-). The battery is included with your scale.
4. Close the battery compartment cover securely.

2. Scale Placement

Place the scale on a hard, flat, and level surface to ensure accurate readings. Avoid placing it on soft or uneven surfaces like carpets.

OPERATING INSTRUCTIONS

1. Turning On/Off

- To turn on the scale, press the **ON/OFF** button. The display will show "8888" and then "0.0" or "0g" when ready.
- The scale features an automatic shut-off function to conserve battery power. It will turn off after a period of inactivity.
- To manually turn off the scale, press and hold the **ON/OFF** button for a few seconds.

2. Weighing Items

1. Turn on the scale.
2. Ensure the display reads "0.0" or "0g".
3. Place the item to be weighed directly onto the tempered glass platform.
4. Read the weight displayed on the LCD screen.

3. Tare Function (Add & Weigh)

The tare function allows you to weigh multiple ingredients consecutively in the same container, or to subtract the weight of a container to get the net weight of its contents.

1. Place an empty container on the scale. The display will show its weight.
2. Press the **TARE** button (often labeled with a "T" or "Zero" symbol). The display will reset to "0.0" or "0g".
3. Add the first ingredient to the container. The display will show the weight of only the ingredient.
4. To add another ingredient, press the **TARE** button again to reset the display to "0.0" and then add the next ingredient. Repeat as needed.

ADD & WEIGH INGREDIENTS USING THE TARE BUTTON



1. Place container on the scale.



2. Press the TARE button to "zero out" the weight of the container.



3. Add food to the container to see the weight of the food. Press TARE again when ready to weigh the next ingredient.

Image 3: Visual guide demonstrating the "Add & Weigh" or Tare function. It shows placing a container, taring the scale, and then adding ingredients.

4. Unit Conversion

To switch between measurement units (e.g., ounces, grams, pounds), press the **UNIT** button. The display will cycle through the available units.

MAINTENANCE

Cleaning

- The tempered glass platform is stain and odor resistant and easy to clean.
- Wipe the scale with a damp cloth and mild detergent.
- Do not immerse the scale in water or use abrasive cleaning agents.
- Dry thoroughly after cleaning.

Storage

Store the scale in a cool, dry place. Avoid extreme temperatures and high humidity.

TROUBLESHOOTING

- **"Err" Message:** If the display shows "Err", this typically indicates an overload or an unstable reading. Remove the item from the scale, ensure it is on a flat surface, and try again. If the error persists, the scale may be faulty or the battery may be low.
- **Inaccurate Readings:**
 - Ensure the scale is placed on a hard, level surface.
 - Check if the battery is low and replace it if necessary.
 - Avoid placing the scale near strong electromagnetic fields or vibrating surfaces.
- **Scale Does Not Turn On:**
 - Check if the battery is installed correctly with the correct polarity.
 - Replace the battery with a new CR2450 battery.

SPECIFICATIONS

Model Number	3800N
Brand	Taylor
Maximum Capacity	8 lb 13 oz (4 kg)
Readout Accuracy	0.1 oz / 1 g
Display Type	LCD
Special Features	Tare Function, Auto Shut-Off
Platform Material	Tempered Glass
Power Source	1 x CR2450 Lithium Battery (included)
Product Dimensions	7 x 5.87 x 1.63 inches
Item Weight	1.17 pounds

WARRANTY AND SUPPORT

Your Taylor Digital Kitchen Scale Model 3800N is designed for durability and accuracy. Please note that the warranty does not cover misuse of the product.

For further assistance, product information, or warranty inquiries, please visit the official Taylor website or contact their customer support. You can find more information at the [Taylor Store on Amazon](#).