

[Manuals.plus](#) /

› [Wilton](#) /

› Wilton Holly Hobbie Girl Doll Cake Pan Instruction Manual

Wilton 070896502193

Wilton Holly Hobbie Girl Doll Cake Pan Instruction Manual

Model: 070896502193

INTRODUCTION

This manual provides comprehensive instructions for using and maintaining your Wilton Holly Hobbie Girl Doll Cake Pan. Designed for creating a detailed Holly Hobbie themed cake, this pan is suitable for various occasions. Please read all instructions carefully before baking and decorating to ensure the best results.

SETUP AND PREPARATION

Before first use, and after each subsequent use, thoroughly wash the cake pan in warm, soapy water. Rinse completely and dry immediately to prevent water spots and maintain the pan's finish. This pan is made of aluminum and requires proper preparation to ensure the cake releases easily.

Before You Begin:

- Ensure the pan is clean and dry.
- Grease the pan thoroughly with a solid vegetable shortening, ensuring all crevices are coated.
- Dust the greased pan with flour, tapping out any excess. Alternatively, use a baking spray with flour.
- Prepare one standard cake mix according to package directions. This pan is designed to hold the batter from one cake mix.



Wilton PARTY PAN

BAKE AND DECORATE A Holly Hobbie™ Cake

Pan takes just one cake mix.

Easy-to-follow cake decorating instructions under this label.

Full size color illustration of Holly Hobbie cake on reverse side of label.

©1975 Wilton Enterprises, Inc.

Wilton Enterprises, Inc.
Chicago, IL 60649



Complete Instructions
for Baking & Decorating

Holly Hobbie™ Cake

PLEASE READ THROUGH INSTRUCTIONS BEFORE YOU DECORATE
BEFORE YOU BEGIN, you will need:

Image: The Wilton Holly Hobbie Girl Doll Cake Pan, showcasing a fully decorated cake within the pan, along with the original instruction label. The label indicates that the pan uses one cake mix and provides decorating instructions.

OPERATING INSTRUCTIONS: BAKING AND DECORATING

Baking the Cake:

1. Preheat your oven to the temperature specified by your cake mix instructions.
2. Pour the prepared cake batter into the greased and floured Holly Hobbie cake pan. Distribute the batter evenly.
3. Bake according to your cake mix instructions, typically for 30-40 minutes, or until a wooden pick inserted into the center comes out clean. Baking times may vary based on oven calibration and cake mix type.
4. Once baked, remove the pan from the oven and let it cool on a wire rack for 10-15 minutes.
5. Carefully invert the pan onto the wire rack to release the cake. Allow the cake to cool completely before decorating.

Decorating the Cake:

The original Wilton Holly Hobbie cake pan included detailed decorating instructions and a full-size color illustration on the reverse side of its label. While the physical label may no longer be present, the general approach to decorating character cakes applies:

- **Prepare Icing:** Use Wilton buttercream icing or a similar firm icing. Divide and color the icing according to the design you wish to create for Holly Hobbie's dress, hair, and facial features.
- **Outline and Fill:** Using a small round decorating tip (e.g., Wilton #3 or #4), outline the main features of the Holly Hobbie design on the cooled cake. Then, use a star tip (e.g., Wilton #16 or #18) or a spatula to fill in larger areas with colored icing.
- **Details:** Add finer details such as eyes, mouth, flowers, and patterns on the dress using smaller tips or by piping directly. Refer to images of the classic Holly Hobbie design for inspiration.
- **Piping Techniques:** Common techniques for character cakes include star fill-in, shell borders, and various line work. Practice on parchment paper before applying to the cake.

MAINTENANCE AND CARE

Proper care will extend the life of your Wilton Holly Hobbie Girl Doll Cake Pan.

- **Cleaning:** Hand wash the pan in warm, soapy water immediately after use. Use a soft sponge or cloth. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can scratch the aluminum surface.
- **Drying:** Dry the pan thoroughly with a soft towel immediately after washing. Do not allow it to air dry, as this can lead to water spots or mineral deposits.
- **Dishwasher Safety:** This pan is **NOT dishwasher safe**. Dishwasher detergents can cause discoloration and damage to the aluminum finish.
- **Storage:** Store the pan in a dry place. Stacking pans without protection can lead to scratches; consider placing paper towels or soft cloths between stacked pans.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cake sticks to the pan.	Insufficient greasing and flouring; pan not cooled enough before inversion.	Ensure thorough greasing and flouring of all crevices. Allow cake to cool for 10-15 minutes in the pan before inverting onto a wire rack.
Cake is unevenly baked.	Oven temperature inconsistencies; uneven batter distribution.	Verify oven temperature with an oven thermometer. Ensure batter is spread evenly in the pan.
Pan discolors after washing.	Washed in dishwasher; harsh detergents used; air drying.	Always hand wash and dry immediately. Avoid dishwashers and abrasive cleaners. Discoloration is cosmetic and does not affect performance.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Wilton
Model Number	070896502193
Material	Aluminum
Approximate Dimensions (L x W x H)	42.93 cm x 10.16 cm x 5.84 cm (16.9 in x 4.0 in x 2.3 in)
Item Weight	0.28 g (0.01 Ounces)
Oven Safe	Yes
Dishwasher Safe	No (Hand Wash Recommended)
Capacity	Designed for one standard cake mix

WARRANTY AND SUPPORT

For specific warranty information regarding your Wilton Holly Hobbie Girl Doll Cake Pan, please refer to the documentation included with your purchase or visit the official Wilton website. Wilton is committed to providing quality bakeware products.

For additional support, decorating tips, or to explore other Wilton products, please visit the [Wilton Store on Amazon](#) or the official Wilton website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000BNFHLS>

More documents and user manuals: <https://manuals.plus/>