

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hunter](#) /

› [Hunter 27183 Wall Control with Preset Instruction Manual](#)

Hunter 27183

Hunter 27183 Wall Control with Preset Instruction Manual

Model: 27183

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Hunter 27183 Traditional Wall Control with Preset. Please read these instructions carefully before installation and use to ensure proper function and safety.

The Hunter 27183 wall control is designed to provide four fan speeds and full-range light dimming for your ceiling fan. It includes a preset feature to control fan and light operation at desired settings.

SAFETY INFORMATION

- Always disconnect power at the circuit breaker or fuse box before beginning installation or performing any maintenance.
- Installation must be performed by a qualified electrician or in accordance with local electrical codes.
- Ensure all wiring connections are secure and properly insulated.
- Do not exceed the specified electrical ratings: Fan 1.6 Amps, Light 300 Watts.
- This control is designed for indoor use only.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Hunter 27183 Wall Control Unit
- Installation Hardware (screws, wire nuts)
- Instruction Manual


Note: A rocker switchplate is not included and must be purchased separately.

SETUP AND INSTALLATION

The Hunter 27183 wall control is designed for installation in a standard three-wire, single box wall switch. Professional installation is recommended.

- Turn off Power:** Before starting, ensure power is disconnected at the circuit breaker or fuse box to avoid electrical shock.
- Remove Existing Switch:** Carefully remove the existing wall switch from the wall box. Disconnect the wires, noting their connections.
- Wire Connections:** Connect the wires from the wall box to the Hunter 27183 wall control according to the wiring diagram provided with the unit. Typically, this involves connecting the Line (hot) wire, Load (fan/light) wires, and Ground wire. Ensure all connections are secure using wire nuts.
- Mount Control:** Gently push the wired control into the wall box. Secure the control to the wall box using the provided screws.
- Install Switchplate:** Attach a compatible rocker switchplate (not included) over the control.
- Restore Power:** Turn power back on at the circuit breaker or fuse box.

SUMMER

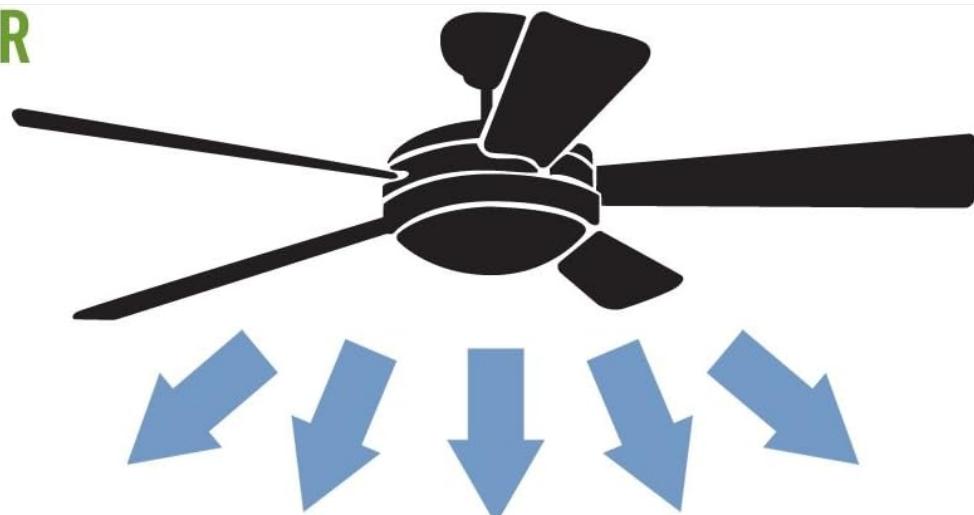

BLADE ROTATION
COUNTER-CLOCKWISE

82° THERMOSTAT
SETTING -
FEELS LIKE 76°

COMFORT WITH SAVINGS


The wind chill created by ceiling fans presents an opportunity for you to raise your thermostat setting and reduce your energy use without losing comfort.

Studies show that most people can adjust their thermostat as high as 82 degrees Fahrenheit and feel just as cool as if the temperature was set at 76 with no fan running.

But remember, ceiling fans cool people, not rooms. So turn them off to save energy when no one is in the room.

Figure 1: Front view of the Hunter 27183 Wall Control, showing the fan speed and light dimmer sliders.

WINTER

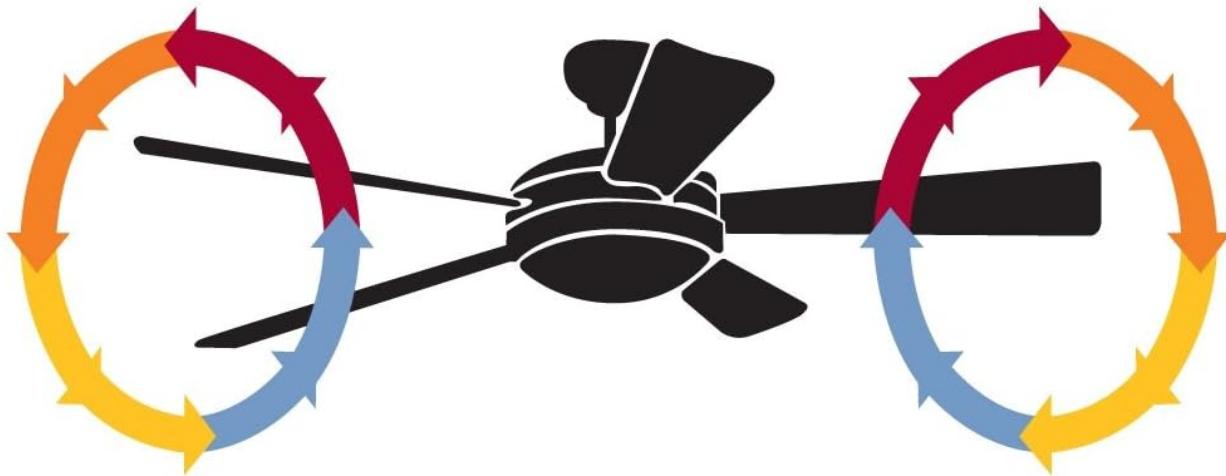

 BLADE ROTATION
CLOCKWISE

 **15%**

POTENTIAL SAVINGS
FOR LOWERING YOUR
THERMOSTAT 4 DEGREES

A DEGREE OF SAVINGS

Use a ceiling fan to save energy on heating bills by setting it at a low speed in a clockwise rotation. This mixes the warm air trapped at the ceiling with cooler air at the bottom of the room – warming up the living space.

Figure 2: Side view of the Hunter 27183 Wall Control, illustrating the compact design for in-wall installation.

OPERATING INSTRUCTIONS

The Hunter 27183 wall control features separate sliders for fan speed and light dimming, along with a preset function.

- **Fan Speed Control:** Use the fan slider to select one of the four available fan speeds. Move the slider up for higher speeds and down for lower speeds.
- **Light Dimming:** Use the light slider to adjust the brightness of your ceiling fan light. Move the slider up to increase brightness and down to dim the light.
- **Preset Feature:** The control includes a preset function. Once you have set your desired fan speed and light level, you can use the main rocker switch (if present on your switchplate) to turn the fan and light on/off at these preset settings without readjusting the sliders.

GENERAL CEILING FAN OPERATION

Understanding how your ceiling fan operates in different seasons can help optimize comfort and energy savings when used with your Hunter wall control.

Figure 3: In summer, set your ceiling fan blades to rotate counter-clockwise. This creates a downward airflow, producing a wind-chill effect that can make a room feel cooler, allowing you to set your thermostat higher.



Figure 4: In winter, set your ceiling fan blades to rotate clockwise at a low speed. This draws warm air trapped near the ceiling down into the living space, helping to warm the room and potentially lowering heating costs.

MAINTENANCE

The Hunter 27183 wall control requires minimal maintenance.

- Cleaning:** To clean the surface of the control, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- Inspection:** Periodically check the control for any signs of damage or loose connections. If any issues are found, disconnect power and consult a qualified electrician.

TROUBLESHOOTING

If you experience issues with your Hunter 27183 wall control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan or Light does not turn on.	No power to the control; loose wiring; faulty fan/light.	Check circuit breaker. Ensure all wiring connections are secure. Test fan/light directly if possible.
Light does not dim.	Incompatible light bulbs; faulty dimmer.	Ensure light bulbs are dimmable. Replace faulty dimmer if necessary.
Fan speeds are inconsistent.	Loose wiring; incompatible fan motor.	Check wiring connections. Verify fan compatibility with the control.

If troubleshooting steps do not resolve the issue, contact Hunter customer support or a qualified electrician.

SPECIFICATIONS

Feature	Detail
Model Number	27183
Brand	Hunter
Dimensions	4.123" x 2.876" x 1.75" (Product); 38.1 x 45.72 x 19.56 cm (Package)
Fan Amperage	1.6 Amps
Light Wattage	300 Watts
Power Source	AC
Voltage	120 Volts
Mounting Type	Wall Mount

Feature	Detail
Switch Style	Slide switch
Special Features	Preset Dual Slide Fan/Light Control
Material	Metal, Plastic
Item Weight	136 g (0.3 Pounds)
UPC	049694271839
Manufacturer	Hunter Fan Company

WARRANTY INFORMATION

The Hunter 27183 Wall Control is covered by a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For full warranty terms and conditions, please refer to the official Hunter website or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with installation, or need to make a warranty claim, please contact Hunter customer support.

- **Website:** Visit the official Hunter Fan Company website for FAQs, support resources, and contact information.
- **Phone:** Refer to the packaging or Hunter's website for customer service phone numbers.