

[Manuals.plus](#) /

› [Mi T M](#) /

› Mi T M AW-0018-0148 Detergent Nozzle User Manual

Mi T M AW-0018-0148

Mi T M AW-0018-0148 Detergent Nozzle User Manual

Model: AW-0018-0148 | Brand: Mi T M

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Mi T M AW-0018-0148 Detergent Nozzle. Designed for durability and long-lasting use, this nozzle is an essential accessory for compatible Mi T M pressure washers, enabling efficient application of detergents.

The AW-0018-0148 Detergent Nozzle is constructed from high-quality materials and is specifically designed to fit a variety of Mi T M pressure washer models. It is available in black.

PRODUCT OVERVIEW



Figure 1: Front view of the Mi T M AW-0018-0148 Detergent Nozzle, showing its brass quick-connect fitting and black plastic nozzle head.

The Mi T M AW-0018-0148 Detergent Nozzle is a specialized accessory for pressure washers. It features a quick-connect fitting for easy attachment and detachment from compatible wands. The nozzle is designed to reduce water pressure, allowing the pressure washer to draw and apply detergent effectively.

SETUP AND INSTALLATION

1. **Ensure Safety:** Before installation, ensure your pressure washer is turned off and disconnected from its power source and water supply. Release any residual pressure in the system.
2. **Identify Connection Point:** Locate the quick-connect coupler on your pressure washer wand. This is typically at the end of the wand where other spray nozzles are attached.
3. **Attach Nozzle:** Pull back the collar on the quick-connect coupler. Insert the brass end of the AW-0018-0148 Detergent Nozzle into the coupler. Release the collar to secure the nozzle in place. Tug gently on the nozzle to ensure it is firmly seated and will not detach during operation.
4. **Connect Detergent Tank:** If your pressure washer has a dedicated detergent tank or siphoning tube, ensure it is filled with an appropriate pressure washer detergent and properly connected according to your pressure washer's manual.

This nozzle is compatible with standard quick-disconnect fittings found on most pressure washer manufacturers' products.

OPERATING INSTRUCTIONS

The AW-0018-0148 Detergent Nozzle is specifically designed for low-pressure detergent application. When this nozzle is attached, the pressure washer operates at a reduced pressure, which is necessary for drawing detergent from the tank or siphoning tube and applying it evenly to the surface.

1. **Start Pressure Washer:** Once the nozzle is securely attached and the detergent system is ready, turn on your water supply and start the pressure washer according to its operating instructions.
2. **Apply Detergent:** Aim the nozzle at the surface you wish to clean. The low pressure will allow the detergent to be drawn through the system and sprayed onto the surface. Apply detergent evenly, working from the bottom up on vertical surfaces to prevent streaking.
3. **Rinse:** After applying detergent and allowing it to dwell for the recommended time (refer to your detergent's instructions), turn off the pressure washer, remove the detergent nozzle, and replace it with a high-pressure rinse nozzle (e.g., 0°, 15°, 25°, or 40° spray tip) to rinse the surface thoroughly.

Do not attempt to use this nozzle for high-pressure cleaning tasks, as it is not designed for that purpose and will not provide adequate cleaning power for rinsing.

MAINTENANCE

- **Cleaning:** After each use, especially when using corrosive detergents, rinse the nozzle thoroughly with clean water to prevent residue buildup. You can run clean water through the pressure washer with the detergent nozzle attached for a few minutes.
- **Inspection:** Periodically inspect the nozzle for any signs of wear, cracks, or blockages. Ensure the quick-connect fitting is clean and free of debris.
- **Storage:** Store the nozzle in a clean, dry place away from extreme temperatures and direct sunlight. Protecting it from physical damage will extend its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No detergent flow	Detergent tank empty or siphoning tube blocked/disconnected. Nozzle clogged.	Refill detergent tank, check siphoning tube connection. Clean nozzle orifice.
Weak detergent spray	Low water pressure from source. Nozzle partially clogged.	Ensure adequate water supply. Clean nozzle orifice.
Nozzle leaks	Improperly seated in quick-connect. Damaged O-ring or nozzle.	Ensure nozzle is fully seated. Inspect and replace O-rings if damaged. Replace nozzle if cracked.

If problems persist after attempting these solutions, consult a qualified service technician or contact Mi T M customer support.

SPECIFICATIONS

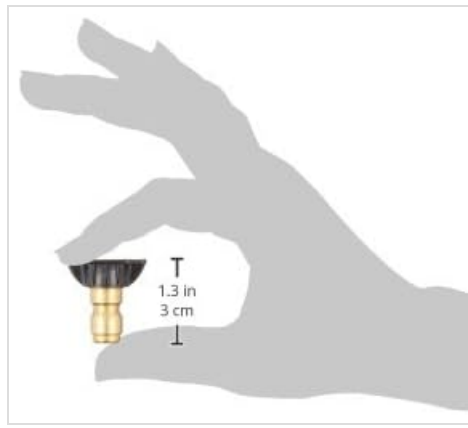


Figure 2: Mi T M AW-0018-0148 Detergent Nozzle shown with a hand for size comparison, indicating a height of approximately 1.3 inches (3 cm).

- **Model Number:** AW-0018-0148
- **Product Dimensions:** 5.88 x 3.88 x 1.5 inches (14.94 x 9.86 x 3.81 cm)
- **Item Weight:** 0.16 ounces (4.54 grams)
- **Material:** Durable high-quality materials (brass, plastic)
- **Color:** Black
- **Compatibility:** Designed for various Mi T M pressure washer models with standard quick-connect fittings.

WARRANTY AND SUPPORT

Specific warranty information for the Mi T M AW-0018-0148 Detergent Nozzle is not provided in this document. For details regarding warranty coverage, terms, and conditions, please refer to the documentation included with your original pressure washer purchase or contact Mi T M directly.

For technical support, replacement parts, or further assistance, please contact Mi T M customer service through their official website or the contact information provided with your product. When contacting support, please have your product model number (AW-0018-0148) and any relevant purchase details available.