

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Hunter](#) /
- › [Hunter 27182 Fan-Light Dual Slide Wall Control User Manual](#)

## Hunter 27182

# Hunter 27182 Fan-Light Dual Slide Wall Control

User Instruction Manual

## 1. PRODUCT OVERVIEW

The Hunter 27182 Fan-Light Dual Slide Wall Control is designed to provide convenient and precise control over your ceiling fan and its integrated lighting. This unit features two independent slide controls: one for adjusting fan speed across three settings and another for full-range light dimming. It is engineered for installation in a standard 3-wire single-box wall switch configuration.

This control is rated for fans up to 1.6 Amps and fan lighting up to 300 watts. The preset feature allows you to maintain your preferred fan and light settings. Please note that a rocker switch plate is not included with this unit.



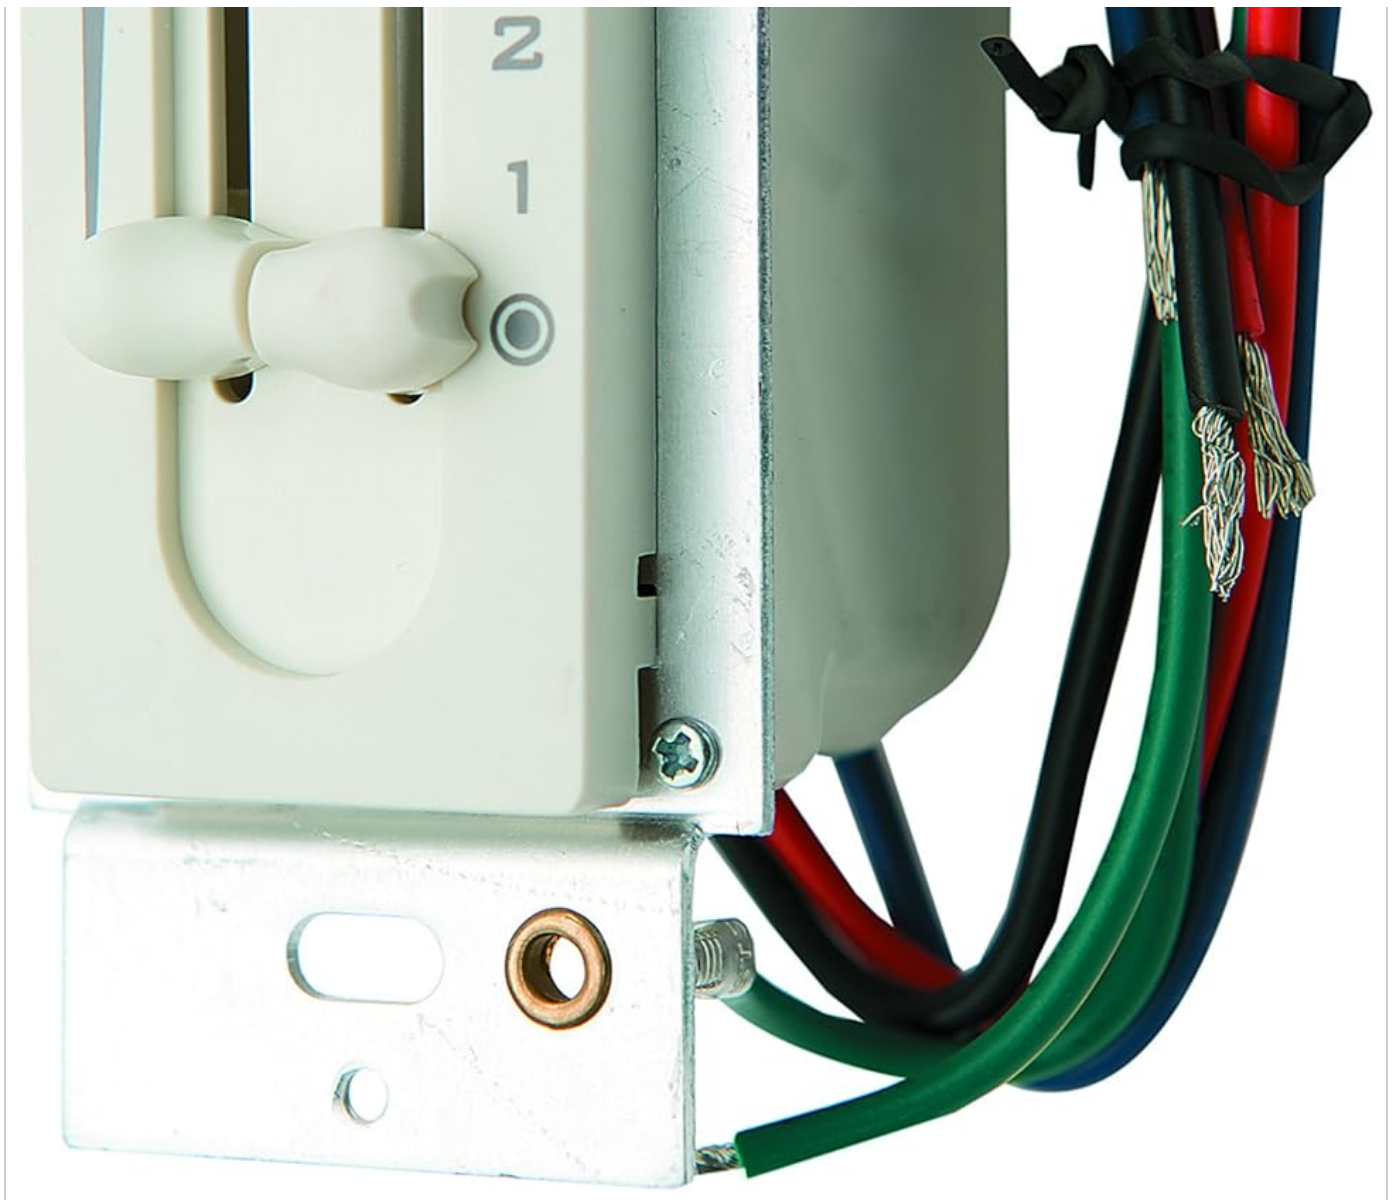


Figure 1: Hunter 27182 Fan-Light Dual Slide Wall Control, showing the two slide controls and wiring connections.

## 2. SETUP AND INSTALLATION

**WARNING:** Before beginning any electrical installation, ensure the power supply to the circuit is turned OFF at the circuit breaker or fuse box. Failure to do so may result in serious injury or death.

### 2.1 Wiring Instructions

This control is designed for a standard 3-wire single-box wall switch installation. Follow the wiring diagram below and ensure all connections are secure.

- **Wire 1 (Black):** Connects to the Hot In (incoming power) wire.
- **Wire 2 (Blue):** Connects to the Fan Out (wire leading to the fan motor) wire.
- **Wire 3 (Red):** Connects to the Light Out (wire leading to the fan light) wire.
- **Ground Wire (Green):** Connects to the bare copper ground wire in the electrical box.

After wiring, carefully push the control unit into the wall box and secure it with the provided screws. Install a compatible wall plate (not included) over the control.

## 3. OPERATING INSTRUCTIONS

The Hunter 27182 wall control features two distinct slide levers for independent operation of your fan and light.



Figure 2: Close-up view of the control's operational sliders.

### 3.1 Fan Speed Control

Use the right-hand slide lever, marked with a fan icon and numbers 1, 2, 3 (or HI, MD, LO depending on model variant), to adjust the fan speed:

- Slide the lever up for higher fan speeds.
- Slide the lever down for lower fan speeds.
- Move the lever to the lowest position (marked with a circle) to turn the fan OFF.

### 3.2 Light Dimming Control

Use the left-hand slide lever, marked with a light bulb icon, to control the light intensity:

- Slide the lever up to increase light brightness.
- Slide the lever down to decrease light brightness.
- Move the lever to the lowest position to turn the light OFF.

The preset feature allows the control to remember your last light dimming setting when turned off and on.

## 4. MAINTENANCE

---

To ensure optimal performance and longevity of your Hunter Fan-Light Dual Slide Wall Control, follow these simple maintenance guidelines:

- **Cleaning:** Periodically wipe the surface of the control with a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying thoroughly. Avoid abrasive cleaners or solvents, as these can damage the finish.
- **Inspection:** From time to time, visually inspect the control for any signs of damage or loose connections. If any issues are observed, consult a qualified electrician.
- **Power Off for Cleaning:** For safety, always turn off the power to the control at the circuit breaker before cleaning.

## 5. TROUBLESHOOTING

---

If you experience issues with your Hunter Fan-Light Dual Slide Wall Control, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Fan or Light Not Responding	No power to the control; Loose wiring connection; Faulty fan/light bulb.	Check circuit breaker. Ensure all wiring connections are secure. Replace fan/light bulb.
Light Does Not Dim Properly	Incompatible light bulbs (e.g., non-dimmable LEDs); Faulty dimmer.	Ensure dimmable bulbs are used. If issue persists, control may need replacement.
Fan Speeds Are Incorrect or Inconsistent	Incorrect wiring for fan speed; Fan motor issue.	Verify fan wiring connections. Consult fan manual or a qualified electrician if motor issues are suspected.

If the problem persists after attempting these solutions, please contact Hunter Customer Support or a qualified electrician.


## 6. SPECIFICATIONS


- Model:** 27182
- Brand:** Hunter
- Fan Rating:** 1.6 Amps
- Light Rating:** 300 Watts
- Voltage:** 120 Volts
- Dimensions:** 2 x 6.25 x 8 inches (Product Dimensions)
- Weight:** 4.8 ounces (approx. 0.3 lbs)
- Mounting Type:** Wall Mount
- Switch Style:** Rocker Switch, Slide Switch
- Color:** Off White

## 7. WARRANTY AND SUPPORT

This Hunter 27182 Fan-Light Dual Slide Wall Control comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For warranty claims, technical support, or additional information, please visit the official Hunter Fan Company website or refer to the contact information provided with your product packaging. You can also find the official User Manual (PDF)[here](#).


### Related Documents - 27182

	<a href="#">Hunter Quiet Fan Control with Light Dimmer Model 29182 Installation and Operation Guide</a> Installation and operation instructions for the Hunter Quiet Fan Control with Light Dimmer, Model 29182. This guide covers wiring, setup, and usage for controlling ceiling fans and incandescent light fixtures.
---	--

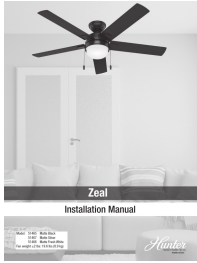


#### [Hunter Zeal Ceiling Fan Installation Manual](#)

 Comprehensive installation guide for the Hunter Zeal ceiling fan, covering setup, wiring, troubleshooting, and warranty information for models 51465, 51466, and 51467.

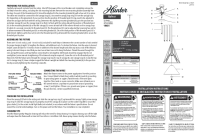


#### [Hunter Rafner 19451 Pendant Light Installation Guide and Manual](#)

 Step-by-step installation instructions for the Hunter Rafner 19451 pendant light. This guide covers preparation, assembly, wiring, finishing, and cleaning for models 19449, 19451, 19453, and 19455.

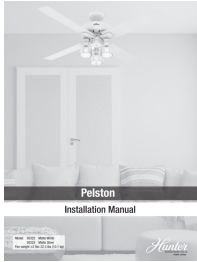


#### [Hunter Pelston Ceiling Fan Installation Manual](#)

 Comprehensive installation manual for the Hunter Pelston ceiling fan (Models 50322, 50323), covering unboxing, tools required, installation steps for ceiling bracket, downrod, fan assembly, wiring, light kit, pull chains, and reversing the fan. Includes troubleshooting tips and limited lifetime warranty information.

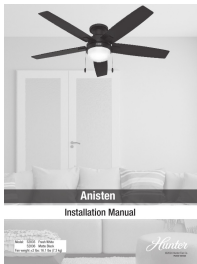

#### [Hunter Anisten Ceiling Fan Installation Manual](#)

 Comprehensive installation manual for the Hunter Anisten ceiling fan (Models 52835, 52836), including safety warnings, parts list, step-by-step installation instructions, wiring diagrams, troubleshooting tips, and warranty information.

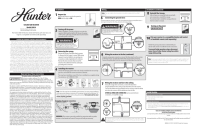

#### [Hunter 99814 Universal Ceiling Fan Receiver Installation Guide](#)

Comprehensive installation guide for the Hunter 99814 Universal Ceiling Fan Receiver, detailing wiring, safety precautions, warranty information, and troubleshooting steps.