

JWIN JX-CD335SIL

JWIN JX-CD335SIL Portable CD Player Instruction Manual

Model: JX-CD335SIL

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your JWIN JX-CD335SIL Portable CD Player. Please read it thoroughly before use and retain it for future reference. This device is designed for playing standard audio CDs and CD-R discs.

2. SAFETY INFORMATION

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not disassemble or attempt to repair the unit yourself. Refer all servicing to qualified personnel.
- Avoid listening at excessively high volume levels for prolonged periods to prevent hearing damage.
- Ensure batteries are inserted with correct polarity. Remove batteries if the unit will not be used for an extended period.
- Use only the specified power adapter (if applicable) to avoid damage.

3. PACKAGE CONTENTS

Please check that all items are present:

- JWIN JX-CD335SIL Portable CD Player
- Stereo Headphones
- User Instruction Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your portable CD player.



This image displays the JWIN JX-CD335SIL Portable CD Player in silver, accompanied by a pair of dark green stereo headphones. The CD player features a circular design with control buttons on the front edge and a digital display showing track number and time.

The headphones are over-ear style with the JWIN logo on the earcups.

Controls and Ports:

- **PLAY/PAUSE** (▶/||): Starts or pauses CD playback.
- **STOP** (■): Stops CD playback.
- **SKIP/SEARCH** (◀◀/▶▶): Skips to the previous/next track. Hold to search backward/forward within a track.
- **MODE**: Cycles through various play modes (Repeat 1, Repeat All, Intro, Random).
- **PROG (Program)**: Enters program mode to create a custom playlist.
- **VOL (+/-)**: Adjusts the volume level.
- **PHONES Jack**: 3.5mm stereo output for headphones.

- **DC IN 4.5V Jack:** For connecting an optional AC power adapter.
- **LCD Display:** Shows track number, time, and play mode indicators.
- **CD Compartment:** Where the audio CD is inserted.

5. SETUP

5.1 Powering the Unit

Battery Installation:

1. Open the battery compartment cover on the bottom of the unit.
2. Insert two (2) 'AA' size batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

AC Adapter (Optional):

If using an optional AC power adapter (not included), plug the adapter into the DC IN 4.5V jack on the unit and then into a standard wall outlet. Batteries will be bypassed when the AC adapter is connected.

5.2 Loading a CD

1. Gently press the OPEN button or slide the latch to open the CD compartment lid.
2. Place an audio CD or CD-R disc onto the center spindle with the label side facing up.
3. Gently press the CD down until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

5.3 Connecting Headphones

Insert the stereo headphone plug into the PHONES jack on the side of the unit.

6. OPERATING INSTRUCTIONS

6.1 Basic Playback

1. After loading a CD and connecting headphones, press the PLAY/PAUSE (▶) button to begin playback. The track number and elapsed time will appear on the LCD display.
2. To pause playback, press the PLAY/PAUSE (||) button. Press it again to resume.
3. To stop playback, press the STOP (■) button.
4. Adjust the volume using the VOL (+/-) buttons.
5. To skip to the next track, press the SKIP/SEARCH (▶▶) button.
6. To go back to the beginning of the current track, press the SKIP/SEARCH (◀◀) button once. Press it twice to go to the previous track.
7. To search rapidly within a track, hold down the SKIP/SEARCH (◀◀ or ▶▶) button.

6.2 Programmable Memory (20 Tracks)

You can program up to 20 tracks to play in a specific order.

1. In STOP mode, press the PROG button. The program indicator will flash on the display.

2. Use the SKIP/SEARCH (◀◀/▶▶) buttons to select the desired track number.
3. Press the PROG button again to confirm the selection and add it to the program list.
4. Repeat steps 2 and 3 to add up to 20 tracks.
5. After programming all desired tracks, press the PLAY/PAUSE (▶) button to start playback of the programmed sequence.
6. To clear the program, press the STOP (■) button twice.

6.3 Play Modes

Press the MODE button repeatedly to cycle through the following playback options:

- **REPEAT 1:** Repeats the current track continuously.
- **REPEAT ALL:** Repeats all tracks on the disc continuously.
- **INTRO:** Plays the first 10 seconds of each track on the disc.
- **RANDOM:** Plays tracks in a random order.

6.4 Auto Power Off

The unit features an auto power off function to conserve battery life. If the unit is left in STOP mode for approximately 30 seconds, it will automatically power off.

7. MAINTENANCE

7.1 Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.

7.2 Cleaning the CD Lens

If playback issues occur due to a dirty lens, use a commercially available CD lens cleaner disc. Do not touch the lens directly.

7.3 Battery Care

Remove batteries if the unit will not be used for an extended period to prevent leakage and damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted; AC adapter not connected or faulty.	Replace batteries, check polarity; ensure AC adapter is securely connected.
No sound	Headphones not connected; volume too low; headphones faulty.	Connect headphones firmly; increase volume; try different headphones.
CD not playing / Disc error	CD inserted incorrectly; CD is dirty or scratched; lens is dirty.	Reinsert CD with label side up; clean CD with a soft cloth; use a CD lens cleaner.

Problem	Possible Cause	Solution
Skipping during playback	Unit is subject to excessive vibration; CD is dirty or scratched.	Place unit on a stable surface; clean or replace CD.

9. SPECIFICATIONS

- **Model:** JX-CD335SIL
- **Supported Disc Formats:** CD, CD-R (Note: While some generic specifications may list MP3, this model primarily supports standard audio CD and CD-R formats as per its core features.)
- **Programmable Memory:** 20 tracks
- **Digital-to-Analog Converter (DAC):** 1-bit
- **Play Modes:** Repeat 1, Repeat All, Intro, Random Play
- **Auto Power Off:** Yes
- **Power Source:** 2 x 'AA' batteries (not included) or optional 4.5V DC AC adapter (not included)
- **Connectivity:** 3.5mm Headphone Jack (Auxiliary)
- **Color:** Silver
- **Dimensions (Approx.):** 6.8 x 5.9 x 2.5 inches (17.3 x 15.0 x 6.4 cm)
- **Weight (Approx.):** 10.4 ounces (295 grams) without batteries
- **Manufacturer:** JWIN

10. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase. For product support or inquiries, please visit the official JWIN website or contact their customer service department through the contact details provided with your product or on their website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question