# Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Creative /
- Creative SBS 380 2.1 Speakers User Manual

#### **Creative SBS 380**

# **Creative SBS 380 2.1 Speakers User Manual**

Model: SBS 380 (51MF0290AA000)

## Introduction

The Creative SBS 380 is a 2.1 speaker system designed to provide enhanced audio for various devices, including personal computers, notebooks, MP3 players, and CD players. This system includes two satellite speakers and a dedicated subwoofer, offering a balanced audio experience with clear highs and deep bass. This manual provides essential information for the proper setup, operation, and maintenance of your Creative SBS 380 speaker system.

# PACKAGE CONTENTS

Please verify that all components are present in your package:

- · Creative SBS 380 Subwoofer
- Two (2) Creative SBS 380 Satellite Speakers
- Audio Input Cable (3.5mm stereo jack)
- Power Adapter



An image showing the Creative SBS 380 2.1 speaker system, consisting of two compact satellite speakers and a larger, cube-shaped subwoofer. The satellite speakers are black with silver grilles, and the subwoofer is black with a sidemounted speaker and a front-facing port.

# SETUP

- Placement: Position the subwoofer on the floor or a sturdy surface, ensuring adequate ventilation.
   Place the two satellite speakers on either side of your monitor or listening area, facing towards you for optimal stereo separation.
- 2. **Connect Satellite Speakers:** Connect the cables from the two satellite speakers to the corresponding output jacks on the back of the subwoofer. Ensure a secure connection.
- 3. **Connect to Audio Source:** Connect one end of the provided 3.5mm audio input cable to the "Audio In" jack on the subwoofer. Connect the other end to the headphone jack or audio output port of your computer, MP3 player, or other audio device.
- 4. **Power Connection:** Connect the power adapter to the power input on the subwoofer, then plug the adapter into a standard electrical outlet.

# **OPERATING INSTRUCTIONS**

- Power On/Off: Locate the power button on the front panel of the right satellite speaker. Press this
  button to turn the speakers on or off. An LED indicator will illuminate when the speakers are powered
  on.
- 2. **Volume Control:** Use the master volume control knob, also located on the front panel of the right satellite speaker, to adjust the overall sound level. Turn clockwise to increase volume and counterclockwise to decrease.
- 3. **Headphone Jack:** For private listening, plug your headphones into the headphone jack on the front panel of the right satellite speaker. When headphones are connected, audio output from the speakers will be muted.
- 4. **Audio Playback:** Ensure your audio source (computer, MP3 player) is playing audio and its volume is set to an appropriate level.

# MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the surfaces of the speakers and subwoofer. Avoid using liquid cleaners or abrasive materials, as these can damage the finish or internal components.
- Ventilation: Ensure the subwoofer's ventilation ports are not obstructed to prevent overheating.
- Cable Management: Keep cables organized and free from kinks or excessive tension to prevent damage.
- **Storage:** If storing the speakers for an extended period, disconnect them from power and store them in a cool, dry place.

## **T**ROUBLESHOOTING

Problem Solution	Problem
------------------	---------

Problem	Solution
No sound from speakers.	Ensure the speakers are powered on (LED indicator is lit).  Check all cable connections, especially the audio input cable and power adapter.  Verify the volume control on the speakers is turned up.  Confirm the audio source (computer, MP3 player) is playing and its volume is not muted or too low.  Ensure no headphones are plugged into the headphone jack.
Distorted or unclear sound.	Reduce the volume on both the speakers and the audio source.  Check for loose or damaged cable connections.  Ensure the audio source is not outputting a distorted signal.
Subwoofer not producing bass.	Verify all connections to the subwoofer are secure.  Ensure the audio source is providing a full-range audio signal.

## **S**PECIFICATIONS

• Speaker Type: 2.1 Multimedia PC Speakers

• Subwoofer Diameter: 4 Inches

• Connectivity Technology: Wired (Auxiliary)

Audio Output Mode: Stereo
 Power Source: Corded Electric

• Product Dimensions: Approximately 12"D x 9.6"W x 9.6"H

Item Weight: Approximately 7 PoundsModel Number: 51MF0290AA000

• UPC: 054651087507

# WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Creative website. Keep your purchase receipt as proof of purchase for warranty claims.

Creative Support: www.creative.com/support

#### **Related Documents - SBS 380**



## Creative Pebble X Plus Speakers: Quick Start Guide & Safety Information

Get started with your Creative Pebble X Plus speakers. This guide provides quick setup instructions, connectivity options, technical specifications, and essential safety and regulatory information for your audio device.

