

[Manuals.plus](#) /

> [Standard Motor Products](#) /

> Standard Motor Products LX333 Ignition Pickup User Manual

Standard Motor Products LX333

Standard Motor Products LX333 Ignition Pickup User Manual

Model: LX333

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Standard Motor Products LX333 Ignition Pickup. Please read this manual thoroughly before installation to ensure safe and effective use. This component is designed as a direct replacement part for specific automotive ignition systems.



Figure 1: The Standard Motor Products LX333 Ignition Pickup, showing its main body, wiring, and connector.

SAFETY INFORMATION

Always observe standard automotive safety precautions when working on vehicle electrical systems. Disconnect the vehicle's battery before beginning any installation or maintenance. Wear appropriate personal protective equipment, such as safety glasses and gloves. If you are unsure about any procedure, consult a qualified automotive technician.

SETUP AND INSTALLATION

The LX333 Ignition Pickup is a critical component within the distributor of an ignition system. Proper installation is essential for correct engine operation.

Tools Required:

- Basic hand tools (screwdrivers, wrenches, etc.)
- Multimeter (for testing, if necessary)
- Service manual for your specific vehicle model

Installation Steps:

1. **Preparation:** Ensure the vehicle's ignition is off and the battery is disconnected. Locate the distributor assembly in your vehicle.
2. **Access:** Depending on your vehicle, you may need to remove other components to gain access to the distributor. Refer to your vehicle's service manual for specific instructions.
3. **Remove Old Pickup:** Carefully disconnect the electrical connector from the old ignition pickup. Remove any retaining screws or clips holding the old pickup in place. Note the orientation of the old pickup before removal.
4. **Inspect Area:** Clean the mounting area within the distributor to ensure no debris interferes with the new pickup's seating.
5. **Install New Pickup:** Position the new Standard Motor Products LX333 Ignition Pickup in the same orientation as the old one. Secure it with the retaining screws or clips. Ensure it is seated firmly and correctly.

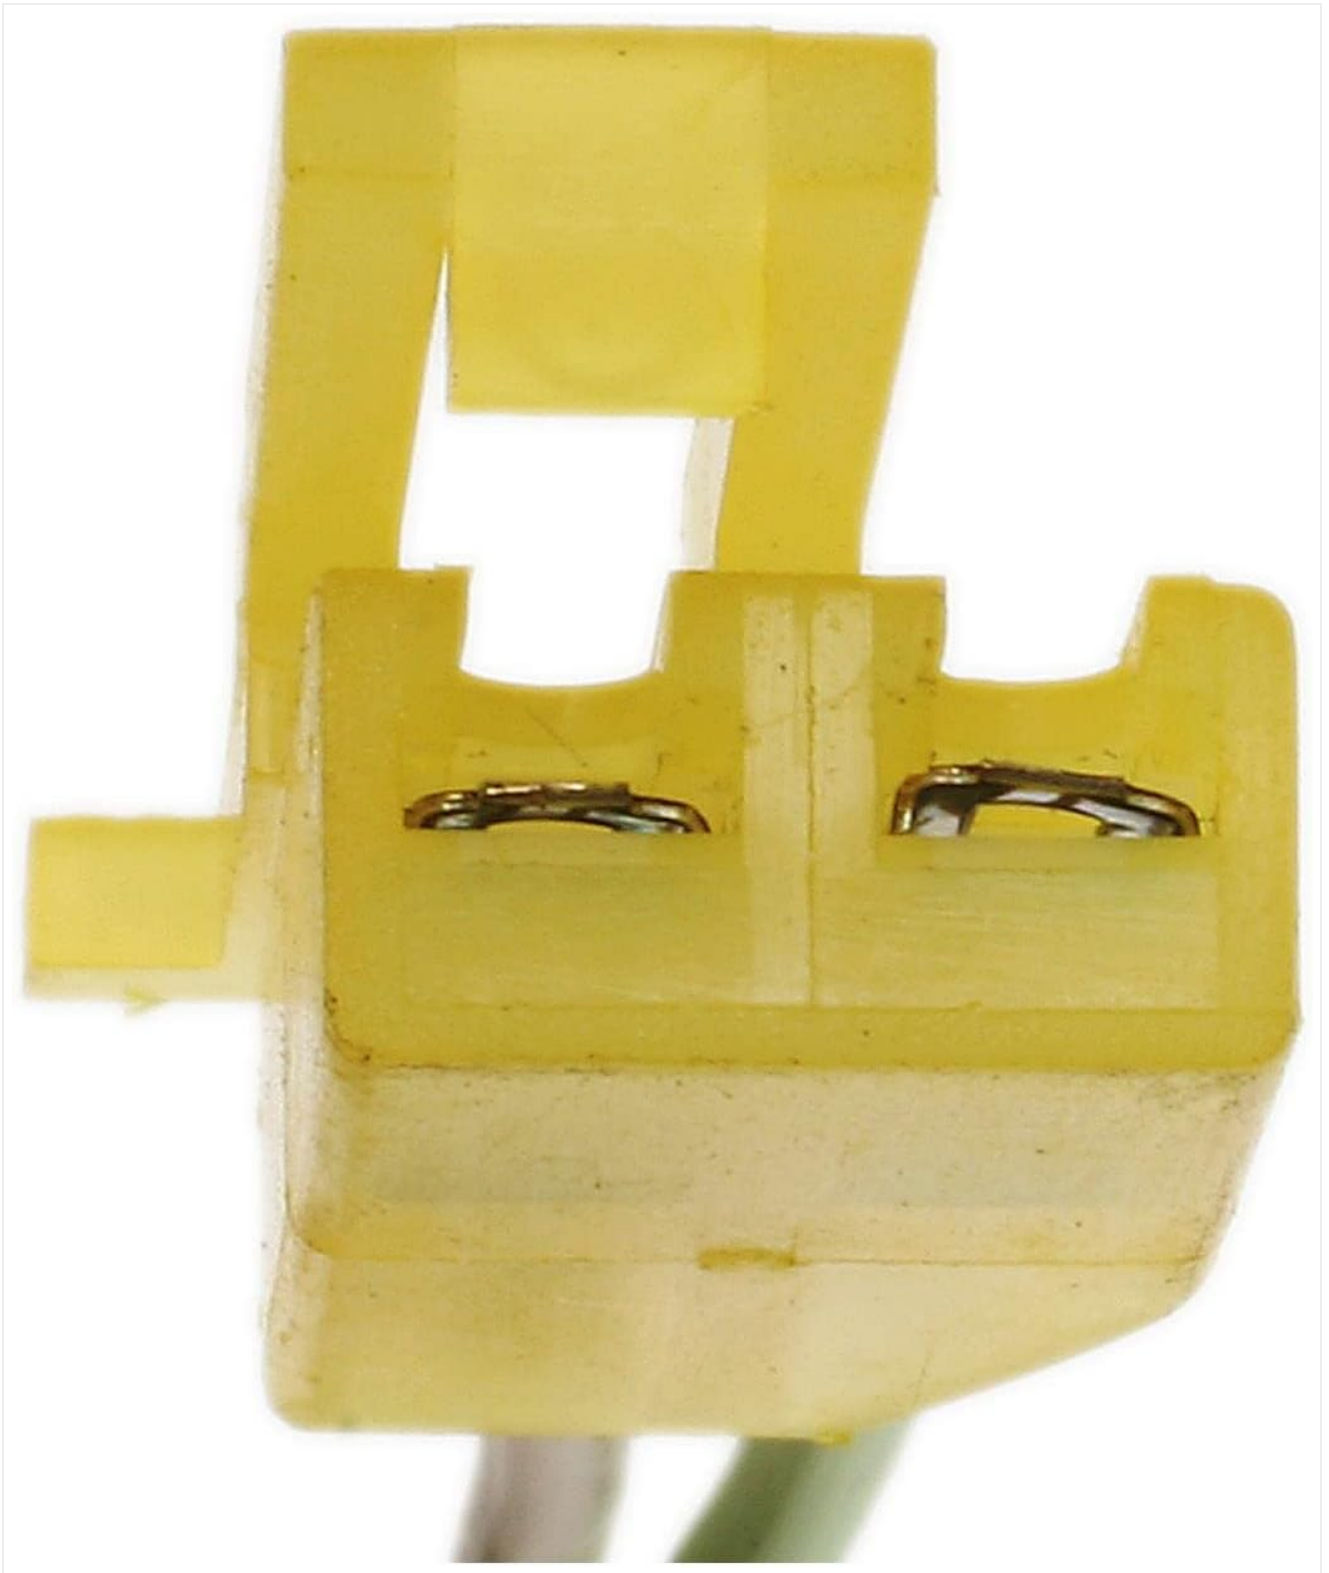


Figure 2: Close-up view of the yellow electrical connector on the LX333 Ignition Pickup, highlighting the terminals.

6. **Connect Wiring:** Reconnect the electrical connector to the new pickup. Ensure a secure and tight connection.
7. **Reassembly:** Reinstall any components that were removed to access the distributor.
8. **Final Check:** Reconnect the vehicle's battery. Before starting the engine, perform a visual inspection to ensure all connections are secure and no tools or debris are left in the engine bay.

Note: Specific installation procedures may vary by vehicle make and model. Always consult your vehicle's official service manual for detailed, vehicle-specific instructions.

OPERATING PRINCIPLES

The LX333 Ignition Pickup operates on the principle of electromagnetic induction. As a rotating component (reluctor or trigger wheel) within the distributor passes by the pickup coil, it induces a voltage pulse. These pulses are sent to the ignition control module, which then uses this timing information to fire the ignition coil at the precise moment, leading to spark plug ignition. A properly functioning ignition pickup is crucial for accurate engine timing and efficient combustion.

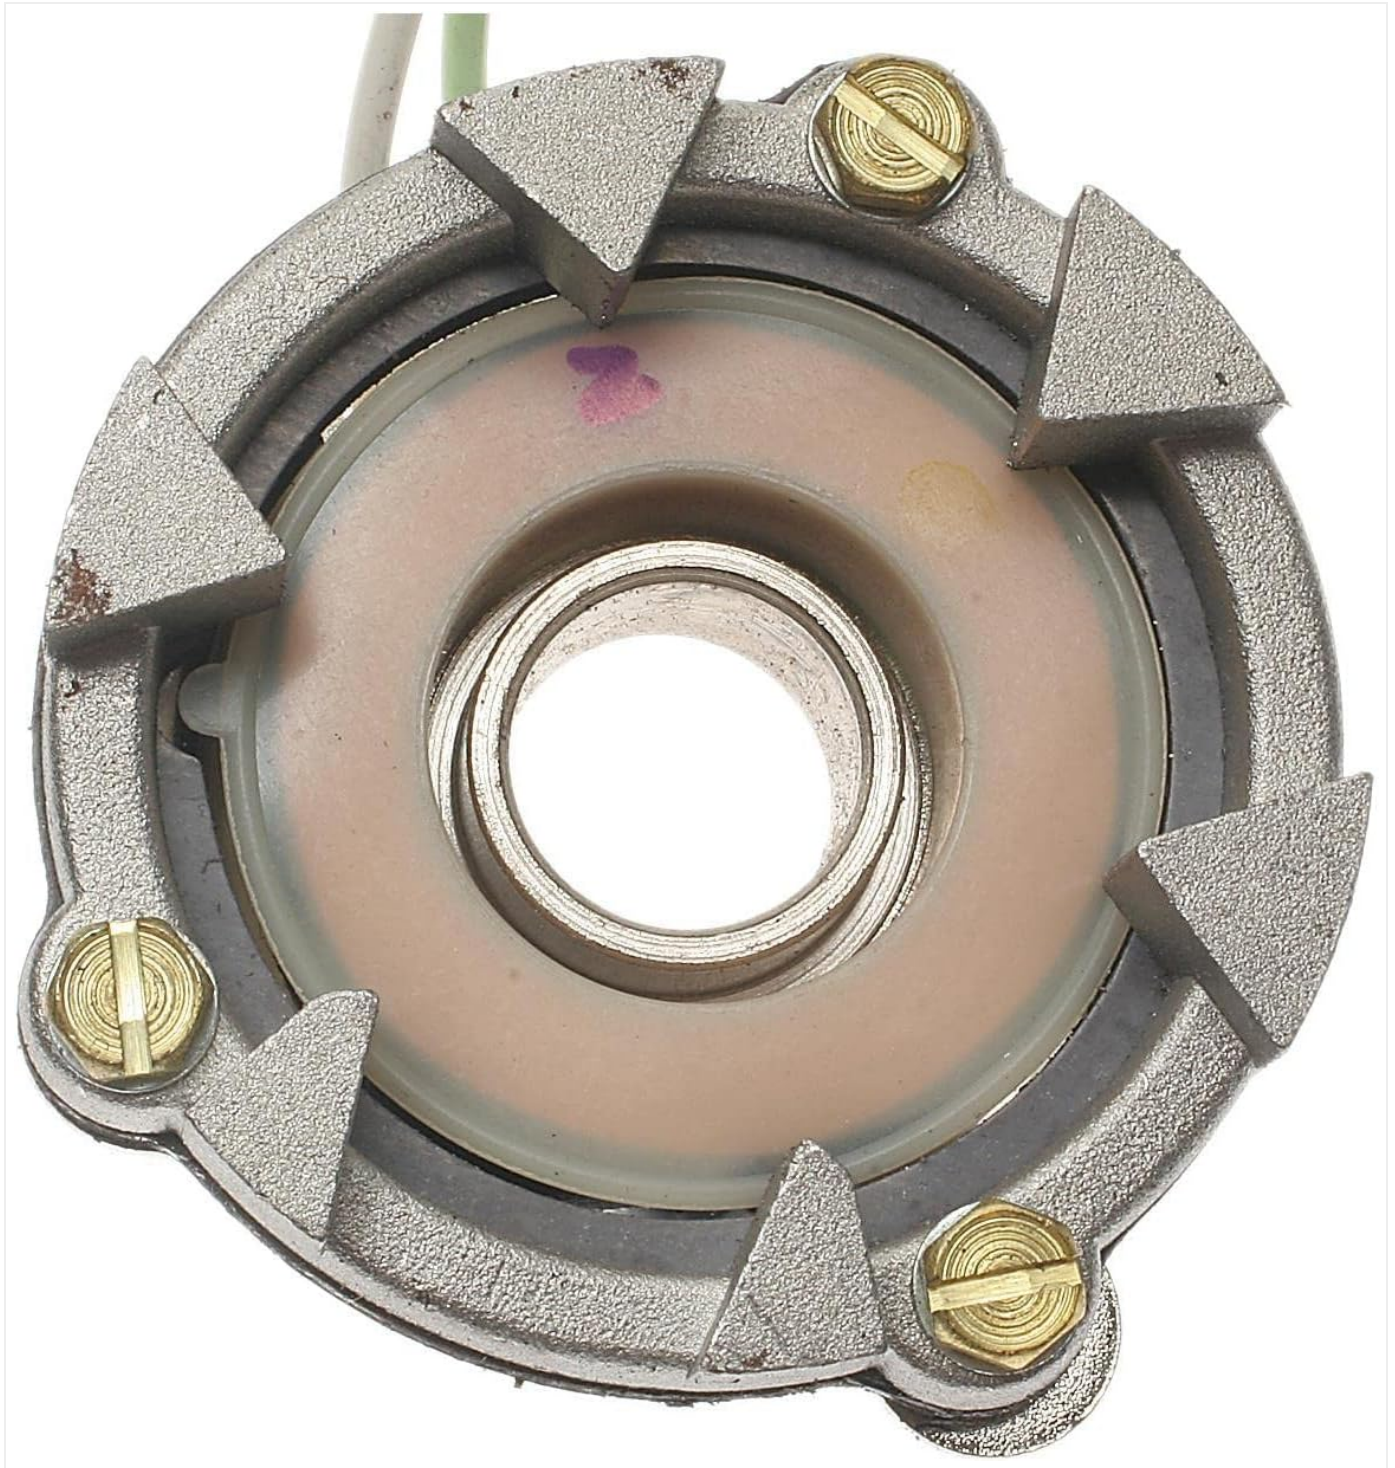


Figure 3: Bottom view of the LX333 Ignition Pickup, showing the mounting points and the internal components that interact with the reluctor wheel.

MAINTENANCE

The Standard Motor Products LX333 Ignition Pickup is a sealed, maintenance-free component. Regular maintenance is generally not required for the pickup itself. However, it is important to ensure the surrounding area within the distributor remains clean and free of oil, dirt, or debris, which could interfere with its operation. Periodically inspect the wiring and connector for any signs of wear, corrosion, or damage. Replace the pickup if any physical damage is observed or if it fails

diagnostic tests.

TROUBLESHOOTING

If you experience issues with your vehicle's ignition system after installing or while using the LX333 Ignition Pickup, consider the following common troubleshooting steps:

Symptom	Possible Cause	Solution
Engine Cranks but Won't Start	Faulty ignition pickup, wiring issue, or other ignition component failure.	Check for spark at the spark plugs. Test the ignition pickup's resistance and signal output using a multimeter (refer to vehicle service manual for specifications). Inspect wiring for damage or loose connections.
Rough Idling or Misfires	Intermittent signal from pickup, incorrect timing, or other engine issues.	Verify proper installation. Check for diagnostic trouble codes (DTCs). Inspect the reluctor wheel for damage.
Check Engine Light (CEL) On	Ignition system fault detected by the vehicle's ECU.	Retrieve DTCs using an OBD-II scanner. Codes related to crankshaft position sensor or distributor ignition (DI) system may indicate a pickup issue.

Important: Always consult a professional automotive technician for complex diagnostic and repair procedures. Incorrect diagnosis or repair can lead to further damage or safety hazards.

SPECIFICATIONS

Attribute	Value
Product Type	Ignition Pickup
Model Number	LX333
Brand	Standard Motor Products
Item Weight	4.8 ounces (approx. 0.3 lbs)
Product Dimensions (L x W x H)	2.2 x 1.9 x 4.1 inches
Exterior Finish	Machined
Manufacturer Part Number	LX333

WARRANTY AND SUPPORT

For information regarding the warranty of your Standard Motor Products LX333 Ignition Pickup, please refer to the official Standard Motor Products website or contact their customer support directly. Warranty terms and conditions may vary and are subject to the manufacturer's policies at the time of purchase.

Manufacturer Contact:

Brand: Standard Motor Products

Website: www.smpcorp.com (Please check the official website for the most current contact information and warranty details.)

© 2024 Standard Motor Products. All rights reserved.
This manual is for informational purposes only. Standard Motor Products is not responsible for any damage or injury resulting from improper installation or use of this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question