

[Manuals.plus](#) /

› [Standard Motor Products](#) /

› Standard Motor Products S689 Pigtail/Socket User Manual

Standard Motor Products S689

Standard Motor Products S689 Pigtail/Socket User Manual

Model: S689

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Standard Motor Products S689 Pigtail/Socket. Please read this manual thoroughly before use to ensure safe and effective performance. The S689 Pigtail/Socket is designed as a replacement part for motor vehicles, specifically within the automotive aftermarket industry. It is manufactured by Standard Motor Products, Inc., a leading independent manufacturer and distributor of automotive replacement parts.

PRODUCT OVERVIEW

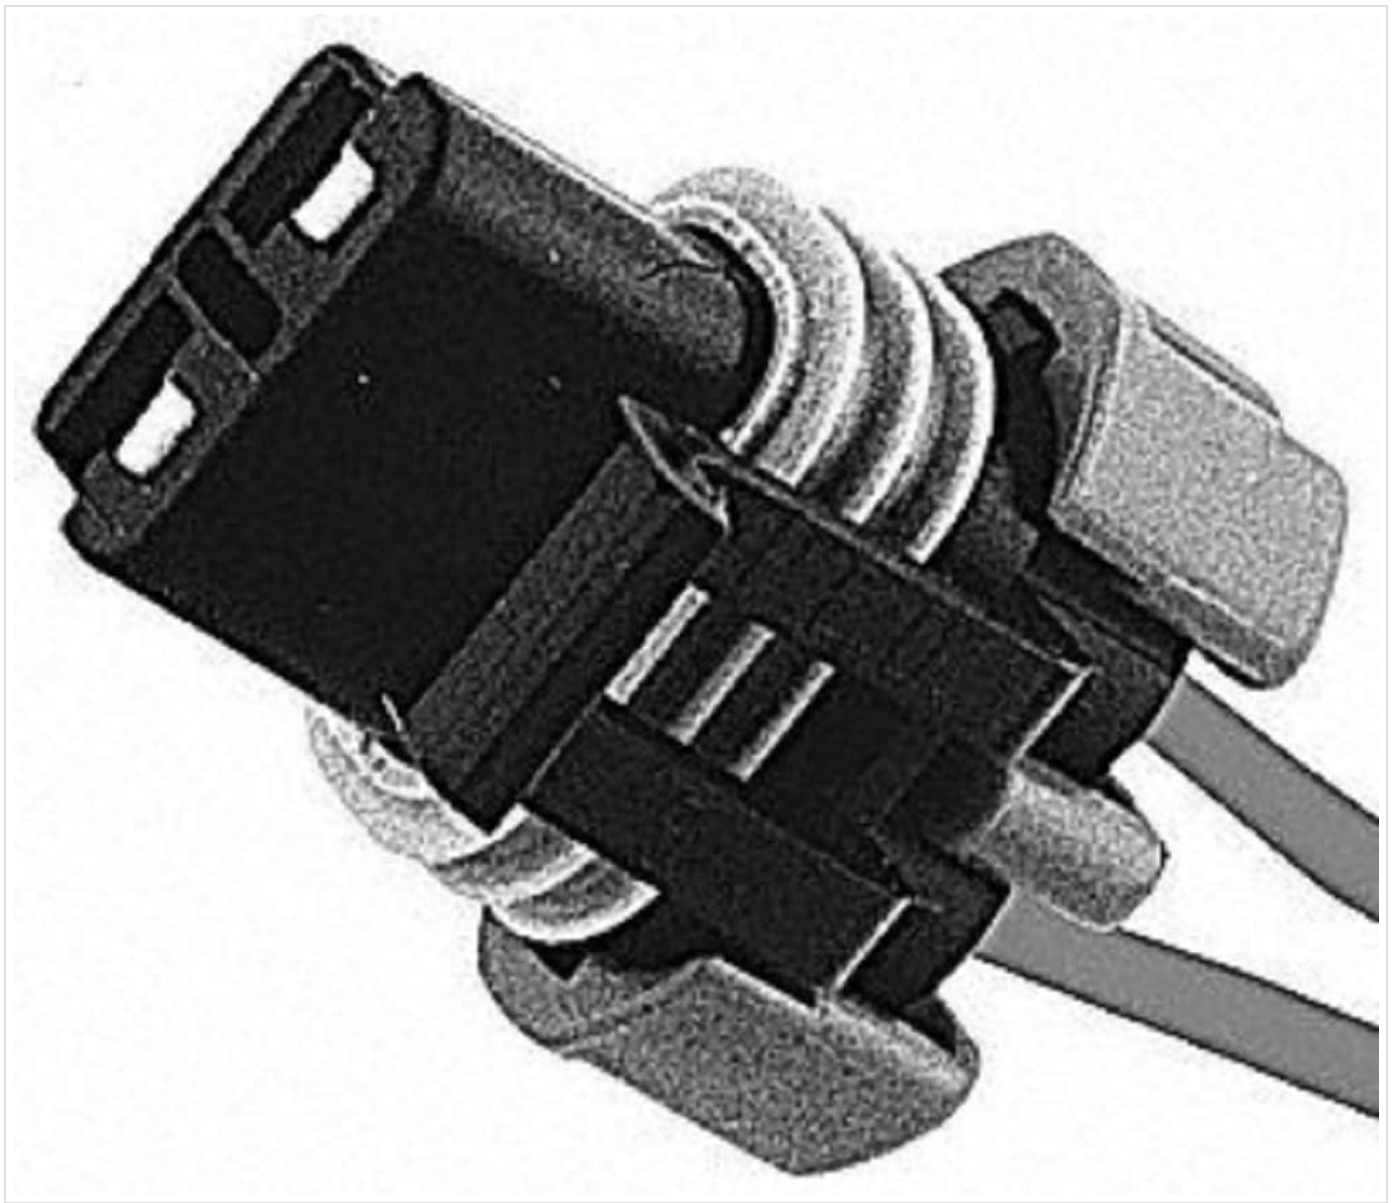


Image: A close-up view of the Standard Motor Products S689 Pigtail/Socket. It features a black plastic connector housing with multiple terminals and attached wires, designed for electrical connections in automotive applications.

The S689 Pigtail/Socket is an electrical connector assembly used in various automotive systems. It typically consists of a plastic housing, metal terminals, and pre-attached wires (pigtail) that connect to a corresponding component or wiring harness.

Key Features:

- Durable construction for automotive environments.
- Pre-wired for ease of installation.
- Designed to meet OEM specifications for fit and function.

SETUP AND INSTALLATION

Proper installation is crucial for the functionality and safety of the S689 Pigtail/Socket. It is recommended that installation be performed by a qualified automotive technician.

1. **Safety First:** Disconnect the vehicle's battery before beginning any electrical work to prevent short circuits or electrical shock.
2. **Identify the Original Component:** Locate the existing pigtail/socket that needs replacement. Note its orientation and wiring configuration.

3. **Remove Old Component:** Carefully disconnect the old pigtail/socket from its mating connector and remove any mounting hardware. Cut the wires if necessary, leaving enough length to splice the new pigtail.
4. **Prepare Wires:** Strip a small section of insulation from the ends of the vehicle's wiring and the new S689 pigtail wires. Ensure clean, unfrayed wire ends.
5. **Connect Wires:** Using appropriate automotive-grade connectors (e.g., crimp connectors, solder and heat shrink), connect the wires of the S689 pigtail to the vehicle's wiring. Ensure correct polarity and wire-to-wire matching. Refer to the vehicle's service manual for specific wiring diagrams if unsure.
6. **Secure Connections:** Insulate all wire connections thoroughly using heat shrink tubing or electrical tape to protect against moisture and abrasion.
7. **Mount New Component:** Secure the new S689 Pigtail/Socket in its original location, ensuring it is firmly seated and free from strain.
8. **Reconnect Battery:** Once all connections are secure and insulated, reconnect the vehicle's battery.
9. **Test Functionality:** Test the associated electrical system to confirm proper operation of the newly installed pigtail/socket.

OPERATING INSTRUCTIONS

The S689 Pigtail/Socket is a passive electrical component. Its "operation" is integrated into the vehicle's electrical system. Once correctly installed, it facilitates the flow of electrical current to the component it is connected to. Ensure that the mating connector is fully seated and locked into the S689 Pigtail/Socket to maintain a secure and reliable electrical connection. Avoid pulling on the wires when disconnecting; always grasp the connector housing.

MAINTENANCE

The S689 Pigtail/Socket is designed for long-term reliability and typically requires minimal maintenance once installed correctly.

- **Periodic Inspection:** During routine vehicle maintenance, visually inspect the pigtail/socket for any signs of damage, corrosion, or loose connections.
- **Cleanliness:** Keep the connector free from dirt, moisture, and debris. If cleaning is necessary, use a non-conductive electrical contact cleaner and allow it to dry completely before reconnecting.
- **Avoid Stress:** Ensure that the wiring connected to the pigtail/socket is not under excessive tension or rubbing against sharp edges, which could lead to wire damage.

TROUBLESHOOTING

If the component connected to the S689 Pigtail/Socket is not functioning correctly, consider the following troubleshooting steps:

Problem	Possible Cause	Solution
Component not receiving power	Loose or corroded connection at the pigtail/socket or mating connector. Blown fuse in the circuit. Damaged wiring.	Check for secure connections. Inspect for corrosion and clean if necessary. Check and replace any blown fuses. Inspect wiring for breaks or shorts.
Intermittent component operation	Poor contact within the pigtail/socket terminals. Vibration causing connection issues.	Ensure the mating connector is fully seated. Inspect terminals for bending or damage. Secure the pigtail/socket to prevent excessive movement.

Problem	Possible Cause	Solution
Visible damage to pigtail/socket	Physical impact, heat damage, or chemical exposure.	Replace the S689 Pigtail/Socket. Investigate the cause of damage to prevent recurrence.

If troubleshooting steps do not resolve the issue, consult a professional automotive technician.

SPECIFICATIONS

- **Product Type:** Automotive Pigtail/Socket
- **Model Number:** S689
- **Brand:** Standard Motor Products
- **Dimensions:** Approximately 2 x 1.44 x 3.38 inches
- **Weight:** Approximately 0.01 ounces
- **Material:** Automotive-grade plastic and metal conductors
- **Application:** Replacement part for various automotive electrical systems

WARRANTY INFORMATION

Standard Motor Products, Inc. (SMP) stands behind the quality of its products. For specific warranty terms and conditions applicable to the S689 Pigtail/Socket, please refer to the official Standard Motor Products website or contact their customer service department. Warranty coverage typically applies to defects in material and workmanship under normal use and service.

SUPPORT AND CONTACT INFORMATION

For technical assistance, product inquiries, or support, please contact Standard Motor Products directly:

- **Website:** Visit the official Standard Motor Products website for comprehensive product information and resources.
- **Customer Service:** Refer to the contact section on the SMP website for phone numbers or email support.
- **Authorized Dealers:** Consult with your automotive parts supplier or authorized Standard Motor Products dealer for local support.

When contacting support, please have your product model number (S689) and any relevant vehicle information ready.

© 2023 Standard Motor Products, Inc. All rights reserved.

This manual is for informational purposes only. Standard Motor Products, Inc. is not responsible for any damage or injury resulting from improper installation or use of this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question