

[Manuals.plus](#) /

› [Fackelmann](#) /

› Fackelmann Cleaning Scraper Model 60144 User Manual

## Fackelmann 60144

# Fackelmann Cleaning Scraper

MODEL: 60144

### Introduction

---

This manual provides instructions for the safe and effective use of your Fackelmann Cleaning Scraper, Model 60144. This tool is designed for cleaning various surfaces, including ceramic hobs, induction cooktops, and glass, by carefully removing stubborn residues. Constructed from durable ABS and stainless steel, it offers reliable performance for household cleaning tasks.



Image: The Fackelmann Cleaning Scraper, Model 60144, featuring its black ABS handle and stainless steel blade holder.

## Setup

The Fackelmann Cleaning Scraper Model 60144 comes pre-assembled with a blade installed. No additional assembly is required before initial use.

1. **Unpacking:** Carefully remove the scraper from its packaging.
2. **Blade Safety:** Ensure the blade is securely retracted or covered by its safety mechanism before handling. The scraper features a sliding mechanism to expose or retract the blade.
3. **Inspection:** Before first use, inspect the scraper for any visible damage. Do not use if the blade is chipped or the handle is broken.



Image: The Fackelmann Cleaning Scraper shown in its retail packaging, indicating its ready-to-use state.

## Operating Instructions

The cleaning scraper is designed to remove burnt-on food, grease, and other residues from hard, flat surfaces without scratching, when used correctly.

1. **Surface Preparation:** Ensure the surface to be cleaned is cool and dry. Avoid using the scraper on hot surfaces.

2. **Expose Blade:** Carefully slide the safety mechanism to expose the blade. Only expose the necessary amount of blade for the task.
3. **Angle of Use:** Hold the scraper at a shallow angle (approximately 15-30 degrees) to the surface. This angle helps prevent scratching and maximizes cleaning efficiency.
4. **Scraping Motion:** Apply gentle, even pressure and push the scraper forward to lift residues. Avoid excessive force or jabbing motions. For stubborn spots, repeat the process with light strokes.
5. **Retract Blade:** After use, immediately retract the blade into the handle using the safety mechanism to prevent accidental cuts.
6. **Recommended Use:** Ideal for ceramic hobs, induction cooktops, glass surfaces, and other smooth, hard surfaces where residues need to be removed.



Image: The Fackelmann Cleaning Scraper being used on a black ceramic hob to demonstrate its application for surface cleaning.

## Maintenance

Proper maintenance ensures the longevity and effectiveness of your cleaning scraper.

- **Cleaning the Scraper:** After each use, retract the blade and wipe the scraper clean with a damp cloth. For

hygienic reasons, especially after cleaning food residues, wash the scraper with mild soap and water. Ensure it is thoroughly dried before storage.

- **Blade Replacement:** The stainless steel blade will dull over time. For optimal performance and safety, replace the blade when it becomes dull or chipped. Replacement blades are available under part numbers 60145 (10X) and 60149 (5X).

### Blade Replacement Procedure:

1. **Safety First:** Ensure the old blade is fully retracted or covered. Wear protective gloves if available.
2. **Access Blade Holder:** The scraper's blade holder is typically secured by a screw or a simple locking mechanism. Carefully loosen the screw or disengage the lock to open the blade holder.
3. **Remove Old Blade:** With extreme caution, remove the dull or damaged blade. Dispose of used blades safely, for example, in a dedicated blade disposal container or wrapped securely to prevent injury.
4. **Insert New Blade:** Place a new Fackelmann replacement blade (60145 or 60149) into the holder, ensuring it is correctly seated.
5. **Secure Blade:** Close the blade holder and tighten the screw or engage the locking mechanism until the blade is firmly secured and does not wobble.
6. **Test Safety Mechanism:** Verify that the safety mechanism for retracting and exposing the blade functions correctly with the new blade installed.



Image: The underside of the Fackelmann Cleaning Scraper, illustrating the blade holding mechanism for replacement.

### Troubleshooting

**Problem: Scraper is not effectively removing residue.**

**Solution:** The blade may be dull or chipped. Replace the blade following the 'Blade Replacement Procedure' in the Maintenance section. Ensure you are holding the scraper at a shallow angle (15-30 degrees) to the surface.

**Problem: Scraper leaves scratches on the surface.**

**Solution:** This can occur if the blade is used at too steep an angle, if excessive force is applied, or if the blade is damaged. Ensure the blade is clean and free of debris. Replace the blade if it is chipped or dull. Always use gentle pressure and a shallow angle. Avoid using on surfaces not intended for scraping, such as soft plastics or painted surfaces.

**Problem: Blade feels loose or wobbly.**

**Solution:** Ensure the blade is correctly seated in the holder and the securing screw or locking mechanism is fully tightened. If the issue persists, inspect the scraper for damage to the blade holder itself.

## Specifications

Feature	Detail
Product Dimensions	6.5 x 0.1 x 2.32 inches (16.5 cm length)
Item Weight	0.96 ounces
Manufacturer	Fackelmann
Model Number	60144
Materials	ABS (Acrylonitrile Butadiene Styrene) and Stainless Steel
Included Components	Cleaning scraper (with one blade installed)
Assembly Required	No
Specific Instructions for Use	Hob, Glass, Induction Cooktop
Replacement Blades	Fackelmann 60145 (10X) / 60149 (5X)



Image: The Fackelmann Cleaning Scraper with a measurement overlay indicating its 16 cm length.

## Warranty Information

The Fackelmann Cleaning Scraper Model 60144 comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear, including dulling of the blade. Please retain your proof of purchase for any warranty claims.

## Customer Support

For further assistance, questions, or to inquire about replacement parts, please contact Fackelmann customer service. Refer to the contact information provided on the product packaging or the official Fackelmann website. When contacting support, please have your product model number (60144) and purchase details ready.