

[manuals.plus](#) /› [Nortek](#) /› [Nortek Soundream 2.1 Attive Minispeaker User Manual](#)

Nortek Soundream 2.1

Nortek Soundream 2.1 Attive Minispeaker User Manual

Model: Soundream 2.1

1. INTRODUCTION

Thank you for choosing the Nortek Soundream 2.1 Attive Minispeaker system. This manual provides essential information for the proper setup, operation, and maintenance of your new audio system. Please read this manual thoroughly before using the product to ensure optimal performance and safety.

2. SAFETY INFORMATION

To prevent fire, electric shock, or product damage, please observe the following safety precautions:

- Do not expose this appliance to rain or moisture.
- Do not place objects filled with liquids, such as vases, on the appliance.
- Ensure proper ventilation. Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this appliance during lightning storms or when unused for long periods.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- 1 x Nortek Soundream 2.1 Subwoofer
- 2 x Satellite Speakers
- 1 x Power Cable (Corded Electric)
- 1 x Audio Input Cable (e.g., 3.5mm stereo jack)
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

The Nortek Soundream 2.1 system consists of a subwoofer and two satellite speakers designed to deliver enhanced audio for various devices.



Image: The Nortek Soundream 2.1 Attive Minispeaker system, featuring a central subwoofer unit and two compact satellite speakers.

Components:

- **Subwoofer:** The main unit containing the amplifier, bass driver, and primary controls.
- **Satellite Speakers:** Two compact speakers for mid-range and high-frequency audio.
- **Controls:** Typically located on the subwoofer, these include power on/off, master volume, and potentially bass level adjustment.

5. SETUP

Follow these steps to set up your Nortek Soundream 2.1 system:

1. Placement:

- Place the subwoofer on the floor, preferably near a wall or in a corner for optimal bass response.
- Position the two satellite speakers on either side of your listening area, facing towards you. Ensure they are equidistant from your listening position for balanced stereo sound.

2. Connect Satellite Speakers:

- Connect the cables from the satellite speakers to the corresponding output jacks on the back of the subwoofer. Ensure correct polarity if applicable (e.g., red to red, black to black).

3. Connect Audio Source:

- Connect one end of the audio input cable (e.g., 3.5mm stereo jack) to the 'Audio In' port on the subwoofer.
- Connect the other end of the audio input cable to the audio output jack of your device (e.g., computer, smartphone, MP3 player, TV).

4. Connect Power:

- Plug the power cable into the power input on the subwoofer.
- Plug the other end of the power cable into a standard electrical wall outlet.

6. OPERATING INSTRUCTIONS

Once the system is set up, follow these steps to operate your speakers:

1. **Power On:** Locate the power button or switch on the subwoofer and turn it to the 'ON' position. An indicator light may illuminate.
2. **Volume Control:** Turn the master volume knob on the subwoofer to a low setting before playing audio. Gradually increase the volume to your desired listening level.
3. **Bass Adjustment (if available):** If your subwoofer has a separate bass control knob, adjust it to achieve your preferred bass level.
4. **Play Audio:** Start playing audio from your connected device.
5. **Power Off:** When finished, turn the power switch on the subwoofer to the 'OFF' position. For extended periods of non-use, it is recommended to unplug the system from the power outlet.

7. MAINTENANCE

Proper maintenance ensures the longevity and performance of your speaker system:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the surfaces of the speakers and subwoofer. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure that the ventilation openings on the subwoofer are not blocked by dust or other objects.
- **Storage:** If storing the system for an extended period, unplug it and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or crimping the audio and power cables excessively.

8. TROUBLESHOOTING

If you encounter issues with your Nortek Soundream 2.1 system, refer to the following common problems and solutions:

- **No Sound:**
 - Ensure the power cable is securely plugged into both the subwoofer and the wall outlet.
 - Verify the power switch on the subwoofer is in the 'ON' position.
 - Check that the audio input cable is securely connected to both the subwoofer and your audio source.
 - Increase the master volume on the subwoofer and the volume on your audio source device.
 - Test with a different audio source or cable to rule out a faulty source or cable.
- **Distorted Sound:**
 - Reduce the volume on both the subwoofer and your audio source.
 - Ensure the audio input cable is fully inserted and not damaged.
 - Check for any interference from other electronic devices.
- **Only One Satellite Speaker Working:**
 - Check the connection of the non-working satellite speaker to the subwoofer.
 - Ensure the audio source is outputting stereo sound.

9. SPECIFICATIONS

- **Model:** Nortek Soundream 2.1
- **Configuration:** 2.1 Channel (Subwoofer + 2 Satellite Speakers)
- **Power Output (Wattage):** 2 Watts
- **Power Source:** Corded Electric
- **Item Weight:** Approximately 1.5 kg (3.31 pounds)
- **ASIN:** B000CFYA2C
- **Manufacturer:** Nortek

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Nortek website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Nortek. All rights reserved.

Related Documents - Soundream 2.1

	<p><u>Nortek *SA3QD4M1 Series Split System Air Conditioner Installation Instructions</u></p> <p>Comprehensive installation instructions for Nortek *SA3QD4M1 series split system air conditioners (2 to 4 Ton), covering safety, electrical wiring, refrigerant charging, startup, and maintenance. Includes diagrams and checklists.</p>
	<p><u>Nortek SH3BE4M Series Split System Heat Pump Installation Instructions</u></p> <p>Detailed installation guide for Nortek SH3BE4M Series split system heat pumps, covering models 1SP18K through 2SX60K (1.5 to 5 tons). This manual provides qualified installers with critical safety information, step-by-step instructions for setup, electrical connections, refrigerant charging, and system startup for optimal performance and safety.</p>
	<p><u>Split System Heat Pump Installation Instructions - Nortek SH3BE4M Series</u></p> <p>Comprehensive installation guide for Nortek SH3BE4M series split system heat pumps, covering safety, electrical wiring, refrigerant charging, startup, and maintenance procedures for models 1SP18K through 2SX60K (1.5 to 5 Ton).</p>
	<p><u>Large Package Inshot Burner Igniter Replacement Instructions for R8GD, R8GE, R104GD, R8HE, R104HD Units</u></p> <p>Detailed installation instructions for replacing the inshot burner igniter on Nortek Global HVAC units including models R8GD, R8GE, R104GD, R8HE, and R104HD. Includes safety warnings and step-by-step guidance.</p>

