

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Danco](#) /
- › [Danco 88698 Faucet Index Buttons User Manual](#)

Danco 88698

Danco 88698 Faucet Index Buttons User Manual

Model: 88698

INTRODUCTION

The Danco 88698 Faucet Index Buttons are designed to replace worn or missing hot and cold indicators on compatible Delta faucets. These buttons restore the aesthetic and functional clarity of your faucet handles, ensuring proper identification of hot and cold water lines. Crafted from durable clear acrylic plastic, they feature a snap-in design for straightforward installation.







Image: Danco 88698 Faucet Index Buttons, featuring a clear acrylic design with 'H' and 'C' labels for hot and cold water.

Key Features:

- Clear acrylic plastic construction for durability and a clean look.
- New-style wave design for enhanced aesthetics.
- Specifically designed for Delta faucets.
- Includes one hot-labeled button and one cold-labeled button.
- Snap-in style for easy and secure installation.

SETUP AND INSTALLATION

Before beginning installation, ensure the water supply to the faucet is turned off to prevent accidental water flow. Gather any necessary tools, though typically none are required for snap-in buttons.

1. **Identify Replacement Location:** Locate the handle on your Delta faucet where the index button is missing or needs replacement.
2. **Remove Old Button (if present):** If an old button is present, gently pry it out using a small, flat-head screwdriver or a similar non-abrasive tool. Exercise caution to avoid scratching the faucet handle.
3. **Clean the Area:** Clean any debris or residue from the button recess on the faucet handle. This ensures a secure fit for the new button.
4. **Insert New Button:** Take the appropriate Danco 88698 button (Hot 'H' or Cold 'C') and align it with the recess on the faucet handle.
5. **Snap into Place:** Press the button firmly into the recess until it snaps securely into place. Ensure it sits flush with the handle surface.
6. **Verify Fit:** Gently test the button to ensure it is firmly seated and does not easily come loose.



Image: A pair of Danco faucet index buttons, clearly showing the 'H' and 'C' markings for hot and cold water identification.

The Danco 88698 Faucet Index Buttons serve as visual indicators for hot and cold water on your Delta faucet handles. Once installed, they require no specific operation. Simply use your faucet as normal, relying on the 'H' and 'C' labels to identify the water temperature.

MAINTENANCE

To maintain the appearance and longevity of your Danco Faucet Index Buttons, follow these simple cleaning guidelines:

- **Regular Cleaning:** Clean the buttons regularly with a soft cloth and mild soap and water.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, scouring pads, or harsh chemical detergents, as these can scratch or damage the acrylic surface.
- **Drying:** After cleaning, wipe the buttons dry with a soft, clean cloth to prevent water spots.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Button does not snap into place.	Debris in the recess; incorrect button orientation; incompatible faucet model.	Clean the recess thoroughly. Ensure the button is correctly aligned. Verify your faucet is a compatible Delta model.
Button falls out easily.	Improper installation; worn recess on faucet handle; incompatible faucet model.	Re-install, ensuring a firm snap. Inspect the faucet handle's recess for damage. Confirm faucet compatibility.
Button appears scratched or cloudy.	Use of abrasive cleaners; natural wear over time.	Use only mild soap and a soft cloth for cleaning. If severely damaged, replacement may be necessary.

SPECIFICATIONS

Model Number: 88698

Brand: Danco

Material: Acrylic

Color: Clear (with red 'H' and blue 'C' indicators, implied by hot/cold)

Handle Attachment Mechanism: Snap-in

Compatibility: Designed for Delta faucets

Item Weight: Approximately 0.32 ounces (per set)

UPC: 037155003570, 037155886982

WARRANTY INFORMATION

The Danco 88698 Faucet Index Buttons come with a **Limited 1 Year Warranty**. This warranty covers defects in material and workmanship under normal use and service. For specific terms, conditions, and to make a warranty claim, please retain your proof of purchase and contact Danco customer support.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Danco customer service. You can typically find contact information on the official Danco website or through the retailer where the product was purchased.

Online Resources: Visit the official Danco website for product information, FAQs, and additional support resources.

Contact: Refer to your product packaging or the Danco website for current customer service contact details (phone, email, or contact form).