

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Memorex](#) /

> [Memorex Portable Karaoke System MKS2115 User Manual](#)

Memorex MKS2115

Memorex Portable Karaoke System MKS2115 User Manual

Model: MKS2115

INTRODUCTION

The Memorex Portable Karaoke System MKS2115 is designed to provide an enjoyable karaoke experience. This system features a top-loading CD+Graphics player, dual microphone inputs for duets, and audio/video outputs for connecting to a television to display song lyrics. It offers enhanced vocal effects and can be powered by AC or batteries for portability.



Figure 1: Memorex Portable Karaoke System MKS2115

PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- Memorex Portable Karaoke System MKS2115 Unit
- One Dynamic Microphone
- Audio/Video Cable
- AC Adapter
- User Manual (this document)
- Warranty Card

Note: 6 "C" Cell batteries are required for battery operation and are not included.

PRODUCT FEATURES

The Memorex MKS2115 offers the following key features:

- **Top-loading CD/CD+Graphics Player:** Easy access for disc insertion and removal.
- **2-Digit LED Display:** Provides track number and other relevant information.
- **Enhanced Vocal Effects:** Includes echo and balance control for improved singing performance.
- **Auto Voice Control (AVC):** Functions as a built-in vocal guide, helping to blend your voice with the music.
- **Separate Volume Controls:** Independent controls for music and microphone volumes.
- **Full Range Speakers (2):** Delivers quality sound output.
- **CD/CD+Graphics Compatibility:** Displays song lyrics on a connected television screen.
- **Dual Microphone Inputs:** Allows for two microphones to be connected simultaneously for duets.
- **Audio/Video Outputs:** Enables connection to a TV and home entertainment system for expanded audio and visual experience.

SETUP

Power Connection

1. **AC Power:** Connect the supplied AC adapter to the DC IN jack on the unit and then plug the adapter into a standard wall outlet.
2. **Battery Power (Optional):** For portable use, open the battery compartment on the bottom of the unit and insert 6 "C" cell batteries (not included), ensuring correct polarity. Close the compartment securely.

Microphone Connection

- Plug the microphone cable into one of the MIC IN jacks located on the front of the unit. For duets, a second microphone (sold separately) can be plugged into the other MIC IN jack.

Connecting to a Television (for CD+Graphics)

- Connect the supplied Audio/Video cable to the AUDIO OUT (red/white) and VIDEO OUT (yellow) jacks on the back of the karaoke system.
- Connect the other end of the Audio/Video cable to the corresponding AUDIO IN (red/white) and VIDEO IN (yellow) jacks on your television.
- Select the correct A/V input channel on your television to view the lyrics.

OPERATING INSTRUCTIONS

Playing a CD/CD+G Disc

1. Open the CD compartment lid located on the top of the unit.
2. Carefully place a CD or CD+G disc onto the spindle with the label side facing up.
3. Close the CD compartment lid.
4. Press the **PLAY/PAUSE** button to begin playback. The 2-digit LED display will show the track number.
5. To pause playback, press **PLAY/PAUSE** again. Press it once more to resume.
6. To stop playback, press the **STOP** button.
7. To skip tracks, use the **SKIP FORWARD** or **SKIP BACKWARD** buttons.

Using the Microphones and Vocal Effects

- **Microphone Volume:** Adjust the **MIC VOLUME** knob to control the loudness of your voice through the speakers.
- **Music Volume:** Adjust the **MASTER VOLUME** knob to control the overall music volume.
- **Echo Control:** Turn the **ECHO** knob to add an echo effect to your vocals.
- **Balance Control:** Use the **BALANCE** knob to adjust the balance between the pre-recorded vocals on the CD+G track and the instrumental music. Turning it towards "VOCAL" will increase the original vocals, while turning it towards "MUSIC" will reduce them.
- **Auto Voice Control (AVC):** Activate AVC to automatically reduce the main vocal track on a CD+G disc when you start singing into the microphone, and restore it when you stop. This feature helps you practice your singing.

MAINTENANCE

Proper care and maintenance will ensure the longevity of your karaoke system.

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the CD Lens:** If the unit experiences disc reading issues, use a commercially available CD lens cleaner disc to clean the optical pickup lens. Do not touch the lens directly.
- **Disc Care:** Handle discs by their edges. Keep them clean and free from scratches. Store discs in their cases when not in use.
- **Storage:** When not in use for extended periods, disconnect the AC adapter and remove batteries. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected properly; Batteries drained or incorrectly inserted.	Ensure AC adapter is securely plugged in. If using batteries, check polarity and replace if necessary.
No sound from speakers	Volume too low; Mute function active (if applicable); Speakers disconnected (if external).	Increase MASTER VOLUME. Check if any mute function is active. Ensure internal speakers are not disabled.
No sound from microphone	Microphone not plugged in; MIC VOLUME too low; Microphone faulty.	Ensure microphone is fully plugged into MIC IN jack. Increase MIC VOLUME. Test with another microphone if available.
Disc not playing or skipping	Disc dirty or scratched; Disc inserted incorrectly; CD lens dirty.	Clean the disc with a soft, lint-free cloth. Ensure disc is placed correctly. Use a CD lens cleaner disc.
No lyrics on TV	Incorrect A/V connection; TV input not selected correctly; Not a CD+G disc.	Verify A/V cables are securely connected to both the karaoke system and TV. Select the correct A/V input on your TV. Ensure you are playing a CD+G disc.

SPECIFICATIONS

Feature	Detail
---------	--------

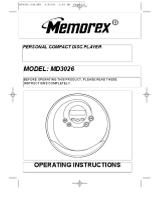
Feature	Detail
Model Number	MKS2115
Dimensions (L x W x H)	9 x 8.2 x 9.7 inches
Weight	5.5 pounds
Power Source	AC Adapter or 6 "C" Cell Batteries (not included)
Speaker Count	2 (Full Range)
Compatible Devices	Personal Computer (via A/V output to monitor)
Connector Type	3.5 mm Jack (for microphone)
Color	Blue with silver front and black face panel
Special Features	Portable, LED Display, Compact

WARRANTY AND SUPPORT

This product comes with a warranty. Please refer to the included Warranty Card for detailed information regarding warranty coverage, terms, and conditions. For technical support or service inquiries, please contact Memorex customer service. Contact information can typically be found on the Warranty Card or the official Memorex website.

Related Documents - MKS2115

	<p>Memorex MKS2114 User Guide: Portable CD/CD+G Karaoke System</p> <p>Comprehensive user guide for the Memorex MKS2114 Portable CD/CD+G Karaoke System. Learn about setup, operation, connections, safety, maintenance, and troubleshooting for your karaoke experience.</p>
	<p>Memorex MKS2451 Portable CD/CD+G Karaoke System with Cassette Recorder - Operating Instructions</p> <p>Operating instructions and safety guide for the Memorex MKS2451 portable CD/CD+G karaoke system with cassette recorder. Learn how to connect, operate, and maintain your device, including CD and cassette functions, karaoke features, and troubleshooting.</p>
	<p>Memorex MKS8501 User's Guide: CD/CD+G Karaoke System</p> <p>Comprehensive user's guide for the Memorex MKS8501 CD/CD+G Karaoke System with B&W Monitor, covering setup, operation, connections, troubleshooting, and specifications.</p>

	<p>Memorex MP3441 Bluetooth CD Boombox Instruction Manual</p> <p>Comprehensive instruction manual for the Memorex MP3441 Bluetooth CD Boombox, covering setup, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p>Memorex MMP3774 512MB MP3/WMA Digital Audio Player User Guide</p> <p>Comprehensive user guide for the Memorex MMP3774 digital audio player. Learn about setup, operation, file transfer, FM radio, troubleshooting, and specifications for your 512MB MP3/WMA device.</p>
	<p>Memorex MD3026 Personal Compact Disc Player Operating Instructions</p> <p>Operating instructions and safety precautions for the Memorex MD3026 Personal Compact Disc Player, covering setup, playback, care, and troubleshooting. Learn how to use your portable CD player safely and effectively.</p>