

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [GPX](#) /
- > [GPX KCL8806DT Under Counter 7-Inch LCD TV with AM/FM Radio Instruction Manual](#)

## GPX KCL8806DT

# GPX KCL8806DT Under Counter 7-Inch LCD TV with AM/FM Radio

Model: KCL8806DT | Brand: GPX

## INTRODUCTION

This manual provides comprehensive instructions for the GPX KCL8806DT, a compact under-counter unit featuring a 7-inch LCD television and an AM/FM radio. It is designed for space-saving installation, commonly found in kitchens, workshops, or other areas where counter space is valuable. The unit includes mounting hardware and a remote control for convenient operation.



Image: The GPX KCL8806DT under-counter TV unit, featuring a 7-inch LCD screen and integrated AM/FM radio. The unit is white with a silver face, designed for discreet installation.

## PACKAGE CONTENTS

---

- GPX KCL8806DT Under Counter 7-Inch LCD TV with AM/FM Radio
- Mounting Hardware
- Remote Control
- Stand (for optional tabletop use)
- User Manual (this document)

## SETUP AND INSTALLATION

---

### Mounting the Unit

The KCL8806DT is primarily designed for under-counter installation. Use the provided mounting hardware to securely attach the unit to a flat, sturdy surface. Ensure adequate clearance for the screen to fold down and rotate for optimal viewing angles. Follow the detailed instructions in the mounting template for precise placement and drilling.

### Connecting Power

Plug the power adapter into the DC IN port on the unit, then plug the other end into a standard electrical outlet (AC 120V, 60Hz). Ensure the power source is stable.

### Antenna Connection

Connect an appropriate antenna to the ANTENNA IN port for receiving over-the-air broadcasts. For optimal reception, position the antenna away from obstructions.

**Important Consumer Alert: This television receiver has only an analog broadcast tuner. After February 17, 2009, a converter box is required to receive over-the-air broadcasts with an antenna due to the U.S. transition to digital broadcasting. Analog-only TVs will continue to function with cable and satellite TV services, gaming consoles, VCRs, DVD players, and similar products. For more information, contact the Federal Communications Commission at 1-888-225-5322 (TTY: 1-888-835-5322) or visit [www.dtv.gov](http://www.dtv.gov).**

### External Device Connections

The unit supports HDMI and USB connectivity for external devices. Refer to the specific port labels on the unit for connection points. Ensure devices are compatible with the unit's input specifications.

## OPERATING INSTRUCTIONS

---

### Power On/Off

Press the Power button on the unit's front panel or the remote control to turn the device on or off. An indicator light will confirm the power status.

### TV Operation

Select the TV mode using the MODE button. Use the Channel Up/Down buttons to navigate through available channels. Access the on-screen menu for options such as automatic channel scanning, picture settings (brightness, contrast), and aspect ratio adjustments.

### Radio Operation

Select the AM/FM radio mode using the MODE button. Use the Tuning buttons to scan for radio stations. The display will show the current frequency. You can save favorite stations to preset memory slots.

## Remote Control

The included remote control provides full functionality for TV and radio operation, including power, volume, channel selection, mode switching, and menu navigation. Ensure batteries are correctly installed (typically 2x AAA batteries, not included) and replace them when necessary. Point the remote directly at the unit's IR sensor.

## MAINTENANCE AND CARE

---

### Cleaning

Use a soft, dry cloth to clean the unit's exterior. For the LCD screen, use a soft, lint-free cloth lightly dampened with a screen-cleaning solution specifically designed for electronics. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and screen.

### Storage

When not in use, the screen can be folded up against the unit's base to save space. Store the unit in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on top of the unit.

## TROUBLESHOOTING

---

- **No Power:**
  - Ensure the power cord is securely plugged into both the unit and a working electrical outlet.
  - Check the power outlet with another device to confirm it is functional.
- **No Picture/Poor Picture Quality:**
  - Verify the antenna connection is secure and the antenna is properly positioned.
  - If using an analog antenna after February 17, 2009, ensure a digital converter box is properly connected and configured.
  - Check external device connections (HDMI, USB) if applicable.
  - Adjust picture settings (brightness, contrast) via the on-screen menu.
- **No Sound/Poor Sound Quality:**
  - Check the volume level on the unit and ensure the mute function is not active.
  - For external devices, ensure audio cables are correctly connected.
- **Remote Control Not Working:**
  - Replace the batteries in the remote control.
  - Ensure there are no obstructions between the remote control and the unit's infrared (IR) sensor.

## SPECIFICATIONS

---

Feature	Detail
Model Number	KCL8806DT

Feature	Detail
Brand	GPX
Screen Size	7 Inches
Display Technology	LCD
Resolution	720p
Radio Tuner	AM/FM
Connectivity Technology	HDMI, USB
Mounting Type	Under Counter / Table Mount
Product Dimensions	13.5 x 15 x 4 inches
Item Weight	9.11 pounds

*Note: Specifications are subject to change without notice.*

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or service inquiries, please refer to the documentation included with your original purchase. It is recommended to keep your purchase receipt as proof of purchase for warranty claims. You may also visit the official GPX website for additional support resources and contact information.