

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio SL-320TER Pocket Calculator User Manual](#)

## Casio SL-320TER+-S

# Casio SL-320TER Pocket Calculator User Manual

Model: SL-320TER+-S

## 1. INTRODUCTION

---

This manual provides essential information for the proper use and maintenance of your Casio SL-320TER Pocket Calculator. Please read these instructions carefully before using the calculator to ensure optimal performance and longevity.

## 2. SETUP

---

### 2.1 Power Source

The Casio SL-320TER calculator utilizes a two-way power system: solar power and a single LR44 button-cell battery. The solar cell operates in well-lit environments, while the battery provides power in low-light conditions.

- **Solar Power:** Ensure the calculator's solar panel is exposed to sufficient light for operation.
- **Battery Power:** The calculator comes with one LR44 battery installed. If the display becomes dim or unresponsive in low light, the battery may need replacement.

### 2.2 Initial Use

Upon first use, or after replacing the battery, the calculator should power on automatically when exposed to light or by pressing the **AC** (All Clear) button. If the display is blank, ensure adequate lighting or check the battery.

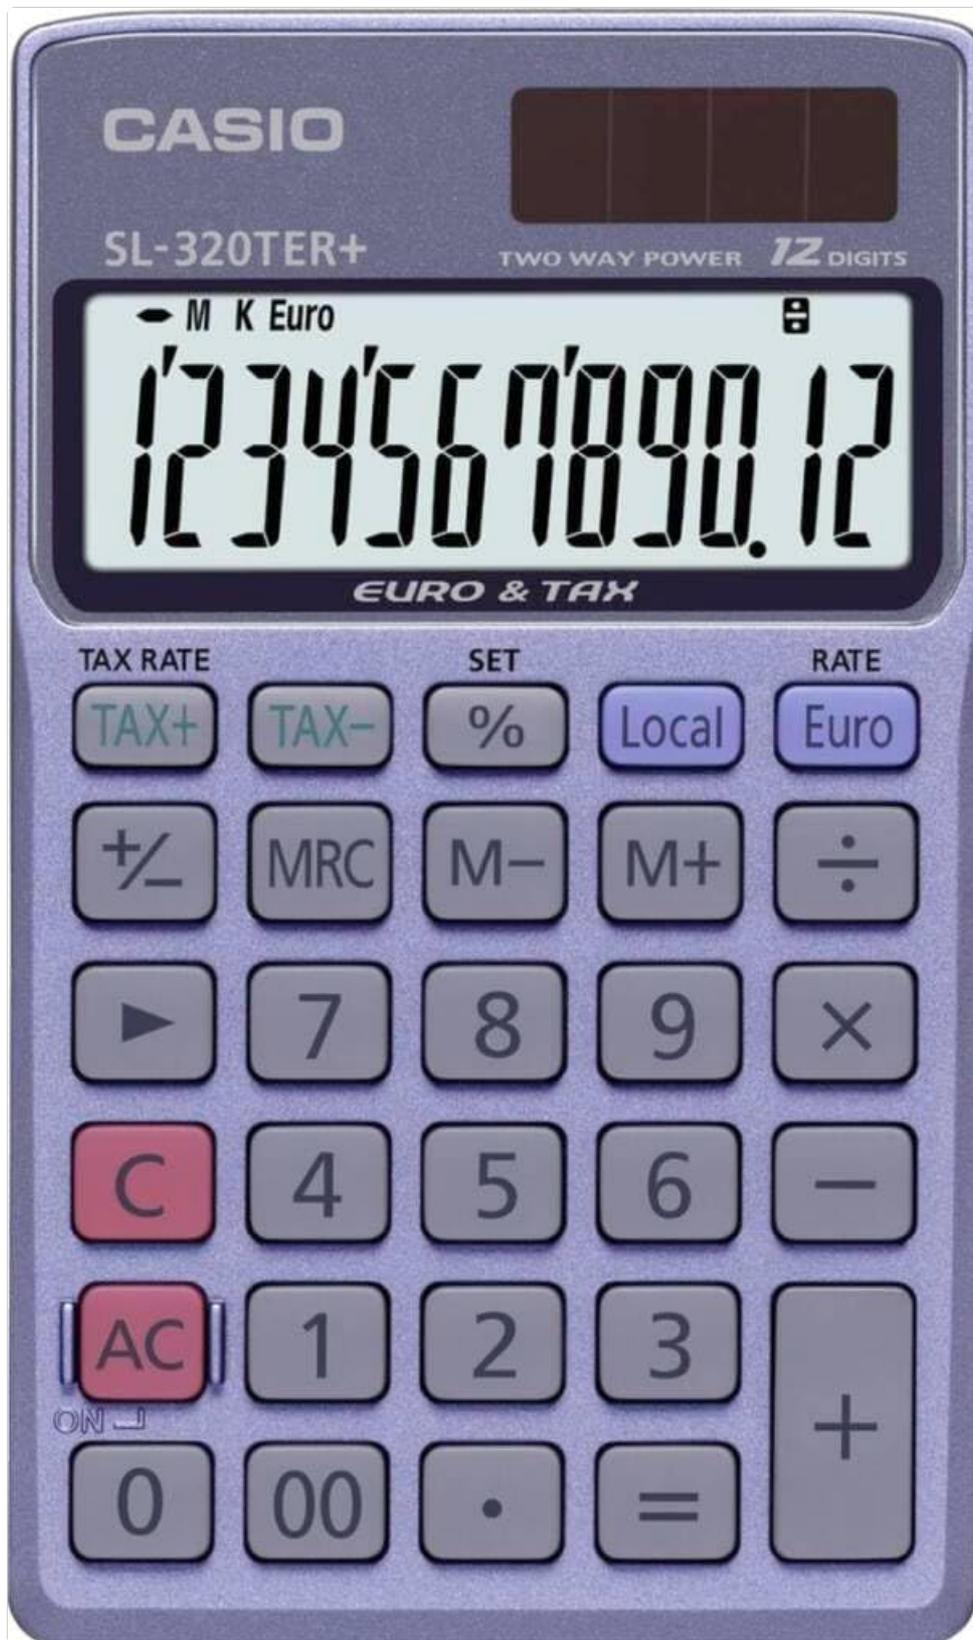


Figure 1: Front view of the Casio SL-320TER Pocket Calculator, illustrating the 12-digit display and key layout.

### 3. OPERATING INSTRUCTIONS

---

#### 3.1 Basic Calculations

Perform standard arithmetic operations:

- **Addition:** Enter first number, press +, enter second number, press =.
- **Subtraction:** Enter first number, press -, enter second number, press =.

- **Multiplication:** Enter first number, press **x**, enter second number, press **=**.
- **Division:** Enter first number, press **÷**, enter second number, press **=**.
- **Decimal Point:** Use the **.** button for decimal values.
- **Double Zero:** Use the **00** button for quick entry of two zeros.

### 3.2 Clear Functions

- **C (Clear Entry):** Clears the last entered number or the current calculation entry without affecting previous calculations or memory.
- **AC (All Clear):** Clears all entries, calculations, and memory content, resetting the calculator to its initial state.

### 3.3 Memory Functions

The calculator includes independent memory for storing and recalling values:

- **M+ (Memory Plus):** Adds the displayed value to the memory.
- **M- (Memory Minus):** Subtracts the displayed value from the memory.
- **MRC (Memory Recall/Clear):** Press once to recall the value stored in memory. Press twice to clear the memory.

### 3.4 Tax Calculations

The calculator features dedicated tax calculation functions. First, set the tax rate:

1. Press **SET**.
2. Enter the tax rate percentage (e.g., 5 for 5%).
3. Press **TAX RATE**. The tax rate is now stored.

To perform tax calculations:

- **TAX+ (Add Tax):** Enter the original amount, then press **TAX+** to display the amount including tax.
- **TAX- (Subtract Tax):** Enter the amount including tax, then press **TAX-** to display the original amount before tax.

### 3.5 Percentage Calculations

Use the **%** button for percentage calculations, including profit margin calculations.

- **Example (Simple Percentage):** To calculate 15% of 200: Enter  $200 \times 15 \%$ .
- **Example (Add Percentage):** To add 15% to 200: Enter  $200 + 15 \%$ .

### 3.6 Currency Conversion

The calculator supports currency conversion, specifically between a local currency and the Euro. First, set the Euro exchange rate:

1. Press **SET**.
2. Enter the exchange rate (e.g., 1.25 if 1 Euro = 1.25 Local units).
3. Press **RATE**. The exchange rate is now stored.

To perform currency conversions:

- **Local to Euro:** Enter the amount in Local currency, then press**Euro**.
- **Euro to Local:** Enter the amount in Euro, then press**Local**.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the calculator, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the casing or internal components.

### 4.2 Battery Replacement

When the display becomes dim or unresponsive, replace the LR44 battery. To replace the battery:

1. Turn the calculator over.
2. Locate the battery compartment cover.
3. Use a small screwdriver to open the compartment.
4. Remove the old LR44 battery and insert a new one, ensuring correct polarity (+/-).
5. Securely close the battery compartment cover.

### 4.3 Storage

Store the calculator in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on top of the calculator.

## 5. TROUBLESHOOTING

---

- **Blank or Dim Display:**
  - Ensure the solar panel is exposed to sufficient light.
  - Replace the LR44 battery if it is depleted.
- **Incorrect Calculation Results:**
  - Press **AC** to clear all previous calculations and memory.
  - Double-check your input values and operation sequence.
- **Buttons Not Responding:**
  - Press **AC** to reset the calculator.
  - If the issue persists, try replacing the battery.

## 6. SPECIFICATIONS

---

<b>Model:</b>	SL-320TER+-S
<b>Display:</b>	12 Digits, LCD
<b>Power Source:</b>	Two-way power (Solar cell and 1 x LR44 battery)
<b>Battery Type:</b>	LR44 (included)
<b>Dimensions (Approx.):</b>	Height: 12 cm (4.8 in) - <i>Compact pocket size</i>
<b>Weight:</b>	100 grams (0.1 Kilograms)

<b>Material:</b>	Plastic
<b>Features:</b>	Tax calculations, Currency conversion, Independent memory, Profit margin %, Automatic shutdown



Figure 2: Size comparison of the Casio SL-320TER calculator, highlighting its compact design with a height of approximately 12 cm.

## 7. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Casio website. Keep your proof of purchase for any warranty claims.