

[Manuals.plus](#) /

> [JAKKS Pacific](#) /

> JAKKS Pacific Super Pac-Man TV Game Model 59278 Instruction Manual

JAKKS Pacific 59278

JAKKS Pacific Super Pac-Man TV Game

INSTRUCTION MANUAL - MODEL 59278

Brand: JAKKS Pacific | Model: 59278

1. Setup

The JAKKS Pacific Super Pac-Man TV Game is a plug-and-play system designed for easy setup. Follow these steps to begin playing.

Battery Installation

The unit requires 4 AA alkaline batteries (not included). Ensure batteries are installed correctly, observing polarity. Refer to the warning section for important battery safety information.

TV Connection

Simply plug the game's A/V cable into the corresponding A/V jacks on your television. No additional consoles or software are required.



Figure 1: Back of the Super Pac-Man TV Game packaging, illustrating battery requirements and TV connection ports.

This image displays the rear packaging of the Super Pac-Man TV Game. It highlights the battery compartment, indicating the need for 4 AA alkaline batteries, and illustrates the A/V cable for direct connection to a television. Important battery warnings are also visible.

2. Operating Instructions

Once connected and powered on, the game will display a menu. Use the joystick to navigate and select your desired game.

Included Games

This unit features four classic Pac-Man games:

- **Super Pac-Man**
- **Pac-Man** (Original)
- **Pac-Man Plus**
- **Pac & Pal**

Controls

The integrated joystick controls character movement within the games. The unit features multiple buttons for game actions, such as starting a game or using special abilities, as indicated on the controller itself.



Figure 2: Front view of the Super Pac-Man TV Game controller, showing the joystick and action buttons.

This image shows the front of the Super Pac-Man TV Game controller, featuring the red ball-top joystick for directional input and two white action buttons labeled 'A' and 'B'. The classic Pac-Man logo is visible at the bottom.

Gameplay Demonstration

Your browser does not support the video tag.

Video 1: Pac-Man plug and play gameplay demonstration.

This video demonstrates the gameplay of a Pac-Man plug-and-play system, showing how the joystick is used to control Pac-Man through the maze, eating pellets and avoiding ghosts. It highlights the classic arcade experience.

3. Maintenance

Proper maintenance ensures the longevity and safe operation of your Super Pac-Man TV Game.

Battery Care and Safety Warnings

- NEVER mix old and new batteries.
- NEVER mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- NEVER dispose of batteries in fire, as they may explode.
- NEVER use rechargeable batteries.
- NEVER attempt to charge non-rechargeable batteries.
- ALWAYS remove exhausted batteries from the toy.
- ALWAYS have an adult install batteries consistent with installation instructions.
- ONLY use batteries specified by the manufacturer.
- Requires 4 'AA' Alkaline Batteries (not included).

Cleaning

Wipe the unit with a dry, soft cloth. Avoid using liquid cleaners or solvents.

4. Troubleshooting

If you encounter issues with your game, consult the following common solutions.

No Power

Ensure fresh AA batteries are correctly installed. Verify the unit's power switch is in the 'ON' position.

No Picture or Sound on TV

Check that the A/V cables are securely connected to both the game unit and the television's input ports. Ensure the TV input source is set to the correct A/V channel (e.g., Video 1, AV, Input).

Joystick Unresponsive or Sticking

Some users have reported that the joystick may require firm movement, especially for precise turns in certain games. Ensure the joystick is not physically obstructed and moves freely in all directions. If issues persist, try powering the unit off and on again. If the problem continues, it may indicate a hardware issue.

5. Specifications

Feature	Detail
Model Number	59278
Number of Players	1
Controller Type	Joystick
Power Source	Battery Powered
Number of Batteries	4 AA batteries required
Battery Description	Alkaline
Product Dimensions	9.2 x 7.8 x 4.6 inches

Item Weight	14.4 ounces
Manufacturer Recommended Age	36 months - 12 years
Material	Plastic

6. Warranty & Support

Return Policy

This product is covered by a standard return policy allowing for refund or replacement within 30 days of purchase. Please refer to your retailer's specific return guidelines for full details.

Customer Support

For questions or comments regarding your JAKKS Pacific Super Pac-Man TV Game, please contact the manufacturer directly at **877-875-2557** (toll-free).

Manufacturer: JAKKS Pacific, Inc.