

[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy Big Mouth Billy Bass (Model 36105) Instruction Manual

Gemmy 36105

Gemmy Big Mouth Billy Bass (Model 36105) Instruction Manual

INTRODUCTION

The Gemmy Big Mouth Billy Bass is a motion-activated animatronic fish designed to provide entertainment through singing and animated movements. This 15th Anniversary Edition features two popular songs: "I Will Survive" and "Don't Worry Be Happy". This manual provides essential information for setting up, operating, and maintaining your Big Mouth Billy Bass.

PACKAGE CONTENTS

Please ensure all items are present in your package:

- One (1) Big Mouth Billy Bass unit
- Four (4) AA batteries

SETUP

1. Battery Installation

To install the batteries:

1. Locate the battery compartment on the back of the Big Mouth Billy Bass unit.
2. Open the battery compartment cover.
3. Insert four (4) AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Placement Options

Your Big Mouth Billy Bass can be displayed in two ways:

- **Tabletop Display:** Utilize the integrated kickstand on the back of the unit to prop it up on any flat surface.
- **Wall Mounting:** The unit features a keyhole slot on the back for easy wall hanging. Ensure the wall mount is secure before hanging.



Image: The Big Mouth Billy Bass unit, ready for display.

OPERATION

Power Switch and Modes

On the back of the unit, locate the power switch. It has three positions:

- **OFF:** The unit is powered off.
- **ON (Motion Activated):** In this mode, the Big Mouth Billy Bass will begin singing and moving when its motion sensor detects movement.
- **ON (Manual Activation):** In this mode, the Big Mouth Billy Bass will sing and move when the red button on the front plaque is pressed.

Changing Songs

To switch between the two available songs ("I Will Survive" and "Don't Worry Be Happy"), press the red button on the front plaque. Each press will cycle to the next song.

Your browser does not support the video tag.

Video: Demonstration of the Big Mouth Billy Bass singing and moving, highlighting its motion-activated feature and song selection.

MAINTENANCE

Cleaning

To clean your Big Mouth Billy Bass, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or excessive moisture, as this may damage the electronic components.

Battery Replacement

If the unit's movements become sluggish or the sound quality diminishes, it may be time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

TROUBLESHOOTING

Problem	Solution
Unit does not sing or move.	◦ Check if the power switch on the back is in the "ON" (Motion Activated) or "ON" (Manual Activation) position. ◦ Ensure batteries are correctly installed and not depleted. Replace with fresh AA batteries if necessary. ◦ If in Motion Activated mode, ensure there is sufficient movement in front of the sensor.
Sound is distorted or low.	Replace the batteries with fresh AA batteries.

SPECIFICATIONS

- **Product Dimensions:** 12.72 x 9.1 x 3.2 inches
- **Item Weight:** 1.84 pounds
- **Item Model Number:** 36105
- **Manufacturer Recommended Age:** 8 years and up
- **Batteries:** 4 AA batteries required (included)
- **Operation Mode:** Motion Activated or Manual Button Press

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Gemmy website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question