

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Minolta](#) /

› [Minolta Dimage Xt 3.2 Megapixel Digital Camera User Manual](#)

Minolta Dimage XT

Minolta Dimage Xt 3.2 Megapixel Digital Camera User Manual

Model: **Dimage XT**

Brand: **Minolta**

1. INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Minolta Dimage Xt 3.2 Megapixel Digital Camera. Please read this manual thoroughly before operating the camera to ensure optimal performance and longevity. The Minolta Dimage Xt is a compact digital camera designed for capturing still images and video recordings.

2. CAMERA COMPONENTS

Familiarize yourself with the various parts of your camera.



Figure 2.1: Rear view of the camera, highlighting the LCD screen, menu buttons, and mode dial.

 


Figure 2.2: Top view of the camera, showing the power button and shutter release.



Figure 2.3: Bottom view of the camera, illustrating the battery and memory card compartment, along with the tripod mount.



Figure 2.4: Close-up of the camera's 1.5-inch LCD screen.

3. SETUP

3.1. Inserting the Battery

1. Locate the battery compartment cover on the bottom of the camera (refer to Figure 2.3).
2. Slide the cover latch to open the compartment.
3. Insert the battery according to the polarity indicators inside the compartment.
4. Close the compartment cover securely until it clicks into place.

3.2. Inserting the Memory Card

The Minolta Dimage Xt uses Secure Digital (SD) cards for storage.

1. Open the battery compartment cover (which also houses the memory card slot).
2. Insert the SD card into the designated slot with the label facing the correct direction, as indicated by the diagram near the slot.
3. Push the card gently until it clicks into place.
4. Close the compartment cover.

3.3. Initial Power On

1. Press the **ON/OFF** button located on the top of the camera (refer to Figure 2.2).
2. The LCD screen will illuminate, and the camera will perform a brief startup sequence.
3. If prompted, set the date and time using the navigation buttons and the **MENU** button.

4. OPERATING THE CAMERA

4.1. Powering On/Off

To power on the camera, press the **ON/OFF** button. To power off, press and hold the **ON/OFF** button until the screen turns off.

4.2. Taking Photos

1. Turn the camera on.
2. Select the desired shooting mode using the mode dial (refer to Figure 2.1). Common modes include automatic, portrait, landscape, etc.
3. Frame your shot using the LCD screen or the optical viewfinder.
4. Press the shutter button halfway down to activate autofocus. The camera will focus on the subject.
5. Press the shutter button completely down to capture the image.
6. The camera supports JPEG file format for still images.

4.3. Recording Videos

1. Turn the camera on.
2. Select the movie mode using the mode dial.
3. Frame your subject on the LCD screen.
4. Press the shutter button to start recording. A recording indicator will appear on the screen.
5. Press the shutter button again to stop recording.
6. The camera records video in Apple Quicktime format.

4.4. Playback

1. Press the playback button (often indicated by a triangle icon, refer to Figure 2.1) to enter playback mode.
2. Use the navigation buttons to scroll through your captured photos and videos.
3. To exit playback mode, press the playback button again or the shutter button to return to shooting mode.

4.5. Menu Navigation

The camera's settings can be adjusted via the menu system.

1. Press the **MENU** button (refer to Figure 2.1) to access the camera's settings.
2. Use the navigation buttons (up, down, left, right) to highlight different menu options.
3. Press the center button or the shutter button to select an option or confirm a setting.
4. Press the **MENU** button again to exit the menu.

5. MAINTENANCE

5.1. Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust. For smudges, use a specialized lens cleaning solution applied to a cloth, not directly to the lens.
- **LCD Screen:** Wipe gently with a soft, dry cloth. Avoid pressing too hard.
- **Camera Body:** Use a soft, dry cloth to wipe away dust and fingerprints. Do not use harsh chemicals or solvents.

5.2. Battery Care

- Always use the recommended battery type.
- Remove the battery if the camera will not be used for an extended period.
- Store batteries in a cool, dry place.

5.3. Storage

When not in use, store the camera in a dry, dust-free environment, preferably in a camera bag to protect it from impacts and scratches.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge or replace the battery. Ensure it is inserted with correct polarity.
Images are blurry.	Camera shake, subject movement, or incorrect focus.	Hold the camera steady. Ensure the autofocus locks onto the subject before fully pressing the shutter. Use sufficient lighting.

Problem	Possible Cause	Solution
Memory card error.	Card is full, corrupted, or incorrectly inserted.	Delete unnecessary files, format the card (this will erase all data), or reinsert the card. Try a different SD card.
LCD screen is blank.	Camera is off, in viewfinder mode, or power saving mode.	Ensure camera is on. Check display settings in the menu. Press any button to wake from power saving.

7. SPECIFICATIONS

Brand: Minolta

Model Name: minolta

Model Number: Dimage XT Silver

Effective Still Resolution: 3.2 MP

Photo Sensor Technology: CMOS

Optical Zoom: 3x

Digital-Still: Yes

Movie Mode: Yes

Video Resolution: 1080p

Image Stabilization: Digital

Supported File Format: JPEG (Stills), Apple Quicktime (Video)

Hardware Interface: Secure Digital Card

Screen Size: 1.5 Inches

Viewfinder: Optical

Autofocus: Yes (Contrast Detection)

Audio Recording: Yes

Color: Black

Item Weight: 0.26 Pounds

Are Batteries Included: No

Remote Included: No

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your original purchase or contact Minolta customer support directly. Specific warranty terms may vary by region and purchase date.

For further assistance, technical support, or service inquiries, please visit the official Minolta website or contact their authorized service centers. You can also visit the [Minolta Store on Amazon](#) for product information.

