

Sony DSCH5

Sony Cybershot DSC-H5 Digital Camera Instruction Manual

Model: DSCH5 | Brand: Sony

INTRODUCTION

Welcome to the instruction manual for your Sony Cybershot DSC-H5 Digital Camera. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your camera to ensure you capture high-quality photos and videos. The DSC-H5 features a 7.2-megapixel CCD sensor, 12x Super SteadyShot optical image stabilization, a 3.0-inch LCD display, and High Sensitivity Mode (ISO 1000) for low-light conditions.

PACKAGE CONTENTS

Please ensure all items are present in your camera package:

- Sony Cybershot DSC-H5 Digital Camera
- 2 x AA-size NiMH Batteries
- Battery Charger
- USB Connection Cable
- Shoulder Strap
- Lens Cap
- Software CD-ROM
- Instruction Manual (this document)

SETUP

1. Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert the two supplied AA-size NiMH batteries according to the polarity indicators (+/-) inside the compartment.
3. Close the battery compartment cover securely.

2. Memory Card Insertion

The camera uses Memory Stick Duo or Memory Stick Duo PRO media (32 MB internal memory is included, but an external card is recommended for extended use).

1. Open the memory card slot cover, usually located near the battery compartment.
2. Insert the Memory Stick Duo or Memory Stick Duo PRO card with the label facing the correct direction (refer to the diagram inside the compartment). Push until it clicks into place.
3. Close the memory card slot cover securely.

OPERATING YOUR CAMERA

1. Powering On/Off

- To power on: Press the **POWER** button. The lens will extend, and the LCD screen will activate.
- To power off: Press the **POWER** button again. The lens will retract.

2. Taking Photos

1. Select your desired shooting mode using the mode dial (e.g., Auto, Program Auto, Scene Selection).
2. Frame your shot using the 3.0-inch LCD display.
3. Press the **Shutter** button halfway down to focus. The focus indicator will light up.
4. Press the **Shutter** button all the way down to capture the photo.

3. Recording Videos

The DSC-H5 can capture VGA (640 x 480) audio-video clips at up to 30 frames per second.

1. Turn the mode dial to the **Movie** mode.
2. Press the **Movie** button to start recording.
3. Press the **Movie** button again to stop recording.

4. Zoom Function

Utilize the 12x optical zoom for close-up shots or wider views.

- Use the **Zoom Lever** (W/T) to adjust the zoom level.
- Push the lever towards **T** (Telephoto) to zoom in.
- Push the lever towards **W** (Wide) to zoom out.

5. Image Stabilization (Super SteadyShot)

The 12x Super SteadyShot optical image stabilization helps reduce blur caused by camera shake, especially at higher zoom levels or in low light.

- This feature is typically active by default. Check your camera's menu settings to ensure it is enabled for optimal performance.

6. High Sensitivity Mode (ISO 1000)

For shooting in low-light conditions without flash, activate the High Sensitivity Mode.

- Access the camera's menu and navigate to the ISO settings.
- Select **ISO 1000** to enhance light sensitivity.

7. LCD Display

The 3.0-inch LCD display is used for framing shots, reviewing images, and navigating menus.

- Press the **DISPLAY** button to cycle through different display information options.
- Use the **Playback** button to review captured photos and videos.

MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Avoid touching the lens with your fingers.
- **Cleaning the Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water.
- **Battery Care:** Remove batteries when the camera is not in use for extended periods. Store batteries in a cool, dry place.
- **Storage:** Store the camera in a dry, dust-free environment, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

Camera Does Not Power On

- Ensure batteries are correctly inserted and fully charged.
- Try replacing batteries with fresh ones.

Images Are Blurry

- Check if the lens is clean.
- Ensure Super SteadyShot is enabled.
- Verify proper focus by pressing the shutter button halfway before fully pressing.

Memory Full Error

- Delete unnecessary photos/videos or transfer them to a computer.
- Insert a new, empty Memory Stick Duo/PRO card.

SPECIFICATIONS

Feature	Specification
Sensor Type	7.2-megapixel CCD
Optical Zoom	12x
Image Stabilization	Super SteadyShot Optical
LCD Display	3.0-inch
High Sensitivity Mode	ISO 1000
Video Recording	VGA (640 x 480) at up to 30 fps

Storage Media	Memory Stick Duo or Memory Stick Duo PRO (32 MB internal memory included)
Power Source	2 x AA-size Batteries
Product Dimensions	4.25 x 3.62 x 3.19 inches
Item Weight	16 ounces

WARRANTY AND SUPPORT

Your Sony Cybershot DSC-H5 Digital Camera comes with a**FULL 14 DAY SATISFACTION GUARANTEE** and a **FULL 90 DAY PARTS AND LABOR WARRANTY**. For support or warranty claims, please contact Sony customer service or refer to the contact information provided in your original purchase documentation.

PRODUCT IMAGES



Front view of the Sony Cybershot DSC-H5 Digital Camera, showcasing its lens and compact design.

OFFICIAL PRODUCT VIDEOS

No official seller videos are available for this product at this time.