

## jWIN JXCD977

# jWIN JXCD977 Portable MP3 CD Player Instruction Manual

Model: JXCD977

[Introduction](#)   [Safety Information](#)   [Package Contents](#)   [Product](#)  
[Overview](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for purchasing the jWIN JXCD977 Portable MP3 CD Player. This device is designed to provide high-quality audio playback from standard audio CDs, CD-R/RW discs, and MP3 CDs. It features 120-second anti-skip protection and a Bass Boost System (BBS) for enhanced sound. Please read this manual thoroughly before using the player to ensure proper operation and to maximize your listening experience.

## 2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture.
- Do not disassemble the unit. Refer servicing to qualified personnel only.
- Avoid extreme temperatures. Do not place the unit near heat sources or in direct sunlight.
- Use only the specified power adapter or batteries.
- Clean the unit with a soft, dry cloth. Do not use liquid cleaners.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- jWIN JXCD977 Portable MP3 CD Player
- Stereo Earphones
- AC Power Adapter (if included)
- Instruction Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components of your portable CD player.



Image 1: Front view of the jWIN JXCD977 Portable MP3 CD Player. The image displays the circular main body of the player, with control buttons (Play/Pause, Stop, Skip/Search, Mode) and an LCD screen visible on the top surface. The lid is closed.

### Key Features:

- Plays CD, CD-R/RW, and MP3 CD formats.
- 120-second Anti-Skip Protection for uninterrupted playback.
- Bass Boost System (BBS) for enhanced low-frequency audio.
- LCD Display for track information and player status.
- ID3 Tag display for MP3 CDs (shows file name, song title, and artist information).

## 5. SETUP

### 5.1 Powering the Unit

The JXCD977 can be powered by batteries or an AC adapter.

#### Battery Installation:

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 2 x AA batteries (not included) according to the polarity markings (+/-) inside the compartment.
3. Close the battery compartment cover securely.

*Note: When battery power is low, the unit may only operate the radio function (if applicable) and not the CD player. Replace batteries when performance degrades.*

#### AC Adapter Connection:

- Plug the AC adapter into the DC IN jack on the side of the player.
- Plug the other end of the AC adapter into a standard wall outlet.
- The unit will automatically switch to AC power when connected.

## 5.2 Connecting Headphones

Insert the stereo earphones (or other 3.5mm audio headphones) into the HEADPHONE jack on the side of the unit.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Loading a CD

1. Press the OPEN button (if present) or gently lift the CD compartment lid.
2. Place a CD with the label side facing up onto the center spindle.
3. Gently press the CD until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

### 6.2 Basic Playback

- **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
- **Stop:** Press the **STOP** button to stop playback.
- **Skip Track:** Press the **SKIP FORWARD** (>>|) or **SKIP BACKWARD** (|<<) button to skip to the next or previous track.
- **Search:** Press and hold the **SKIP FORWARD** (>>|) or **SKIP BACKWARD** (|<<) button to fast-forward or rewind within a track.
- **Volume:** Adjust the **VOLUME** control dial (if present) or buttons to your desired listening level.

### 6.3 MP3 CD Playback

When an MP3 CD is loaded, the player will read the disc and display folder/track information on the LCD. Use the SKIP buttons to navigate between tracks. The ID3 Tag feature will display song title and artist information if available on the MP3 files.

### 6.4 Anti-Skip Protection

The JXCD977 features 120-second anti-skip protection. This function buffers audio data to prevent interruptions during minor shocks or vibrations. The buffer duration may vary depending on the disc type (e.g., MP3 CDs typically have longer buffer times).

### 6.5 Bass Boost System (BBS)

Activate the Bass Boost System (BBS) by pressing the **BBS** button (if present) or by selecting the option in the MODE menu. This feature enhances the bass frequencies for a richer sound experience.

### 6.6 Mode Functions (Repeat, Random)

Press the **MODE** button repeatedly to cycle through playback modes:

- **Repeat 1:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the disc.
- **Random:** Plays tracks in a random order.
- **Intro:** Plays the first few seconds of each track (if available).

- **Normal Play:** Disables all special playback modes.

## 7. MAINTENANCE

### 7.1 Cleaning the Unit

- Wipe the exterior of the player with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the optical lens, use a specialized CD lens cleaning kit. Do not touch the lens directly.

### 7.2 Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

## 8. TROUBLESHOOTING

If you experience issues with your JXCD977, refer to the following table:

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted; AC adapter not connected or faulty.	Replace batteries or check AC adapter connection. Ensure correct battery polarity.
Disc not playing / "NO DISC" error	Disc inserted incorrectly; Disc is dirty or scratched; Disc format not supported.	Reinsert disc with label side up. Clean disc with a soft cloth. Ensure disc is CD, CD-R/RW, or MP3 CD.
Skipping during playback	Unit is subjected to excessive shock; Disc is dirty or scratched.	Avoid strong vibrations. Clean the disc. Anti-skip protection has a limit.
No sound from headphones	Headphones not fully plugged in; Volume too low; Headphones faulty.	Ensure headphones are fully inserted. Increase volume. Test with different headphones.
MP3 ID3 tags not displaying	MP3 files do not contain ID3 tag information.	This is normal if the files lack embedded tag data. Player will display file names instead.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	JXCD977
Supported Audio Format	CD, CD-R/RW, MP3
Anti-Skip Protection	120 seconds
Special Features	Anti-Skip Protection, Portable, Bass Boost System (BBS), ID3 Tag Display, LCD Display
Power Source	2 x AA Batteries or AC Adapter (DC IN)

Feature	Detail
Connectivity Technology	Auxiliary (3.5mm headphone jack)
Product Dimensions	10.25 x 7.5 x 3.5 inches
Item Weight	12.8 ounces

## 10. WARRANTY AND SUPPORT

---

jWIN products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your purchase or visit the official jWIN website.

Please retain your proof of purchase for warranty claims.