

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Robo Pet Pink Robotic Dog Instruction Manual Model 8396

Hasbro 8396

Hasbro Robo Pet Pink Robotic Dog Instruction Manual

Model: 8396

1. INTRODUCTION

The Hasbro Robo Pet Pink Robotic Dog, Model 8396, is an interactive electronic pet designed to provide engaging play. This robotic dog combines user-controlled movements with autonomous behaviors, offering a dynamic and responsive experience. It is designed to interact with its environment and owner, simulating the actions of a real pet.

Key Features:

- Realistic actions and interactive personality.
- Trainable and Programmable functions.
- Compact size for portability.

2. SAFETY INFORMATION

- **Age Recommendation:** This product is recommended for ages 8 years and up.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Insert batteries with correct polarity. Remove exhausted batteries promptly. Do not short-circuit the supply terminals.
- **Small Parts:** This product contains small parts and is not suitable for children under 3 years of age due to choking hazards.
- **Supervision:** Adult supervision is recommended during play.

3. PACKAGE CONTENTS

Please ensure all items are present in the package:

- Robo Pet Pink Robotic Dog (Model 8396)
- Remote Controller
- Instruction Manual (this document)

4. SETUP

4.1 Battery Installation for Robo Pet

1. Locate the battery compartment on the underside of the Robo Pet.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 4 x AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Figure 4.1: Underside of Robo Pet with battery compartment.

4.2 Battery Installation for Remote Controller

1. Locate the battery compartment on the back of the remote controller.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 x AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



5. OPERATING YOUR ROBO PET

5.1 Turning On/Off

To turn on the Robo Pet, locate the power switch, usually on its underside or back, and slide it to the 'ON' position. To turn off, slide the switch to 'OFF'.

5.2 Remote Controller Functions

The remote controller allows you to direct your Robo Pet's movements and activate various functions. Familiarize yourself with the buttons:



Figure 5.1: Robo Pet Remote Controller.

- **Directional Pad (Arrows):** Controls forward, backward, left, and right movement.
- **Zz Button:** Activates sleep mode.
- **Home Button:** Commands the pet to return to a default or 'home' position/behavior.
- **P (Program) Button:** Initiates programming mode for custom sequences.
- **Star Button:** Activates special tricks or actions.

- **WiFi/Signal Button:** May indicate connection status or activate a specific wireless function.
- **D Button:** Function may vary; refer to specific programming instructions.
- **Emotion Buttons (Happy, Neutral, Sad):** May influence the pet's displayed mood or reaction.
- **Target Button:** May activate a tracking or target-following behavior.

5.3 Autonomous Behavior

When left alone, the Robo Pet will exhibit various autonomous behaviors, exploring its surroundings and reacting to stimuli. These behaviors are part of its simulated personality.

5.4 Training and Programming

The Robo Pet is trainable and programmable. Use the 'P' button on the remote to enter programming mode. Follow the sequence of commands to teach your pet new actions. Refer to the specific programming guide for detailed instructions on creating custom routines.

6. MAINTENANCE

6.1 Cleaning

To clean your Robo Pet, gently wipe its surface with a dry, soft cloth. Do not use water or cleaning solutions, as this can damage the electronic components. Avoid getting dust or debris into moving parts.

6.2 Battery Replacement

Replace batteries when the Robo Pet or remote controller shows signs of reduced performance, such as slow movement or unresponsive controls. Follow the battery installation steps in Section 4.

6.3 Storage

When not in use for extended periods, turn off the Robo Pet and remote controller. Remove all batteries to prevent leakage and corrosion. Store the product in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Robo Pet does not turn on.	Batteries are dead or incorrectly installed. Power switch is off.	Check battery polarity and replace with fresh batteries. Ensure power switch is in 'ON' position.
Robo Pet does not respond to remote.	Remote batteries are dead. Pet and remote are out of range. Interference.	Replace remote batteries. Ensure pet and remote are within operating range. Move away from other electronic devices.
Robo Pet moves slowly or erratically.	Low batteries in Robo Pet. Obstruction in moving parts.	Replace Robo Pet batteries. Check for and remove any debris in joints or wheels.

8. SPECIFICATIONS

- **Model Number:** 8396
- **Product Dimensions:** 10 x 4 x 6 inches
- **Item Weight:** 1.5 pounds

- **Robo Pet Power:** 4 x AAA batteries (not included)
- **Remote Controller Power:** 3 x AAA batteries (not included)
- **Manufacturer:** WowWee
- **Recommended Age:** 8 years and up

9. WARRANTY AND SUPPORT

This product is covered by a limited warranty against manufacturing defects. For detailed warranty information, please refer to the warranty card included with your purchase or visit the manufacturer's official website. For technical support, replacement parts, or further assistance, please contact WowWee customer service.

Manufacturer: WowWee

Please retain this manual for future reference.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000ERVM2Y>

More documents and user manuals: <https://manuals.plus/>