

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Mattel](#) /
- › [Mattel Disney DVD Bingo Game Instruction Manual H7367](#)

Mattel H7367

Mattel Disney DVD Bingo Game Instruction Manual

Model: H7367 | Brand: Mattel

1. INTRODUCTION

The Mattel Disney DVD Bingo game offers an interactive way to enjoy the classic game of Bingo with a Disney twist. This game is designed to help players learn numbers, colors, and matching skills through engaging Disney characters and movie clips.

The objective is to match the numbers or characters displayed on the screen to those on your Bingo board. The first player to complete a designated pattern and call out "Bingo!" wins the round.



The image displays the packaging for the Mattel Disney DVD Bingo game. The box features Mickey Mouse on the left, pointing towards the game's title. Various Disney characters like Belle, Ursula, Pumbaa, and Timon are visible on the right. In the center, a DVD disc and several bingo cards with Disney characters and numbers are shown. The box highlights that the game includes Disney movie clips and is suitable for family fun.

Key Features:

- Interactive DVD gameplay with Disney movie clips.
- Aids in learning numbers, colors, and matching skills.
- Suitable for family play.
- Recommended for ages 4 and up.

2. SETUP

Before starting the game, ensure all components are present and prepare your playing area.

Components:

- 1 Disney DVD Bingo Game Disc
- Bingo Boards (various designs)
- Bingo Markers/Chips

Preparation:

1. Distribute one Bingo board to each player.
2. Provide each player with a sufficient number of Bingo markers/chips.
3. Insert the Disney DVD Bingo game disc into your DVD player.
4. Ensure your television or display is connected and powered on.

3. OPERATING INSTRUCTIONS

Follow these steps to play the Mattel Disney DVD Bingo game:

1. **Start the Game:** Once the DVD is inserted, navigate the on-screen menu using your DVD remote control. Select "Play Game" to begin.
2. **Game Modes:** The game may offer different modes of play, such as matching by character, color, or numbers/letters. Select your preferred mode from the menu.
3. **Follow the Caller:** The DVD will act as the caller, displaying Disney characters, colors, or numbers/letters, often accompanied by short movie clips.
4. **Mark Your Board:** When a character, color, or number/letter displayed on the screen matches one on your Bingo board, place a marker/chip on that space.
5. **Wild Segments:** Pay attention to any "wild" segments or special instructions that may appear on the screen, as these can help complete your board faster.
6. **Call Bingo:** The first player to successfully mark a complete line (horizontal, vertical, or diagonal) or other designated pattern on their board must shout "Bingo!"
7. **Verify Bingo:** Pause the DVD and verify the winning player's board against the called items. If correct, that player wins the round.
8. **Continue Playing:** Clear the boards and start a new round, or exit the game via the DVD menu.

4. MAINTENANCE

Proper care will ensure the longevity of your Disney DVD Bingo game.

- **DVD Care:** Handle the DVD disc by its edges. Store it in its case when not in use to prevent scratches. Clean the disc with a soft, lint-free cloth, wiping from the center outwards if smudges occur.
- **Board and Chip Care:** Keep Bingo boards and markers/chips clean and dry. Store them in the original game box or a suitable container to prevent loss or damage.
- **Storage:** Store the entire game in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues while playing, refer to the following common solutions:

- **DVD Not Playing:**
 - Ensure the DVD is inserted correctly into the DVD player.
 - Check the disc for smudges or scratches and clean if necessary.
 - Verify your DVD player is functioning correctly with other discs.
- **Game Repeats Patterns:** Some users have noted that the game may start with similar patterns or video clip sequences in consecutive plays. This is a characteristic of the game's programming and not a malfunction.
- **Missing Components:** If any game components are missing upon unboxing, check the packaging thoroughly. Contact the retailer or manufacturer if items are genuinely absent.
- **Audio/Video Issues:** Ensure your DVD player is properly connected to your TV and that volume is adjusted. Check TV input settings.

6. SPECIFICATIONS

Model Number	H7367
Brand	Mattel
Age Range	Kid (48 months and up)
Number of Players	2-6
Educational Objective	Learning numbers, colors, and matching skills
Operation Mode	Manual (DVD-driven)
Power Source	Battery (for DVD remote, not game itself)
Item Weight	1.6 Pounds
Item Dimensions	2 x 7.9 x 10.5 inches

7. WARRANTY INFORMATION

No specific manufacturer warranty description is provided for this product. Please refer to the retailer's return policy at the point of purchase for details regarding returns or exchanges.

8. SUPPORT

For further assistance or inquiries regarding your Mattel Disney DVD Bingo game, please visit the official Mattel website or contact their customer support services. Contact information can typically be found on the Mattel corporate website or on the product packaging.