

[Manuals.plus](#) /

› [Wahl Professional](#) /

› Wahl Professional Sterling Mag Trimmer Blade Instruction Manual

Wahl Professional 2111

Wahl Professional Sterling Mag Trimmer Blade Instruction Manual

Model: 2111

1. PRODUCT OVERVIEW

The Wahl Professional Sterling Mag Trimmer Blade (Model 2111) is a high-precision, quick-detach replacement blade designed for professional use. It ensures sharp and accurate trimming performance.



Image: Front view of the Wahl Professional Sterling Mag Trimmer Blade, Model 2111.



Mag/Beret Trimmer Blade

MODEL 02111



*Quick-Detach Blade
makes it easy to
remove for cleaning
and maintenance*

*Ensures sharp
performance for
professional
results*

*High-quality replacement blade designed
for precision and durability*

Image: The Wahl Mag/Beret Trimmer Blade highlighting its quick-detach feature for easy cleaning and maintenance, and its design for sharp professional results.

2. COMPATIBILITY

This replacement blade is specifically designed to fit the following Wahl Professional trimmers:

- Wahl Sterling Mag Trimmer (Model #8779)
- Wahl Beret Trimmer (Model #8841)

Blade Fits



STERLING MAG
MODEL 08779



BERET
MODEL 8841

Image: Visual representation of the Sterling Mag Trimmer (Model 08779) and Beret Trimmer (Model 8841), indicating blade compatibility.

3. INSTALLATION AND SETUP

Follow these steps to properly install the replacement blade on your compatible Wahl Professional trimmer:

1. **Power Off:** Ensure your trimmer is turned off and unplugged from any power source before attempting blade replacement.
2. **Remove Old Blade:** Gently push the old blade assembly forward and away from the trimmer body. It should detach easily due to its quick-detach design.
3. **Clean Trimmer Head:** Use a small brush to remove any hair or debris from the trimmer head and motor area.
4. **Align New Blade:** Align the new Wahl Professional Sterling Mag Trimmer Blade with the trimmer's blade housing. Ensure the small tab on the back of the blade aligns with the corresponding slot on the trimmer.
5. **Attach Blade:** Press the blade firmly onto the trimmer until it clicks securely into place. Do not force it.
6. **Test:** Turn on the trimmer briefly to ensure the blade is properly seated and moves smoothly.



Detachable

Easy to remove and clean.
Made in the USA.

Image: A hand demonstrating the quick-detach mechanism of a trimmer blade from the main trimmer body, illustrating the ease of removal and installation.

4. OPERATING GUIDELINES

Once installed, the blade operates as part of your Wahl Professional Sterling Mag or Beret Trimmer. For optimal performance and longevity of the blade, consider the following:

- **Clean Hair:** Ensure hair is clean and dry before trimming to prevent blade dulling and pulling.
- **Proper Angle:** Hold the trimmer at the recommended angle for the desired cut, typically flat against the skin for close trimming.
- **Gentle Pressure:** Apply light, consistent pressure. Excessive force can cause irritation or damage to the blade.
- **Regular Breaks:** For extended use, allow the trimmer to cool down periodically to prevent overheating, which can affect blade performance.

5. MAINTENANCE

Proper maintenance is crucial for extending the life and maintaining the sharpness of your Wahl Professional Trimmer Blade:

- **Cleaning After Each Use:**

- a. Turn off and unplug the trimmer.
- b. Detach the blade.
- c. Use a small brush (often included with trimmers) to brush away loose hair from the blade teeth and the trimmer head.
- d. For thorough cleaning, use a blade disinfectant and cleaner like Wahl Clini-Clip Spray.

- **Oiling Blades:**

- a. After cleaning, apply 2-3 drops of Wahl Clipper Oil across the top of the blade teeth.
- b. Apply 1 drop on each side of the blade, where the moving blade meets the stationary blade.
- c. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
- d. Wipe off any excess oil with a clean cloth.

Note: Oil blades before and after each use, or at least daily, to ensure smooth operation and prevent rust.



Image: Essential maintenance products: Wahl Clini-Clip Spray for disinfection and cleaning, and Wahl Oil for blade lubrication.

6. TROUBLESHOOTING

If you encounter issues with your Wahl Professional Trimmer Blade, consider the following common solutions:

Problem	Possible Cause	Solution
Blade pulling or snagging hair	Dull blade, lack of oil, hair buildup, misaligned blade.	Clean and oil the blade. Ensure proper alignment. If dull, replace the blade.
Blade not cutting effectively	Blade is dull, not properly seated, or excessive hair buildup.	Clean and oil the blade. Re-seat the blade firmly. Replace if dull.
Excessive noise or vibration	Lack of lubrication, loose blade, or internal trimmer issue.	Oil the blade. Ensure the blade is securely attached. If the issue persists, consult your trimmer's manual or contact Wahl Professional support.

7. SPECIFICATIONS

Feature	Detail
Model Number	2111
UPC	043917211107
Product Dimensions	0.5 x 1.25 x 1.5 inches
Item Weight	0.64 ounces (18.14 g)
Material	Edelstahl (Stainless Steel)
Color	Gray
Manufacturer	Wahl Professional

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or to purchase additional accessories, please contact Wahl Professional directly or visit their official website. Ensure you have your product model number (2111) and any purchase details available when seeking support.

Wahl Professional Contact Information:

- [Wahl Professional Official Website](#)
- Refer to your original trimmer manual for specific warranty details related to the overall unit.

