



[Manuals.plus](#) /

› [Sonic Alert](#) /

› Sonic Alert SB1000SS Sonic Boom Alarm Clock User Manual

## Sonic Alert SB1000

# Sonic Alert SB1000SS Sonic Boom Alarm Clock User Manual

Model: SB1000

## INTRODUCTION

The Sonic Alert SB1000SS Sonic Boom Alarm Clock is designed to provide a powerful and customizable wake-up experience. It features a loud pulsating audio alarm, flashing lights, and a bed shaker to ensure even deep sleepers are alerted. The clock includes adjustable volume and tone controls, a large green LED display with adjustable viewing angle, and a battery backup for power outages. It also has a built-in receiver for compatibility with other Sonic Alert signalers, eliminating the need for separate devices for alerts like baby cries or doorbells.



Figure 1: Front view of the Sonic Alert SB1000SS Sonic Boom Alarm Clock, displaying the time and control buttons.

## SETUP

- Power Connection:** Plug the alarm clock's power cord into a standard 120V AC electrical outlet. The display will illuminate.
- Battery Backup (Optional but Recommended):** For uninterrupted operation during power outages, install one 9V battery (not included) into the battery compartment located on the bottom of the unit. This battery maintains time and alarm settings.
- Connect Bed Shaker:** Insert the plug of the SS12VW Super Shaker bed vibrating unit into the designated port on the back of the alarm clock. Place the shaker under your mattress or pillow.
- Lamp Connection (Optional):** To utilize the flashing lamp alert, plug a lamp into the 120V lamp connection input located on the back of the alarm clock. Ensure the lamp is switched on.

**“AN AMERICAN COMPANY  
FOR OVER 40 YEARS”**



**EXCELLENT CUSTOMER SERVICE  
LOCATED IN THE USA!**

Figure 2: Rear view of the Sonic Alert SB1000SS Sonic Boom Alarm Clock, showing ports for the bed shaker and lamp connection.

## **OPERATING INSTRUCTIONS**

### **Setting the Time**

1. Press and hold the **TIME** button.
2. While holding **TIME**, press the **HOUR** button to adjust the hour. Observe the PM indicator for correct AM/PM setting.
3. While holding **TIME**, press the **MINUTE** button to adjust the minutes.
4. Release the **TIME** button to set the current time.

### **Setting the Alarm**

1. Press and hold the **ALARM** button.
2. While holding **ALARM**, press the **HOUR** button to adjust the alarm hour.
3. While holding **ALARM**, press the **MINUTE** button to adjust the alarm minutes.
4. Release the **ALARM** button to set the alarm time.
5. To activate the alarm, ensure the **ALARM ON/OFF** switch is in the 'ON' position.

## Adjusting Alarm Features

- **Volume Control:** Use the **VOLUME** dial on the side of the clock to adjust the loudness of the audio alarm.
- **Tone Control:** Use the **TONE** dial on the side of the clock to adjust the pitch of the audio alarm.
- **Snooze Function:** When the alarm sounds, press the large **SNOOZE** button to temporarily silence the alarm for approximately 9 minutes.
- **Alarm Duration:** The alarm duration is user-selectable. Refer to the specific controls on your unit for adjustment.
- **Test Button:** A test button is located on the unit to allow you to preview the combination of flashing lights, bed shaking, and audio alarm. Ensure the alarm is set and active before testing.

## MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use liquid cleaners or abrasive chemicals.
- **Battery Replacement:** Replace the 9V battery annually to ensure reliable backup power.
- **Storage:** If storing the clock for an extended period, remove the 9V battery to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank.	No power or power outage.	Check power cord connection. If power is out, ensure 9V battery is installed and charged.
Alarm does not sound/vibrate/flash.	Alarm not set, alarm off, volume too low, bed shaker/lamp not connected or faulty.	Verify alarm time is set correctly. Ensure <b>ALARM ON/OFF</b> switch is 'ON'. Adjust volume. Check bed shaker and lamp connections.
Time/Alarm settings reset after power outage.	9V backup battery is dead or not installed.	Install a fresh 9V battery.
Buttons are unresponsive.	Temporary electronic glitch.	Unplug the unit for 30 seconds, then plug it back in. If problem persists, contact support.

## SPECIFICATIONS

- **Brand:** Sonic Alert
- **Model Number:** SB1000
- **Color:** White
- **Display Type:** Digital
- **Special Features:** Alarm, Auto Dimmable, Snooze, Adjustable Tone & Volume, Built-in Receiver, Lamp Connection
- **Product Dimensions:** 8.8"W x 4.9"H
- **Item Weight:** 16 ounces
- **Power Source:** Battery Powered (for backup), AC Power (main)
- **Batteries Required:** 1 x 9V (not included)
- **Mounting Type:** Tabletop

- **Frame Material:** Plastic
- **Alarm Loudness:** 113 dB (maximum)

## WARRANTY INFORMATION

---

The Sonic Alert SB1000SS Sonic Boom Alarm Clock comes with a **5-year warranty** covering both parts and labor. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official Sonic Alert website or contact customer support.

## SUPPORT

---

For further assistance, technical support, or to inquire about replacement parts, please visit the official Sonic Alert website or contact their customer service department. You can often find contact information and FAQs on the brand's dedicated support pages.