

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Disney](#) /
- › [High School Musical \(Encore Edition\) DVD Instruction Manual](#)

Disney 2260177

High School Musical (Encore Edition) DVD Instruction Manual

Model: 2260177

[Introduction](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

INTRODUCTION

This manual provides comprehensive instructions for the High School Musical (Encore Edition) DVD. It covers essential information regarding disc playback, accessing special features, proper care, and troubleshooting common issues to ensure an optimal viewing experience. The Encore Edition includes the original movie along with exclusive bonus content.

SETUP

1. Unboxing and Inspection

Carefully remove the DVD from its packaging. Inspect the disc for any visible damage, scratches, or smudges. A clean, undamaged disc ensures proper playback.

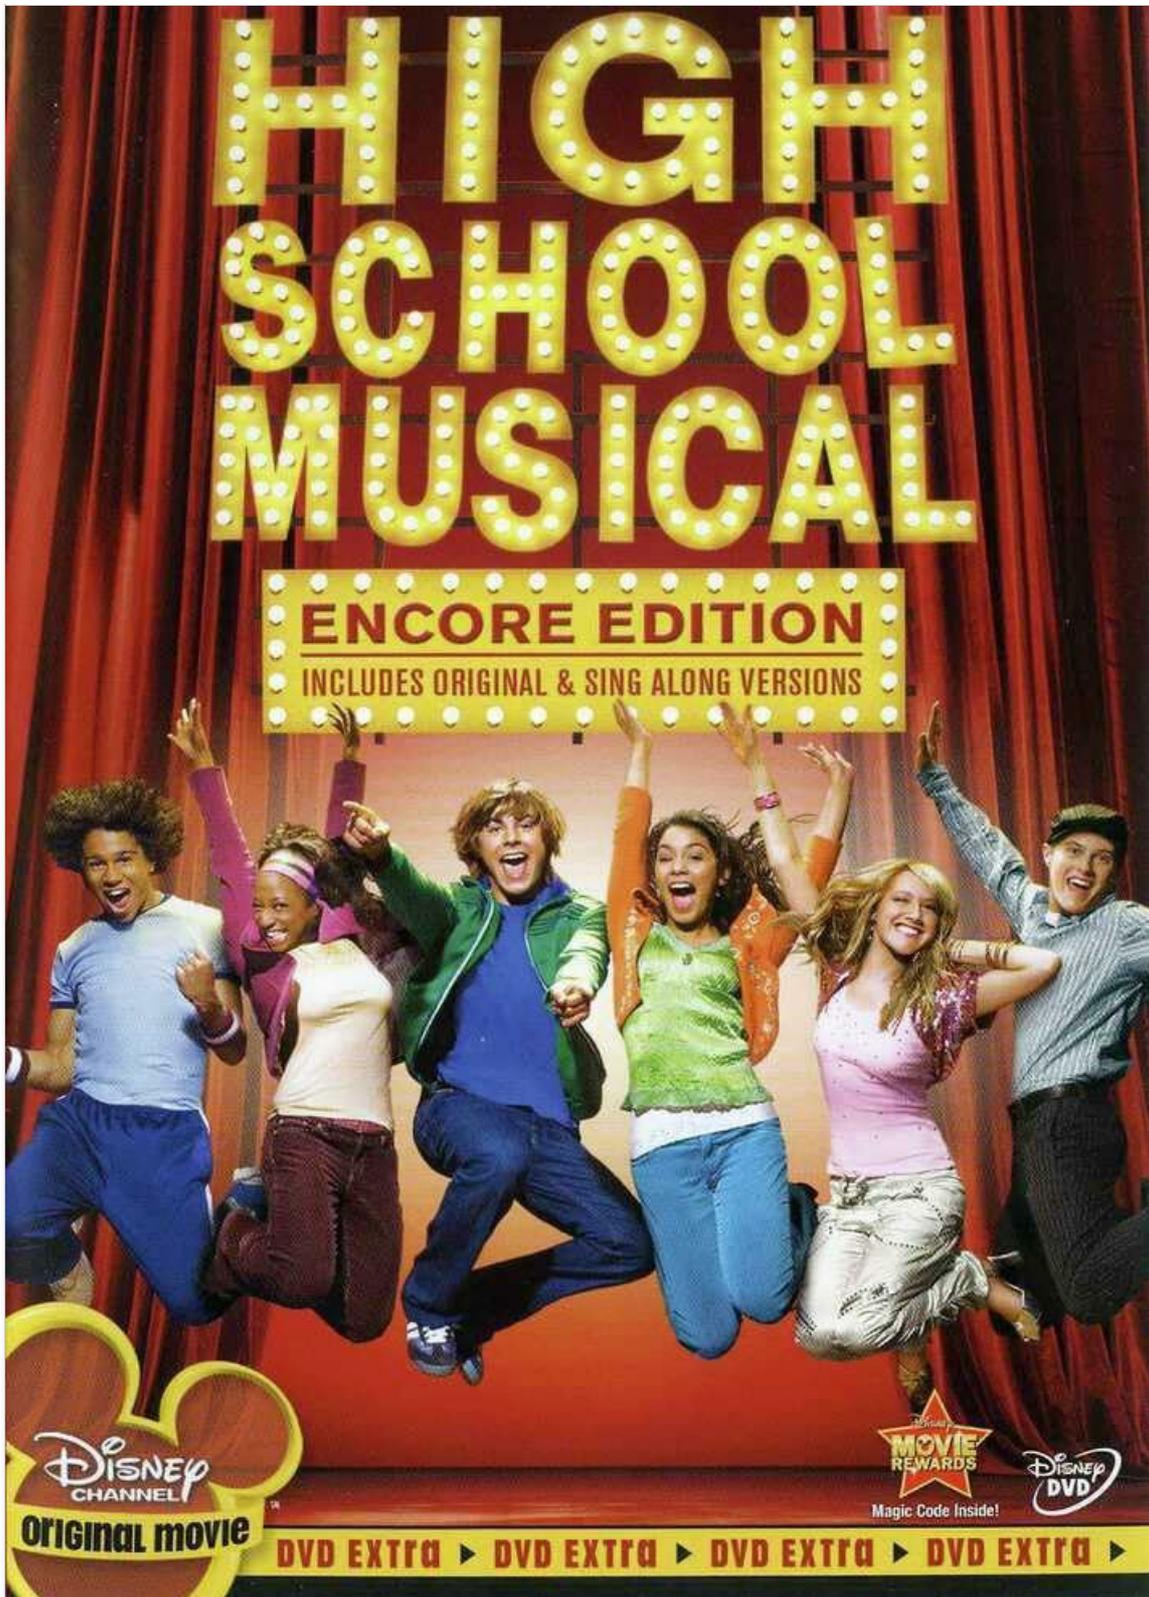


Image: Front cover of the High School Musical Encore Edition DVD case, featuring the main cast jumping in front of a red curtain with "HIGH SCHOOL MUSICAL ENCORE EDITION" in marquee lights.

2. Connecting Your DVD Player

Ensure your DVD player is correctly connected to your television or display device. Refer to your DVD player's instruction manual for specific connection details (e.g., HDMI, RCA cables).

3. Inserting the DVD

Open the DVD tray or slot on your DVD player. Hold the disc by its edges to avoid touching the playback surface. Insert the disc with the label side facing up into the DVD player. Close the tray or ensure the disc

is fully inserted into the slot.

OPERATING INSTRUCTIONS

1. Powering On and Menu Navigation

Turn on your television and DVD player. Select the correct input source on your television. The DVD menu should appear automatically. Use your DVD player's remote control to navigate the menu options (e.g., Play Movie, Scene Selections, Bonus Features).

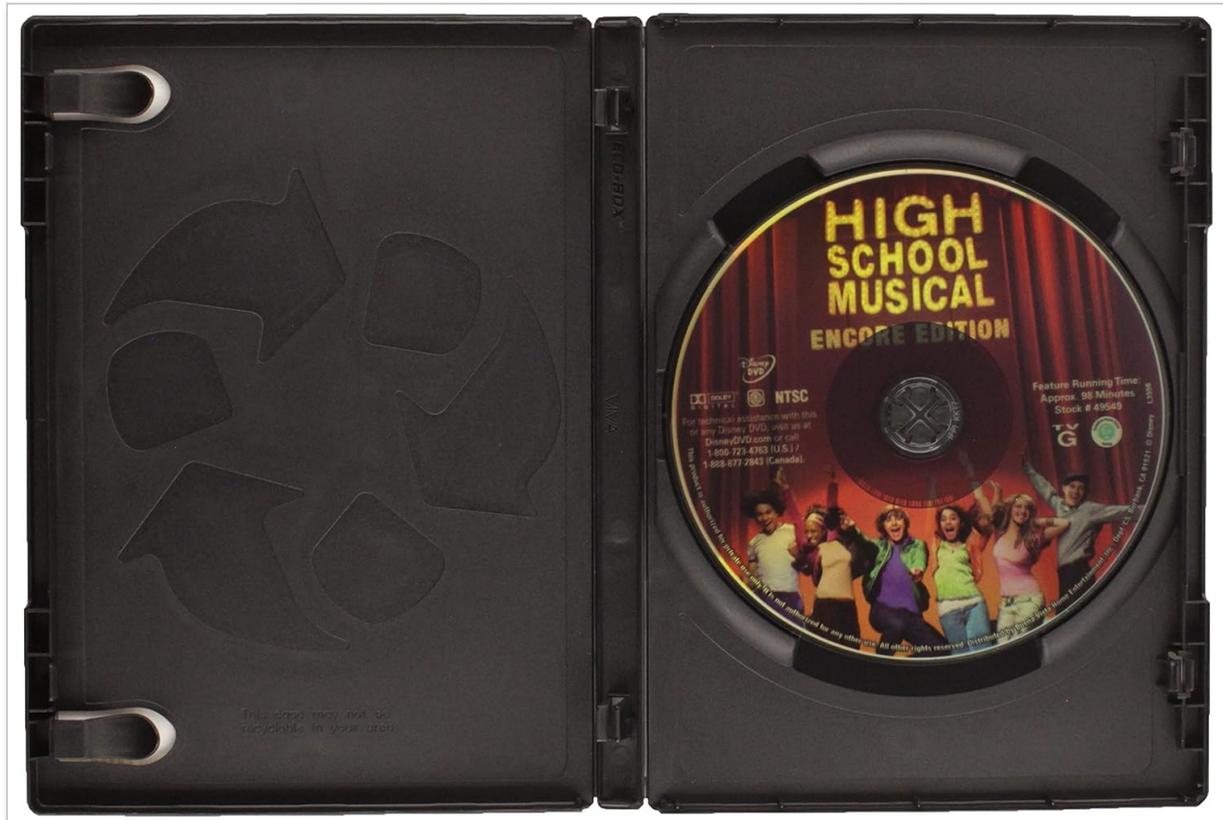


Image: The High School Musical Encore Edition DVD disc, featuring the main cast, resting inside its open black case. The disc label shows "HIGH SCHOOL MUSICAL ENCORE EDITION".

2. Playing the Main Feature

Select "Play Movie" from the main menu to start the film. You can pause, fast-forward, rewind, and stop playback using your remote control.

3. Accessing Bonus Features

The Encore Edition DVD includes several bonus features. Navigate to the "Bonus Features" or "Special Features" section on the main menu. Available features include:

- **Learning The Moves Featurette:** Led by Director/Choreographer Kenny Ortega, this featurette provides insights into the dance routines.
- **Never-Before-Seen Music Video:** "I Can't Take My Eyes Off Of You"
- **Music Video:** "We're All In This Together"
- **Behind-The-Scenes Featurette:** Offers a look into the making of the movie.
- **Sing-Along Versions:** The DVD includes sing-along versions of the songs, allowing viewers to participate.

4. Language and Subtitle Selection

From the main menu or during playback, you can usually access options for language (audio) and subtitles. The DVD supports English audio (Dolby Digital 5.1) and English subtitles.

MAINTENANCE AND CARE

1. Cleaning the Disc

If the disc has smudges or fingerprints, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.

2. Storage

Store the DVD in its original case in a cool, dry place away from direct sunlight and extreme temperatures. Avoid stacking discs without their cases, as this can lead to scratches.

TROUBLESHOOTING

1. Disc Not Playing or Skipping

- **Clean the Disc:** Refer to the "Cleaning the Disc" section.
- **Check Disc Orientation:** Ensure the disc is inserted correctly (label side up).
- **Restart Player:** Turn off your DVD player, unplug it for a few minutes, then plug it back in and restart.
- **Try Another Player:** Test the disc in a different DVD player to determine if the issue is with the disc or your player.

2. No Audio or Video

- **Check Connections:** Verify all cables (HDMI, RCA) between your DVD player and TV are securely connected.
- **Select Correct Input:** Ensure your TV is set to the correct input source for your DVD player.
- **Adjust Volume:** Check the volume level on both your TV and DVD player.
- **Audio Settings:** Access the audio settings on your DVD player and TV to ensure they are configured correctly (e.g., Dolby Digital 5.1).

SPECIFICATIONS

Feature	Detail
Title	High School Musical (Encore Edition)
Model Number	2260177
ASIN	B000F2BNW2
Director	Kenny Ortega
Writers	Peter Barsocchini

Feature	Detail
Actors	Zac Efron, Vanessa Anne Hudgens, Ashley Tisdale, Lucas Grabeel, Alyson Reed
Studio	Buena Vista Home Entertainment / Disney
Release Date	May 23, 2006
Run Time	1 hour and 38 minutes
Media Format	Color, Dolby, Multiple Formats, NTSC
Aspect Ratio	1.33:1
MPAA Rating	G (General Audience)
Language	English (Dolby Digital 5.1)
Subtitles	English
Number of Discs	1
Product Dimensions	5.5 x 7.5 x 0.75 inches
Item Weight	3.21 ounces

WARRANTY INFORMATION

This DVD is produced by Buena Vista Home Entertainment / Disney. For information regarding any manufacturing defects or issues not resolved by troubleshooting, please refer to the standard warranty policies provided by the manufacturer at the time of purchase. Typically, media products are covered against manufacturing defects for a limited period.

CUSTOMER SUPPORT

For further assistance or inquiries regarding the High School Musical (Encore Edition) DVD, please contact Buena Vista Home Entertainment / Disney customer support. Contact details can typically be found on the official Disney website or on the DVD packaging itself.