

[Manuals.plus](#) /

› [Moen](#) /

› Moen L4601 Chateau 4-Inch Centerset Single Handle Low-Arc Bathroom Faucet without Drain Assembly, Chrome

Moen L4601

Moen L4601 Chateau Bathroom Faucet User Manual

Model: L4601 | Brand: Moen

PRODUCT OVERVIEW

The Moen L4601 Chateau 4-Inch Centerset Single Handle Low-Arc Bathroom Faucet features a classic design with soft, clean curves and modern, rounded styling. This faucet is designed for ease of use and is manufactured in the United States. It is a single-handle, low-arc faucet with a chrome finish, suitable for bathroom sinks.




Figure 1: Moen L4601 Chateau Faucet, Chrome Finish.

INSTALLATION AND SETUP

This faucet is designed for deck mount installation on 4-inch centers with a 3-hole configuration. Ensure your sink is compatible with these specifications before beginning installation.

Will this faucet fit my sink?

This faucet fits a three hole configuration.

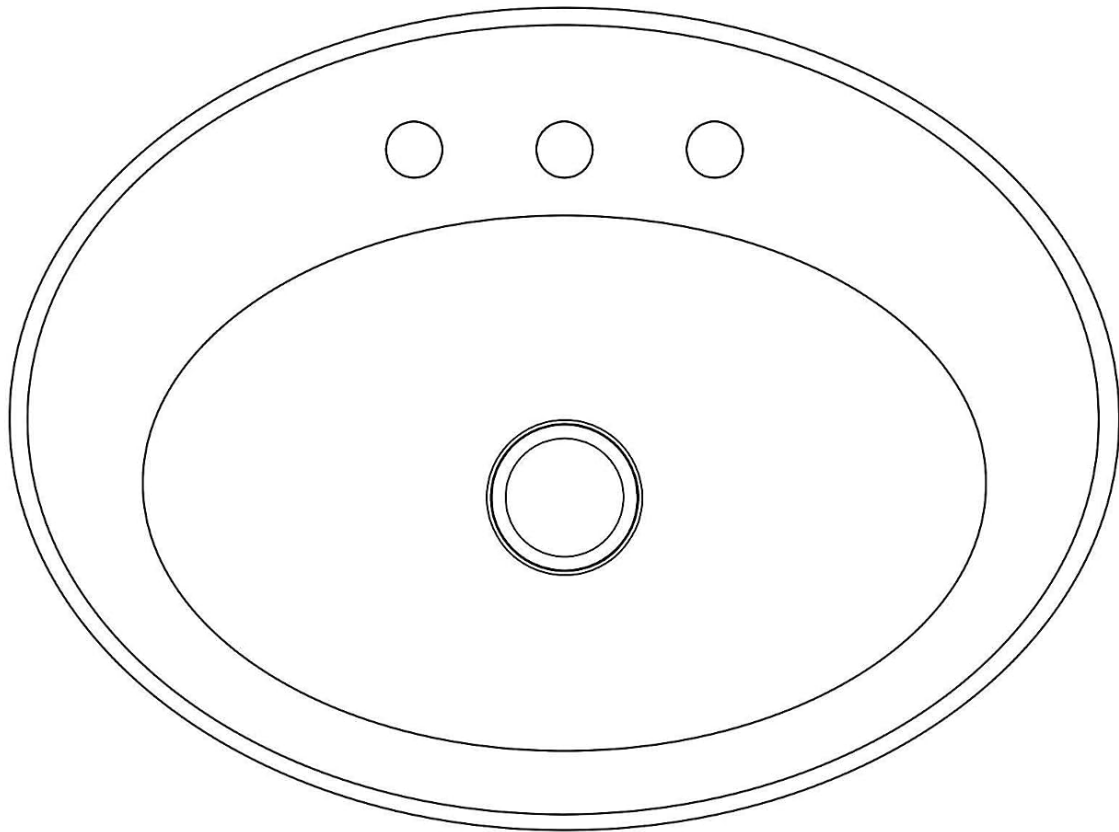

MOEN

Figure 2: Sink compatibility diagram for 3-hole, 4-inch centerset installation.

For detailed installation instructions, please refer to the official user guide PDF available [here](#).

OPERATING INSTRUCTIONS

The Moen L4601 faucet features a single lever handle for controlling both water flow and temperature. The handle operates smoothly for precise adjustments.

- To turn on the water, lift the lever handle upwards.
- To increase water flow, lift the handle higher.
- To adjust temperature, move the handle left for hot water (indicated by a red dot) and right for cold water (indicated by a blue dot).
- To turn off the water, push the lever handle downwards to its original position.





Figure 3: Faucet installed and in operation.

MAINTENANCE

To maintain the chrome finish and ensure optimal performance of your Moen L4601 faucet, follow these guidelines:

- **Cleaning:** Clean the faucet regularly with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- **Water Spots:** Wipe the faucet dry after each use to prevent water spots and mineral buildup, especially in hard water areas.
- **Aerator:** Periodically unscrew and clean the aerator at the tip of the spout to remove any debris or mineral deposits that may affect water flow.

TROUBLESHOOTING

If you encounter issues with your Moen L4601 faucet, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator or mineral buildup.	Remove and clean the aerator. Check water supply lines for kinks or blockages.
Leaking from Spout	Worn out O-rings or cartridge.	Contact Moen customer support for replacement parts or professional assistance.

Problem	Possible Cause	Solution
Difficulty Adjusting Temperature	Cartridge issue or mineral deposits affecting movement.	Ensure handle is properly seated. If problem persists, the cartridge may need replacement.

For more complex issues, it is recommended to consult a qualified plumber or contact Moen customer support.

SPECIFICATIONS

Feature	Detail
Brand	Moen
Model Name	Chateau
Model Number	L4601
Recommended Uses	Bathroom
Mounting Type	Deck Mount
Hole Count	3
Handle Type	Lever
Number of Handles	1
Finish Type	Chrome
Material	Metal
Color	Chrome
Spout Design	Low Arc
Spout Height	2 Inches
Spout Reach	4.36 Inches
Maximum Flow Rate	1.2 Gallons Per Minute
Water Consumption	1.5 Gallons per Minute
Valve Type	Disc Valve
Certification	WaterSense
Item Weight	2.09 Pounds
Product Dimensions	11.62 x 6.25 x 4.88 inches
Manufactured In	United States
Discontinued	Yes

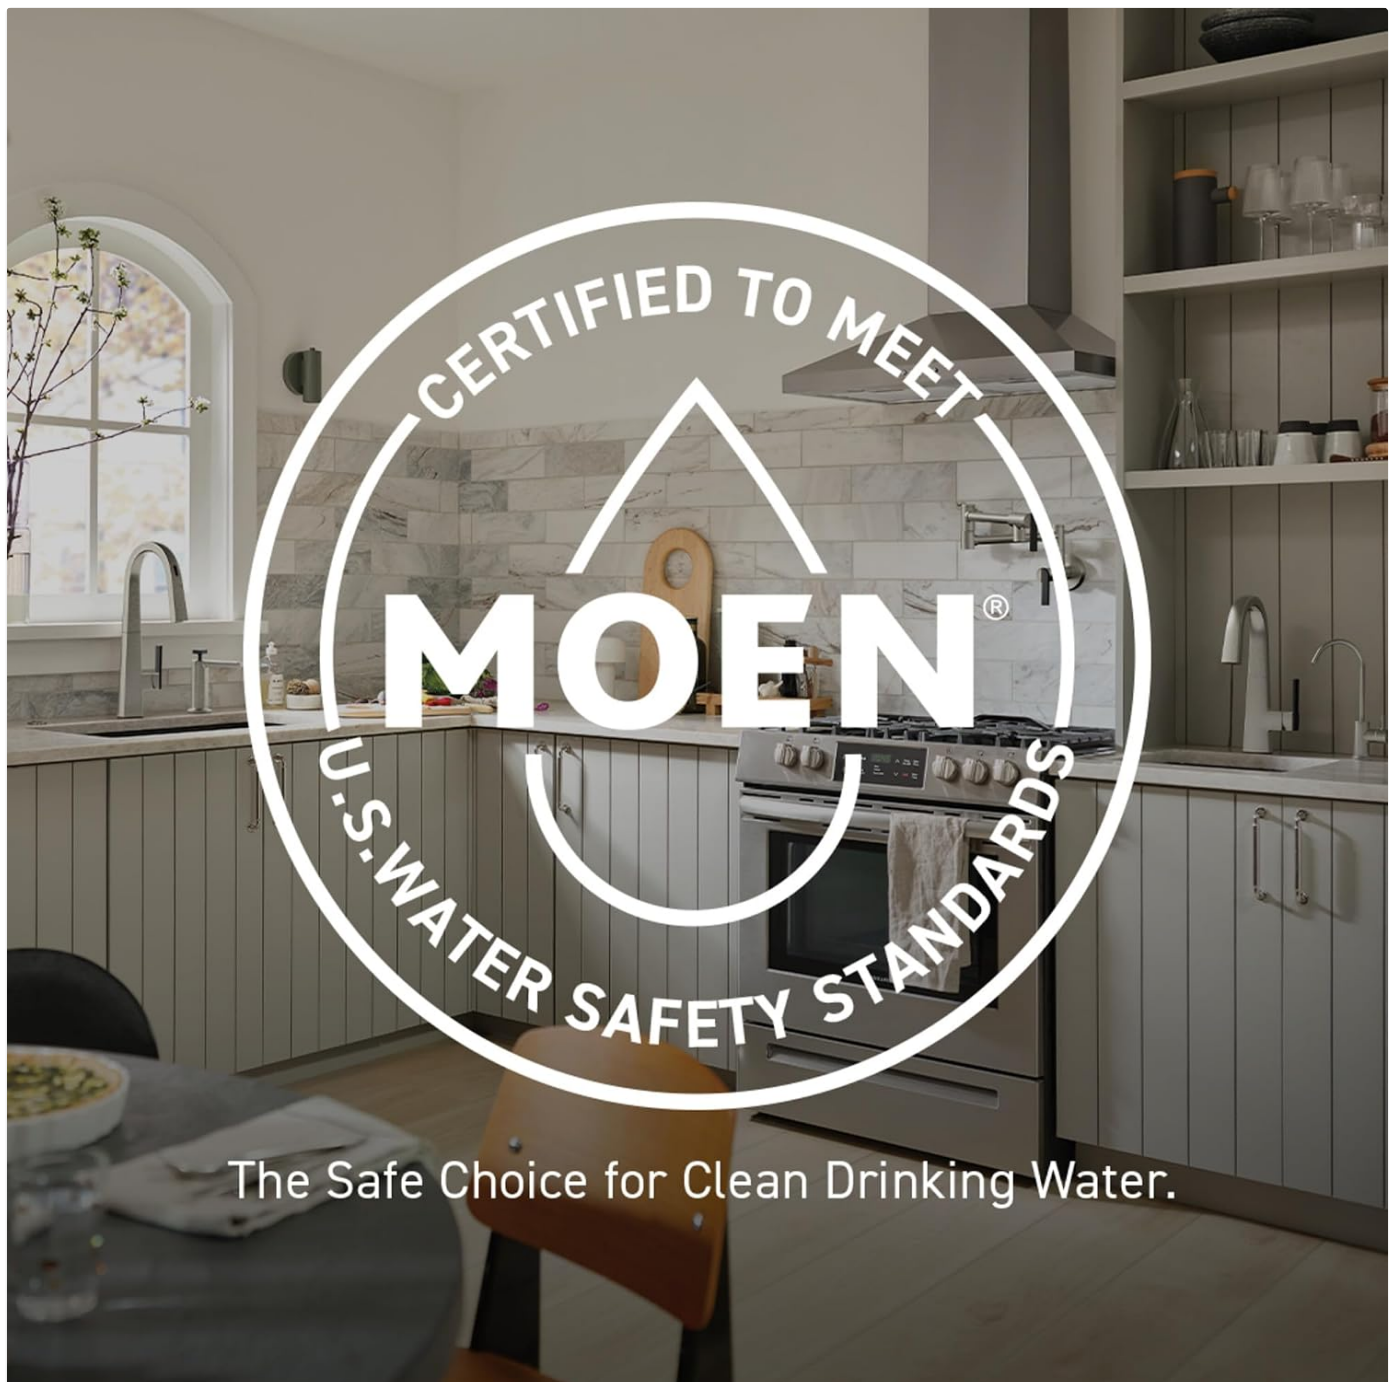


Figure 4: Moen's certification for U.S. Water Safety Standards.

WARRANTY INFORMATION

The Moen L4601 Chateau Bathroom Faucet is backed by a **Limited Lifetime Warranty**. For specific terms, conditions, and to make a warranty claim, please refer to the official Moen warranty documentation or contact Moen customer support directly.

SUPPORT

For additional assistance, technical support, or to order replacement parts, please visit the official Moen website or contact their customer service department. You can also refer to the comprehensive [User Guide \(PDF\)](#) for detailed diagrams and instructions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question