

## Onkyo DX-C390

# Onkyo DX-C390 6-Disc CD Carousel Changer Instruction Manual

## INTRODUCTION

Thank you for choosing the Onkyo DX-C390 6-Disc CD Carousel Changer. This manual provides essential information for the proper setup, operation, and maintenance of your new audio component. Designed for high-fidelity audio playback, the DX-C390 offers convenient 6-disc capability, advanced audio processing, and versatile playback options for your Audio CDs, MP3 CDs, and CD-R/RWs.

Please read this manual thoroughly before using the unit to ensure optimal performance and safety.

## SAFETY INFORMATION

- **Power Supply:** Before connecting the unit, ensure that the voltage in your area matches the voltage requirements printed on the unit's rear panel (e.g., AC 120 V, 60 Hz for North American models; AC 230 V, 50 Hz for other models).
- **Ventilation:** Ensure adequate ventilation around the unit to prevent overheating. Do not block ventilation openings.
- **Moisture:** Keep the unit away from water or excessive moisture.
- **Placement:** Place the unit on a stable, level surface. Avoid placing it near heat sources or in direct sunlight.

## SETUP

### 1. Unpacking

Carefully remove the DX-C390 from its packaging. Verify that all accessories are present, including the remote control and 2 x AA/R6 batteries.

### 2. Remote Control Battery Installation

Open the battery compartment on the back of the remote control. Insert the two supplied AA/R6 batteries, ensuring correct polarity (+/-). Close the compartment securely.







Figure 1: Onkyo DX-C390 Remote Control. This image displays the remote control unit with various buttons for disc and track selection, play/pause, stop, repeat, random, dimmer, and display functions.

### 3. Audio Connections

Connect the DX-C390 to your amplifier or receiver using one of the following methods:

- **Analog Audio Output (RCA):** Use RCA cables to connect the L/R analog audio outputs on the DX-C390 to the corresponding analog audio inputs on your amplifier/receiver.
- **Digital Audio Output (Coaxial/Optical):** For digital audio transmission, connect either the coaxial or optical digital output on the DX-C390 to a digital input on your amplifier/receiver.

### 4. Power Connection

After all audio connections are made, plug the power cord of the DX-C390 into an appropriate AC outlet.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

- Press the **STANDBY/ON** button on the front panel or the remote control to turn the unit on or off.

### 2. Loading Discs

The DX-C390 features a 6-disc carousel changer. You can load up to 6 discs simultaneously.

1. Press the **OPEN/CLOSE** button to open the disc tray.
2. Place discs onto the numbered trays with the label side facing up.
3. To load multiple discs, press the **DISC SKIP** button to rotate the carousel and expose the next empty tray.
4. Press the **OPEN/CLOSE** button again to close the disc tray.



Figure 2: Onkyo DX-C390 6-Disc Carousel Mechanism. This image shows the internal carousel mechanism of the CD changer with multiple discs loaded, illustrating its multi-disc capability.

### 3. Playing Discs

- After loading discs, the unit will read the discs.
- Press the **PLAY/PAUSE** button to start playback.
- To select a specific disc, press the corresponding numbered **DISC SELECT** button (1-6) on the front panel or remote.
- To skip tracks, use the **SKIP** buttons (**◀◀** / **▶▶**) on the front panel or remote.
- To pause playback, press **PLAY/PAUSE**. Press again to resume.
- To stop playback, press the **STOP** button.

### 4. PlayXchange Feature

The PlayXchange feature allows you to change up to 5 discs while the sixth disc is still playing, ensuring uninterrupted music.

- While a disc is playing, press the **PLAYXCHANGE** button. The disc tray will open, allowing access to the non-playing disc slots.
- Replace or add discs as desired.
- Press **PLAYXCHANGE** again to close the tray and continue playback.

### 5. Playback Modes

- **Repeat:** Press the **REPEAT** button to cycle through repeat modes (e.g., All Discs, Entire Disc, Random Tracks, Memory Tracks, Single Folder, Single Track).
- **Random:** Press the **RANDOM** button to play tracks in a random order across all loaded discs.
- **40-Track Programming:** Refer to the detailed instructions in the full manual for programming specific track sequences.

### 6. Display and Dimmer Functions

- Press the **DISPLAY** button to change the information shown on the front panel display (e.g., track

time, total time).

- Press the **DIMMER** button to adjust the brightness of the front panel display.

## 7. USB Playback

The unit supports playback of MP3 files from a USB thumb drive.

- Insert a USB drive containing MP3 files into the USB port on the front panel.
- Use the **CD/USB** button to switch to USB mode.
- Use the track and folder navigation buttons to select and play files.

## MAINTENANCE

### 1. Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaning solution.

### 2. Disc Handling

- Always handle discs by their edges to avoid fingerprints and scratches.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.

## TROUBLESHOOTING

If you experience issues with your DX-C390, consult the following common problems and solutions:

- **No Power:** Ensure the power cord is securely plugged into the unit and the AC outlet. Check if the **STANDBY/ON** button is pressed.
- **No Sound:** Verify that the audio cables are correctly connected to your amplifier/receiver and that the correct input is selected on your amplifier/receiver. Check the volume level on your amplifier/receiver.
- **Disc Not Playing/Skipping:** Ensure the disc is clean and free of scratches. Make sure the disc is loaded correctly in the tray. Try a different disc to rule out a faulty disc.
- **Remote Control Not Working:** Check if the batteries are inserted correctly and are not depleted. Ensure there are no obstructions between the remote and the unit's sensor.

For more detailed troubleshooting, please refer to the comprehensive troubleshooting section in the full instruction manual.

## SPECIFICATIONS

Feature	Specification
Model Number	DX-C390
Disc Capacity	6 Discs
Compatible Disc Types	Audio CDs, MP3 CDs, CD-R/RWs
Audio D/A Converter (DAC)	24-bit/192kHz (VQA Technology)
Dynamic Range	96 dB

Feature	Specification
Audio Outputs	Analog (RCA), Coaxial Digital, Optical Digital
Power Consumption (Standby)	4 W
Dimensions (W x H x D)	17.01 x 5.16 x 17.13 inches
Weight	14.96 pounds
Color	Black

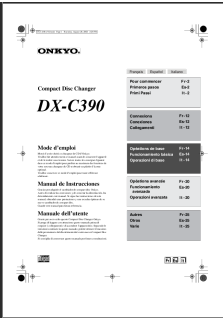

## WHAT'S IN THE BOX


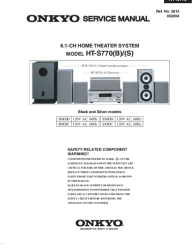


- Onkyo DX-C390 6-Disc CD Carousel Changer
- Remote Control (RC-777C)
- 2 x AA/R6 batteries (1.5 V)
- RCA Audio Cable
- Instruction Manual

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Onkyo website. Keep your purchase receipt as proof of purchase for warranty claims.

### Related Documents - DX-C390

	<p><a href="#">ONKYO DX-C390 Changeur de CD - Mode d'emploi</a></p> <p>Guide d'utilisation complet pour le changeur de CD ONKYO DX-C390. Découvrez comment installer, utiliser et entretenir votre appareil pour une expérience audio optimale.</p>
	<p><a href="#">ONKYO DX-6930/DX-6920 Service Manual</a></p> <p>Comprehensive service manual for the ONKYO DX-6930 and DX-6920 Compact Disc Players, detailing specifications, service procedures, parts lists, schematics, and troubleshooting.</p>

	<p><a href="#">ONKYO DX-705/703 Compact Disc Player Instruction Manual</a></p> <p>Instruction manual for the ONKYO DX-705/703 Compact Disc Player, detailing features, setup, operation, and troubleshooting for optimal audio performance.</p>
	<p><a href="#">Onkyo HT-S770 6.1-Channel Home Theater System Service Manual</a></p> <p>Service manual for the Onkyo HT-S770 6.1-Channel Home Theater System, detailing packing procedures for the HT-R520 AV Receiver and HTP-520 speaker package, comprehensive parts lists, and global contact information for Onkyo Corporation.</p>
	<p><a href="#">Onkyo BD-SP309 Blu-ray Disc Player Instruction Manual</a></p> <p>Comprehensive instruction manual for the Onkyo BD-SP309 Blu-ray Disc Player, covering setup, playback, settings, troubleshooting, and safety precautions.</p>
	<p><a href="#">Manual de Instrucciones Onkyo HT-S3900: Guía Completa del Sistema de Cine en Casa</a></p> <p>Descubra cómo configurar y operar su sistema de cine en casa Onkyo HT-S3900 con este manual de instrucciones detallado. Aprenda sobre conexiones, modos de escucha y configuración.</p>