

[Manuals.plus](#) /

> [Oster](#) /

> Oster BPST02-B Professional Series Glass Jar Blender User Manual


Oster BPST02-B

Oster BPST02-B Professional Series Glass Jar Blender

User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Oster BPST02-B Professional Series Glass Jar Blender. Please read all instructions carefully before using the appliance and retain this manual for future reference.

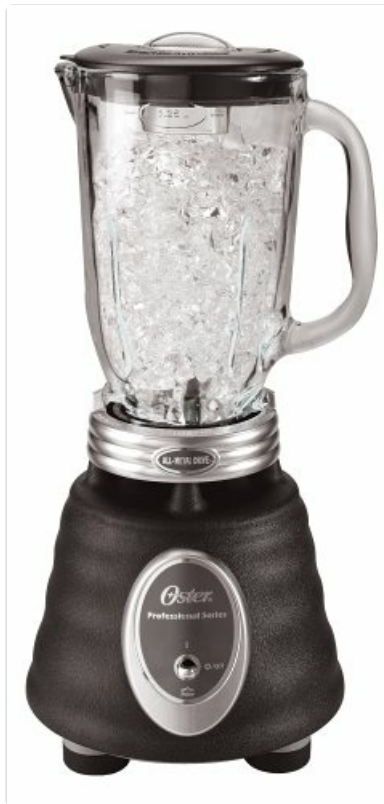

An image showing the assembled Oster BPST02-B Professional Series Glass Jar Blender with its black base and clear glass jar.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- To protect against electrical shock, do not immerse cord, plug, or motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- Blades are sharp. Handle carefully.
- Always operate blender with lid in place.
- When blending hot liquids, use caution; sudden steam can cause burns.

PACKAGE CONTENTS

Your Oster BPST02-B Professional Series Glass Jar Blender package includes the following components:

- Blender Motor Base
- 5-Cup (40 oz) Glass Jar
- Lid with Filler Cap
- Blade Assembly

PRODUCT OVERVIEW

Familiarize yourself with the main parts of your blender:

- **Motor Base:** The main unit housing the powerful 1/2 horsepower motor and the 2-speed toggle switch. Features a durable die-cast construction with a fingerprint-resistant finish and oversized rubber feet for stability.
- **Glass Jar:** A 5-cup (40 ounce) scratch-resistant, dishwasher-safe glass container for blending ingredients.
- **Blade Assembly:** Revolutionary ice crusher blade designed for efficient blending and crushing.
- **Lid with Filler Cap:** Secures the jar during operation and allows for adding ingredients while blending.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.

2. **Clean:** Before first use, wash the glass jar, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth.
3. **Assemble Blade:** Ensure the blade assembly is securely seated at the bottom of the glass jar.
4. **Position Base:** Place the motor base on a clean, dry, and stable surface.
5. **Place Jar:** Carefully place the assembled glass jar onto the motor base, ensuring it is properly aligned and seated.

OPERATING INSTRUCTIONS

1. **Add Ingredients:** Place your ingredients into the glass jar. For best results, add liquids first, then soft ingredients, and finally ice or frozen items. Do not fill above the 5-cup (40 oz) mark.
2. **Secure Lid:** Place the lid firmly onto the glass jar. Ensure the filler cap is also securely in place.
3. **Plug In:** Plug the blender into a standard electrical outlet.
4. **Select Speed:** Use the toggle switch on the motor base to select your desired speed **LOW** or **HIGH**. For quick bursts of power, use the **PULSE** function by momentarily holding the switch in the desired speed position and releasing.
5. **Blend:** Allow the blender to operate until desired consistency is achieved.
6. **Stop:** Once blending is complete, switch the blender to the OFF position.
7. **Unplug:** Always unplug the blender from the outlet before removing the jar or cleaning.

Blending Tips:

- To crush ice effectively, ensure there is some liquid in the jar with the ice.
- If ingredients stick to the sides, turn off the blender, remove the lid, and use a spatula to push ingredients towards the blades. Never use utensils while the blender is running.
- For thicker mixtures, use the pulse function to break up ingredients before continuous blending.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your blender.

Cleaning the Glass Jar and Blade Assembly:

- The glass jar and blade assembly are dishwasher safe. Place them on the top rack of your dishwasher.
- Alternatively, for quick cleaning, add 2 cups of warm water and a drop of dish soap to the jar. Secure the lid and blend on LOW for 10-20 seconds. Rinse thoroughly.
- Handle blades with extreme care as they are sharp.

Cleaning the Motor Base:

- Always unplug the blender before cleaning the motor base.
- Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.

TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; power outlet not working; blender not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the jar is properly seated on the motor base.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large or hard.	Add more liquid. Reduce the amount of ingredients. Cut large ingredients into smaller pieces. Use the PULSE function to break up stubborn items.
Blender leaks from the bottom of the jar.	Blade assembly not tightened; seal is damaged or missing.	Ensure the blade assembly is securely tightened onto the jar. Check the rubber gasket for proper placement and condition. Replace if damaged.
Motor smells or overheats.	Overloading the blender; continuous operation for too long.	Reduce the load in the blender. Allow the motor to cool down for at least 15-20 minutes before resuming use. Do not operate continuously for more than 1 minute.

SPECIFICATIONS

Brand	Oster
Model Number	BPST02-B
Color	Black
Capacity	5 Cups (40 Fluid Ounces)
Product Dimensions	15"D x 8"W x 15"H
Power Source	Corded Electric
Wattage	372.85 watts (1/2 Horsepower)
Number of Speeds	2 (LOW, HIGH) + Pulse
Control Type	Manual Toggle Switch
Container Material	Glass
Blade Material	Stainless Steel
Item Weight	7 Pounds
Dishwasher Safe Parts	Glass Jar, Lid, Blade Assembly

WARRANTY AND SUPPORT

Your Oster BPST02-B Professional Series Glass Jar Blender is covered by a **1-Year Limited Warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use.

For warranty service, technical support, or to inquire about replacement parts, please contact Oster Customer Service. Keep your original purchase receipt as proof of purchase for warranty claims.

Please refer to the official Oster website or your product registration card for the most current contact information and detailed warranty terms and conditions.