

Zyliss 11370

ZYLISS Classic Rotary Cheese Grater Instruction Manual

Model: 11370

1. PRODUCT OVERVIEW

The Zyliss Classic Rotary Cheese Grater (Model 11370) is designed for efficient grating of hard cheeses, chocolate, and nuts. Its rotary mechanism allows for quick preparation directly at the table, making it suitable for various culinary applications.

This unit features a durable stainless-steel drum, sturdy plastic housing, and an ergonomic grip for comfortable use. The design prioritizes ease of use and simple maintenance, with removable parts that are dishwasher-safe.

2. PRODUCT COMPONENTS

The Zyliss Classic Rotary Cheese Grater consists of the following main components:

- **Main Housing:** The sturdy plastic body that holds the internal mechanism.
- **Ergonomic Handle:** Designed for comfortable grip and operation.
- **Stainless-Steel Drum:** The grating surface, removable for cleaning.
- **Hopper:** The opening where food items are inserted for grating.



A view of the Zyliss Classic Rotary Cheese Grater, showing the main body, handle, and the stainless steel grating drum at the front. This image illustrates the primary components of the grater.

3. SETUP

The Zyliss Classic Rotary Cheese Grater comes pre-assembled. No initial assembly is required for first use. Ensure all parts are clean before initial use.

1. Unpack the grater from its packaging.
2. Wash all components with warm, soapy water or place them in a dishwasher.
3. Ensure all parts are completely dry before assembly and storage.

4. OPERATING INSTRUCTIONS

Follow these steps to operate your Zyliss Classic Rotary Cheese Grater:

1. **Prepare Food:** Cut cheese, chocolate, or nuts into pieces that fit comfortably into the grater's hopper.
2. **Insert Food:** Place the prepared food item inside the hopper opening.
3. **Position Grater:** Hold the grater over a plate, bowl, or serving dish where you want the grated food to collect.

4. **Grate:** Firmly squeeze the grater with one hand to hold the food against the drum. With the other hand, rotate the handle clockwise to grate the food.
5. **Continue Grating:** Repeat the process until the desired amount of grated food is achieved.



A person's hands are shown operating the Zyliss Classic Rotary Cheese Grater on a kitchen counter. One hand holds the body of the grater while the other turns the handle, demonstrating the grating action.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your grater.

1. **Disassembly:** The stainless-steel drum and handle are designed for easy removal. Gently detach the handle and drum from the main plastic housing.
2. **Washing:** All parts of the Zyliss Classic Rotary Cheese Grater are dishwasher-safe. For best results, place them on the top rack. Alternatively, wash by hand with warm, soapy water and a non-abrasive sponge.
3. **Drying:** Ensure all components are thoroughly dried before reassembly or storage to prevent water spots or residue buildup.
4. **Storage:** Store the grater in a utensil drawer or cupboard. Its compact design allows for efficient storage.

6. TROUBLESHOOTING

If you encounter issues with your Zyliss Classic Rotary Cheese Grater, refer to the following common solutions:

- **Difficulty Grating:**
 - Ensure the food item (cheese, nuts, chocolate) is not too large for the hopper. Cut into smaller pieces if necessary.
 - Verify the stainless-steel drum is correctly installed and rotates freely.
 - Apply firm, consistent pressure while rotating the handle.
- **Grater Not Assembling Correctly:**
 - Check that all components are aligned properly before attempting to reassemble the drum and handle into the

housing.

- Ensure no food particles are obstructing the assembly points.

7. SPECIFICATIONS

Model Number:	11370
Color:	White
Material:	Plastic, Stainless Steel
Style:	Classic Rotary
Item Weight:	0.01 Ounces
Dimensions:	Approximately 6-1/2 by 3 by 5 inches
Dishwasher Safe:	Yes
Manufacturer:	ZYLISS

8. WARRANTY AND SUPPORT

The Zyliss Classic Rotary Cheese Grater (Model 11370) comes with a **five-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, product support, or any inquiries regarding your grater, please visit the official Zyliss website or contact their customer service department through the provided link:

Visit the Zyliss Store for
Support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000FDZJG2>

More documents and user manuals: <https://manuals.plus/>