

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Playskool Let's Play Together Tummy Time Together Gym Instruction Manual

Hasbro 08855

Hasbro Playskool Let's Play Together Tummy Time Together Gym Instruction Manual

Model: 08855

1. INTRODUCTION

The Hasbro Playskool Let's Play Together Tummy Time Together Gym is designed to provide engaging play for infants, supporting both tummy time and active gym play. This versatile product encourages discovery and interaction through its various features.

2. SAFETY INFORMATION

CAUTION: Never leave a child unattended with this product. Keep small parts necessary for assembly (if any) out of children's reach. Always ensure the product is placed on a stable, flat surface.

3. ASSEMBLY AND SETUP

This product requires no assembly. It is designed for immediate use out of the box. Simply unfold or adjust the gym as needed for tummy time or overhead play.



Figure 1: The Hasbro Playskool Tummy Time Together Gym, illustrating its dual functionality for tummy time and overhead gym play. The image shows the product in its retail packaging, highlighting its features and how a baby can interact with it.

4. OPERATING INSTRUCTIONS

The Tummy Time Together Gym offers two primary modes of play:

4.1. Tummy Time Play

- Place your baby on their tummy in front of the interactive panel.
- The panel features a mirror and various textures and shapes for sensory exploration.
- Encourage your baby to reach, bat, and interact with the toys on the panel to activate sounds and music.

4.2. Overhead Gym Play

- Adjust the gym into its overhead configuration, allowing the toy bar to suspend above your baby.
- Lay your baby on their back beneath the toy bar.
- The hanging toys are designed for batting and grasping, promoting motor skill development.
- The gym easily converts between these two modes to adapt to your baby's developmental stage and play preferences.

5. MAINTENANCE

To ensure the longevity and hygiene of your Tummy Time Together Gym:

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Do not immerse electronic components in water.
- **Drying:** Allow all parts to air dry completely before storage or next use.
- **Storage:** Store in a clean, dry place away from direct sunlight when not in use.

6. TROUBLESHOOTING

If you encounter any issues with your Tummy Time Together Gym, consider the following:

- **No Sound/Music:** This product is manual and does not require batteries for sound or music. Ensure your baby is interacting directly with the designated areas to activate any built-in features.
- **Stability Issues:** Ensure the gym is fully extended and locked into position (if applicable) on a flat, stable surface.

- **Damaged Parts:** Discontinue use immediately if any part of the gym appears damaged or broken. Contact customer support for assistance.

7. SPECIFICATIONS

Brand:	Hasbro
Model Number:	08855
ASIN:	B000FEBQY0
GTIN/UPC:	653569158752
Material Type:	Fabric, Plastic
Item Dimensions (L x W x H):	3.5 x 15 x 20.5 inches
Item Weight:	5 Pounds
Assembly Required:	No
Power Source:	Manual (No batteries required)
Educational Objective:	Spatial Awareness

8. WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not provided within this manual. Please refer to the product packaging or the manufacturer's official website for details.

© 2024 Hasbro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question