

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Trimmer Line Replacement Spool RS-136-BKP Instruction Manual

BLACK+DECKER RS136BKP

BLACK+DECKER Trimmer Line Replacement Spool RS-136-BKP Instruction Manual

Model: RS-136-BKP

1. PRODUCT OVERVIEW

This manual provides instructions for the BLACK+DECKER RS-136-BKP Trimmer Line Replacement Spool. This spool is designed for easy replacement in compatible BLACK+DECKER string trimmers, eliminating the need for manual line winding.

The spool comes pre-wound with 20 feet (6.1 meters) of .065-inch (1.65 mm) diameter trimmer line, ensuring optimal performance and feed reliability.



Image: The BLACK+DECKER RS-136-BKP replacement spool, factory wound with .065-inch trimmer line.

2. COMPATIBILITY

The RS-136-BKP replacement spool is compatible with the following BLACK+DECKER string trimmer models:

- CST500
- CST800
- GE600
- ST1000
- ST200
- ST300
- ST3000
- ST400
- ST4000
- ST4400
- ST4500
- ST5000

- ST6500
- ST6800

Instructions for string trimmer line replacement:

1. Unplug the tool. Remove cap by pushing two tabs in and up, then lift off. (It is not necessary to push both tabs in at the same time). Remove any debris and grass build up that may be inside the cap and on the inside of the hole in the cap.
2. Remove spool by aligning the notch on the edge of the spool with the eyelet in the hub and pulling straight out. Be careful not to lose the spring. Discard old spool and remove tape from new spool. Remove any debris that may be inside the hub and wipe any dirt off the ribs on the shaft.
3. Unwind about 3 in (76mm) of line from the spool and hold it in one of the two notches. Make sure spring is in place on the hub.
4. Holding the line in the gap, insert the end through the eyelet in the hub and slip the spool into the hub. If the spool does not slip into the hub easily, press gently and pull straight out on the cutting line that protrudes through the eyelet.
5. Install cap by pushing both snap legs into the hub at once. Make sure that both legs are snapped securely in one place. Pull line out by hand until tight. The line should extend out no further than the guard. You are now ready to resume trimming. The cut-off blade will automatically trim excess line to the proper length.

Directives de remplacement du fil pour le taille-bordure:

1. Débrancher l'outil. Presser les deux onglets et soulever le capuchon vers le haut pour le retirer. (Il n'est pas nécessaire d'enfoncer les deux onglets au même moment). Dégager tout débris et accumulation d'herbe qui pourrait se retrouver à l'intérieur du capuchon et du trou du capuchon.
2. Aligner l'encoche sur le côté de la bobine avec l'orifice du moyeu et tirer en ligne droite pour retirer la bobine. Ne perdez pas le ressort. Jeter la vieille bobine et retirer le ruban de la nouvelle bobine. Nettoyer tout débris présent à l'intérieur du moyeu et enlever toute saleté des nervures sur la tige.
3. Dérouler environ 76 mm (3 po) de fil de la bobine et l'insérer dans l'une des deux encoches. S'assurer que le ressort soit bien en place dans le moyeu.
4. En tenant le fil dans l'encoche, insérer l'extrémité dans l'orifice logé dans le moyeu, puis glisser la bobine dans le moyeu. Si la bobine ne glisse pas facilement dans le moyeu, l'enfoncer doucement, puis tirer le fil tranchant qui dépasse de l'orifice en ligne droite.
5. Remettre le capuchon en insérant simultanément les deux onglets pour les enclencher. S'assurer que les deux onglets sont solidement enclenchés en un seul point. Avec la main, tirer sur le fil jusqu'à l'obtention d'une résistance. Le fil ne devrait pas dépasser le capot protecteur. L'outil est maintenant prêt à utiliser. La lame coupera automatiquement le fil excédentaire à la bonne longueur.

Instrucciones para reemplazar la cuerda de corte:

1. Desenchufe la herramienta. Retire la tapa presionando las dos lengüetas hacia adentro y arriba, luego levántela. (No es necesario empujar ambas lengüetas al mismo tiempo). Retire la grasa y los desechos acumulados dentro de la tapa y en el interior del orificio de la tapa.
2. Retire el carrete alineando la muesca del borde del carrete con el orificio de la bobina y tirando hacia afuera en forma recta. Tenga cuidado de no perder el resorte. Deseche el carrete anterior y retire la cinta del nuevo carrete. Retire los desechos que puedan haber dentro de la bobina y limpie la suciedad de las varillas del eje.
3. Desenrolle aproximadamente 76 mm (3 in) de cuerda del carrete y sosténgala en una de las dos muescas. Asegúrese de que el resorte esté colocado en la bobina.
4. Sujetando la cuerda en el espacio, inserte el extremo a través del orificio de la bobina y deslice el carrete en la bobina. Si el carrete no se desliza fácilmente en la bobina, presione levemente y tire en forma recta de la cuerda de corte que sobresale a través del orificio.
5. Instale la tapa en la bobina empujando simultáneamente ambas patas a presión. Asegúrese de que ambas patas estén fijas en un lugar. En forma manual, tire de la cuerda hacia afuera hasta que esté tensa. La cuerda no debe extenderse más allá del protector. Ahora sí se puede reanudar el corte. La hoja de corte cortará automáticamente el exceso de cuerda al largo correcto.

BLACK & DECKER (U.S.) INC.
701 East Joppa Road
Towson, MD 21286 U.S.A.
© 2018 Black & Decker, Inc.
U.S. & Canada Only
E.-U. et Canada seulement.

Importado por: BLACK & DECKER, S.A. DE C.V.
Avenida Antonio Dovalí Jaime # 70 Torre B Piso 9
Colonia La Fe, Santa Fé, Delegación Alvaro Obregón,
México D.F. 01210
Tel. (52) 555-326-7100
R.F.C.: BDE810626-1W7

All BLACK+DECKER replacement line is premium quality monofilament nylon to reduce splitting and fraying for maximum trimming performance.

Tous les fils de recharge en nylon monofilament BLACK+DECKER sont de qualité supérieure pour réduire l'éclatement et l'effilochement du fil et maximiser le rendement de la taille.

La cuerda de repuesto de BLACK+DECKER es de nylon de monofilamento de primera calidad para reducir el resquebrajamiento y el deshilache a los efectos de lograr un rendimiento máximo de corte.

⚠ WARNING To reduce the risk of injury, user must read instruction manual before operating product.

⚠ AVERTISSEMENT Afin de réduire le risque de blessures, l'utilisateur doit lire le mode d'emploi avant d'utiliser le produit.

⚠ ADVERTENCIA Para reducir el riesgo de lesiones, el usuario debe leer el manual de instrucciones antes de operar el producto.

⚠ **WARNING:** Cancer and reproductive harm - www.P65Warnings.ca.gov


⚠ **AVERTISSEMENT:** Cancer et Troubles de l'appareil reproducteur - www.P65Warnings.ca.gov

⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov

Fil fabriqué en France. Assemblé en Chine.
Hilo hecho en Francia. Ensamblado en China.

BlackandDecker.com
1-800-544-6986

N655515 RS-136



0 28872 01360 7

Image: Packaging for the RS-136-BKP spool, listing compatible BLACK+DECKER trimmer models.

3. SAFETY INFORMATION

WARNING: To reduce the risk of injury, the user must read the instruction manual for their specific string trimmer before operating the product.

WARNING: This product may expose you to chemicals known to the State of California to cause cancer and reproductive harm. For more information, visit www.P65Warnings.ca.gov.

4. INSTALLATION AND REPLACEMENT

Follow these steps to replace the trimmer line spool in your BLACK+DECKER bump feed string trimmer:

1. **Remove Cap:** Remove the trimmer head cap by pushing two tabs in and up, then lifting it off. It is not necessary to push both tabs simultaneously. Clear any debris or grass buildup from inside the cap and the reel area.
2. **Remove Old Reel:** Align the notch on the edge of the old spool with the eyelet in the hub and pull the spool straight out. Be careful not to lose the spring located inside the trimmer head. Discard the

used spool.

- 3. Prepare New Spool:** Remove any tape from the new spool. Unwind approximately 3 inches (76 mm) of line from the new spool and secure it in one of the two notches on the spool. Ensure the spring is properly seated on the hub.
- 4. Insert New Reel:** While holding the line in the gap, insert the new reel into the hub and thread the line through the eyelet. If the spool does not easily slip into the hub, gently press and pull the line straight out from the eyelet.
- 5. Install Cap:** Push both snap levers on the hub at once until they are securely snapped into place. Pull the trimmer line out by hand until it is taut. The line should extend no further than the trimmer's guard. The cut-off blade will automatically trim any excess line to the correct length during operation.



Image: A user demonstrating the installation of a replacement spool into a trimmer head.

5. OPERATION

Once the replacement spool is correctly installed, your string trimmer is ready for use. The bump feed mechanism will automatically advance the line as needed during operation. Refer to your string trimmer's main instruction manual for detailed operating procedures and safety guidelines.

6. MAINTENANCE

The RS-136-BKP is a consumable replacement part. No specific maintenance is required for the spool itself. When the line is depleted, replace the spool with a new BLACK+DECKER RS-136-BKP replacement spool following the installation instructions provided in this manual.

Regularly inspect the trimmer head for any debris buildup and clean as necessary to ensure proper function of the bump feed mechanism.

7. TROUBLESHOOTING

- **Line Not Feeding:**

- Ensure the spool is correctly seated and the line is not tangled inside the trimmer head.
- Check for excessive debris or grass buildup around the spool and eyelet, which can obstruct line feed.
- Verify that the spring is properly in place and not damaged.

- **Line Breaking Frequently:**

- Ensure you are using the correct .065-inch diameter line.
- Avoid trimming against hard surfaces like concrete or rocks, which can prematurely wear or break the line.
- Check the trimmer head's cut-off blade for damage; a dull or damaged blade can fray the line.

8. SPECIFICATIONS

Model Number	RS-136-BKP
Line Diameter	.065 inches (1.65 mm)
Line Length	20 feet (6.1 meters)
Weight	0.04 Kilograms (approximately 1.4 ounces)
UPC	028872013690

9. SUPPORT AND WARRANTY

For technical assistance, product information, or warranty inquiries, please contact BLACK+DECKER customer support:

- **Website:** [BlackAndDecker.com](https://www.blackanddecker.com)
- **Phone:** 1-800-544-6986

Please refer to your original string trimmer manual for specific warranty details regarding the trimmer unit itself. This replacement spool is subject to standard BLACK+DECKER accessory warranty terms.

