

Toysmith 1381

Toysmith Tech Gear Multi Voice Changer Instruction Manual

Model: 1381

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Toysmith Tech Gear Multi Voice Changer. Please read this manual thoroughly before operating the device and retain it for future reference.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not suitable for children under 3 years. Adult supervision is recommended during use.

WHAT'S IN THE BOX

- 1 x Toysmith Tech Gear Multi Voice Changer
- 1 x 9-volt battery (included)

SETUP

Battery Installation

1. Locate the battery compartment on the handle of the voice changer.
2. Using a small screwdriver, carefully open the battery compartment cover.
3. Insert one 9-volt battery, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

The device requires one 9-volt battery, which is included for immediate use.



Figure 1: Toysmith Tech Gear Multi Voice Changer. This image shows the purple megaphone-style device with its speaker, handle, and control buttons.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the ON/OFF switch, typically on the handle, and slide it to the "ON" position.
2. **Speaking into the Microphone:** Hold the voice changer with the speaker facing away from you. Speak directly into the microphone located at the back of the megaphone cone. For best results, speak clearly and keep your mouth close to the microphone.
3. **Selecting Voice Effects:** The device features 8 different voice modifiers. Use the side levers or buttons (labeled A, B, C, D, etc.) to select and combine various voice effects. Experiment with different combinations to discover unique sounds.
4. **Amplification:** The built-in speaker amplifies your voice.
5. **LED Lights:** The device includes flashing LED lights that activate during operation.



Figure 2: A child demonstrating the use of the Toysmith Tech Gear Multi Voice Changer, speaking into the microphone end.

MAINTENANCE

- **Cleaning:** Wipe the device with a dry, soft cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the voice changer in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** If the device will not be used for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on or produces no sound.	Battery is dead or incorrectly installed. ON/OFF switch is in the "OFF" position.	Check battery polarity and replace if necessary. Ensure the ON/OFF switch is set to "ON".

Problem	Possible Cause	Solution
Voice effects are unclear or distorted.	Microphone not positioned correctly. Battery power is low.	Speak directly and closely into the microphone. Replace the battery.

SPECIFICATIONS

- **Model Number:** 1381
- **Product Dimensions:** 9 x 5 x 11 inches
- **Item Weight:** 8.9 ounces
- **Recommended Age:** 5 years and up
- **Battery Requirement:** 1 x 9-volt battery (included)
- **Voice Effects:** 8 unique modifiers
- **Features:** Built-in amplifier, flashing LED lights



Figure 3: Product packaging for the Toysmith Tech Gear Multi Voice Changer, highlighting its features.

WARRANTY AND SUPPORT

This product is designed for durability and performance. For any questions regarding operation, maintenance, or potential issues not covered in this manual, please contact Toysmith customer support. Specific warranty details may be available through your retailer or on the official Toysmith website.

For further assistance, please visit the [Toysmith Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question