

[manuals.plus](#) /› [Severin](#) /› [SEVERIN Food Dehydrator User Manual - Model S72940 \(OD 2940\)](#)

## Severin S72940

# SEVERIN Food Dehydrator Instruction Manual

Model: S72940 (OD 2940) | Brand: Severin

## 1. INTRODUCTION

The SEVERIN Food Dehydrator is designed for the healthy and natural preservation of various foods. This appliance allows you to easily prepare dried fruits, vegetables, meats, and herbs at home, retaining their natural flavors and nutrients without the need for added sugars or artificial preservatives. Its user-friendly design, featuring stackable trays and a transparent lid, makes the dehydration process simple and efficient.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance to prevent damage, injury, or electric shock. Keep this manual for future reference.

- Always unplug the appliance from the power outlet when not in use, before cleaning, or in case of malfunction.
- Do not immerse the base unit, power cord, or plug in water or any other liquid.
- This appliance is intended for household use only. Do not use it outdoors or for commercial purposes.
- Ensure the voltage indicated on the rating label matches your mains voltage before connecting.
- Keep the appliance out of reach of children and persons with reduced physical, sensory, or mental capabilities.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the dehydrator on a stable, flat, and heat-resistant surface, away from walls or other heat sources, to ensure proper ventilation.
- Do not cover the ventilation openings during operation.
- The appliance surfaces may become hot during operation. Use caution when handling.

### 3. COMPONENTS AND ASSEMBLY

The SEVERIN Food Dehydrator consists of the following main components:

1. **Base Unit:** Contains the motor, fan, and heating element. Features an On/Off switch with an indicator light.
2. **Stackable Trays (5x):** Transparent trays with a diameter of approximately 31 cm, designed for holding food items. These trays can be adjusted to two different heights to accommodate various food thicknesses.
3. **Transparent Lid:** Placed on top of the stacked trays to cover the appliance during operation, allowing for easy monitoring of the drying process.



Figure 3.1: The SEVERIN Food Dehydrator with various fruits and vegetables placed on its transparent, stackable trays, ready for dehydration. The base unit with the power switch is visible at the front.



Figure 3.2: Illustration of the adjustable height feature of the dehydrator trays. The arrow indicates that the trays can be set at two different levels to accommodate thicker food items.

## 4. SETUP

- 1. Unpacking:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
- 2. Initial Cleaning:** Before first use, wash the trays and lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the base unit with a damp cloth. Do not immerse the base unit in water.
- 3. Placement:** Place the dehydrator on a clean, dry, stable, and heat-resistant surface. Ensure there is adequate space around the appliance for proper air circulation.
- 4. Pre-run:** It is recommended to operate the dehydrator for approximately 30 minutes without any food items before the first actual use. This helps to eliminate any manufacturing odors. A slight odor during this initial run is normal and will dissipate.

## 5. OPERATING INSTRUCTIONS

Follow these steps to effectively dehydrate your food items:

- 1. Food Preparation:**

- Wash and clean the food items thoroughly.
- Slice food into uniform pieces (e.g., 5-8 mm thickness for fruits and vegetables) to ensure even drying.
- For some fruits (e.g., apples, bananas), a pre-treatment with lemon juice or a sulfite solution can prevent browning.

- 2. Loading Trays:** Arrange the prepared food in a single layer on each tray. Do not overlap food items, as this will hinder air circulation and lead to uneven drying.
- 3. Stacking Trays:** Place the loaded trays onto the base unit, stacking them one on top of the other. The trays can be adjusted to two different heights by rotating them slightly to lock into the desired position, allowing for thicker items.
- 4. Placing the Lid:** Securely place the transparent lid on the top-most tray.
- 5. Power On:** Plug the power cord into a suitable electrical outlet. Press the On/Off switch (marked 'I' for On, '0' for Off) on the front of the base unit. The indicator light will illuminate, signifying that the dehydrator is operating.
- 6. Monitoring and Rotation:** Periodically check the food items for dryness. For optimal results, you may rotate the trays (moving bottom trays to the top and vice-versa) and rearrange food items during the drying process to ensure uniform dehydration.
- 7. Power Off:** Once the food has reached the desired dryness, press the On/Off switch to the '0' position. Unplug the appliance from the power outlet.
- 8. Cooling:** Allow the dried food to cool completely before storing.



Figure 5.1: The dehydrator with its transparent lid lifted, revealing multiple layers of trays filled with sliced fruits like apples and bananas, and whole grapes, demonstrating the capacity and arrangement of food for drying.

### Approximate Drying Times

Drying times can vary significantly based on food type, thickness, moisture content, and ambient humidity. The following table provides general guidelines:

Food Item	Preparation	Approximate Drying Time
Apples	Sliced 8mm thick	6 - 7 hours
Bananas	Sliced	9 - 13 hours
Herbs	Whole leaves or chopped	2 - 6 hours
Meat Jerky	Thinly sliced	6 - 15 hours

Always ensure food is completely dry before storage to prevent spoilage. Dried food should be pliable but not sticky, or brittle depending on the food type.



Figure 5.2: The SEVERIN Food Dehydrator shown alongside a plate of various dried fruits (apples, apricots, raisins, bananas) and fresh produce (grapes, apples, bananas), illustrating the transformation from fresh to preserved snacks.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your dehydrator.

- Before Cleaning:** Always unplug the dehydrator from the power outlet and allow it to cool completely before cleaning.
- Trays and Lid:** The transparent trays and lid should be washed by hand using warm water and a mild dish soap. Rinse thoroughly to remove all soap residue and dry completely with a soft cloth. **Note: These parts are NOT dishwasher safe.**
- Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. For stubborn stains, a small amount of mild detergent can be used. Ensure no water enters the motor or electrical components. Never immerse the base unit in water or any other liquid.
- Storage:** Store the clean and dry dehydrator in a cool, dry place, away from direct sunlight and moisture. The stackable design allows for compact storage.

## 7. TROUBLESHOOTING

If you encounter issues with your dehydrator, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power switch off; no power at outlet.	Ensure the power cord is securely plugged in. Press the On/Off switch to 'I'. Check the power outlet with another appliance.
Uneven drying of food.	Food pieces are not uniform; trays are overloaded; insufficient air circulation; trays not rotated.	Slice food to consistent thickness. Do not overlap food on trays. Ensure proper spacing. Rotate trays periodically (top to bottom, etc.).
Drying takes too long.	Food is too thick; high moisture content in food; high ambient humidity.	Slice food thinner. Consider pre-treating high-moisture foods. Dehydrate in a low-humidity environment if possible.
Unusual odor during operation (after initial pre-run).	Food residue on heating element; appliance malfunction.	Unplug and clean the base unit thoroughly. If the odor persists or is strong/burning, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact Severin customer support.

## 8. SPECIFICATIONS

**Brand:** Severin

**Model Number:** S72940 (Reference: OD 2940)

**Power:** Approximately 250 Watts

**Voltage:** 230 Volts

**Dimensions (L x W x H):** 32.9 x 32.9 x 19 cm (12.95 x 12.95 x 7.48 inches)

**Weight:** 2.5 Kilograms (5.5 pounds)

**Material:** Acrylonitrile Butadiene Styrene Plastic

**Capacity:** 1 Litre (referring to overall volume, trays have 31cm diameter)

**Noise Level:** 44 dB

**Number of Trays:** 5, stackable and adjustable height

**Tray Diameter:** Approximately 31 cm

## 9. WARRANTY AND SUPPORT

For information regarding product warranty, service, or spare parts availability, please refer to the official Severin website or contact their customer support directly. Warranty terms and conditions may vary by region and purchase date.

You can typically find contact information and detailed warranty policies on the manufacturer's official website: [www.severin.com](http://www.severin.com)

© 2024 Severin. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

## Related Documents - S72940

 <p><b>SEVERIN</b> severin.de</p> <p>www.severin.com</p> <table><tr><td>DE: Gehäuseanleitung</td><td>OD-OD-Ablauf II</td><td>4</td></tr><tr><td>DE: Instruktion für die Verwendung</td><td>Füllrührer</td><td>8</td></tr><tr><td>DE: Modus d'emploi</td><td>Dehydrator mit Multi</td><td>14</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Füllrührer</td><td>22</td></tr><tr><td>DE: Instructions de use</td><td>Dehydrator en plastique</td><td>28</td></tr><tr><td>IT: Manuale d'uso</td><td>Extrattore per frutta</td><td>31</td></tr><tr><td>IT: Istruzioni per l'uso</td><td>Extrattore per frutta</td><td>31</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Yemeksiyahır II Hafif</td><td>37</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Füllrührer</td><td>43</td></tr><tr><td>FR: Instructions</td><td>Yémezeksiyár II</td><td>47</td></tr><tr><td>PL: Instrukcja obsługi</td><td>Wytrząsacz owoców</td><td>52</td></tr><tr><td>GR: Οδηγίες χρήσης</td><td>Σακούλα για σαντες</td><td>52</td></tr><tr><td>RO: Înstrucțiuni de utilizare</td><td>Amestătător special</td><td>58</td></tr><tr><td>RU: Инструкция по эксплуатации</td><td>Дефрикционная машина</td><td>64</td></tr></table>	DE: Gehäuseanleitung	OD-OD-Ablauf II	4	DE: Instruktion für die Verwendung	Füllrührer	8	DE: Modus d'emploi	Dehydrator mit Multi	14	DE: Bedienungsanleitung	Füllrührer	22	DE: Instructions de use	Dehydrator en plastique	28	IT: Manuale d'uso	Extrattore per frutta	31	IT: Istruzioni per l'uso	Extrattore per frutta	31	DE: Bedienungsanleitung	Yemeksiyahır II Hafif	37	DE: Bedienungsanleitung	Füllrührer	43	FR: Instructions	Yémezeksiyár II	47	PL: Instrukcja obsługi	Wytrząsacz owoców	52	GR: Οδηγίες χρήσης	Σακούλα για σαντες	52	RO: Înstrucțiuni de utilizare	Amestătător special	58	RU: Инструкция по эксплуатации	Дефрикционная машина	64	<p><a href="#"><u>SEVERIN OD 2940 Frucht- und Dörrautomat – Bedienungsanleitung</u></a></p> <p>Entdecken Sie die Bedienungsanleitung für den SEVERIN OD 2940 Frucht- und Dörrautomat. Erfahren Sie alles über Anschluss, Bedienung, Sicherheitshinweise und Pflege dieses Haushaltsgeräts.</p>									
DE: Gehäuseanleitung	OD-OD-Ablauf II	4																																																		
DE: Instruktion für die Verwendung	Füllrührer	8																																																		
DE: Modus d'emploi	Dehydrator mit Multi	14																																																		
DE: Bedienungsanleitung	Füllrührer	22																																																		
DE: Instructions de use	Dehydrator en plastique	28																																																		
IT: Manuale d'uso	Extrattore per frutta	31																																																		
IT: Istruzioni per l'uso	Extrattore per frutta	31																																																		
DE: Bedienungsanleitung	Yemeksiyahır II Hafif	37																																																		
DE: Bedienungsanleitung	Füllrührer	43																																																		
FR: Instructions	Yémezeksiyár II	47																																																		
PL: Instrukcja obsługi	Wytrząsacz owoców	52																																																		
GR: Οδηγίες χρήσης	Σακούλα για σαντες	52																																																		
RO: Înstrucțiuni de utilizare	Amestătător special	58																																																		
RU: Инструкция по эксплуатации	Дефрикционная машина	64																																																		
 <p><b>SEVERIN</b> Friends for Life</p> <p>www.severin.com</p> <table><tr><td>DE: Gehäuse für Handmixer</td><td>Stielmixer</td><td>4</td></tr><tr><td>DE: Instruktion für die Verwendung</td><td>Handmixer</td><td>12</td></tr><tr><td>DE: Modus d'emploi</td><td>Buttermixer</td><td>18</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Buttermixer</td><td>24</td></tr><tr><td>DE: Instructions de use</td><td>Buttermixer</td><td>30</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>36</td></tr><tr><td>DE: Instructions de use</td><td>Stielmixer</td><td>36</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>42</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>48</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>54</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>60</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>66</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>72</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>78</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>84</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>90</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Stielmixer</td><td>96</td></tr></table>	DE: Gehäuse für Handmixer	Stielmixer	4	DE: Instruktion für die Verwendung	Handmixer	12	DE: Modus d'emploi	Buttermixer	18	DE: Bedienungsanleitung	Buttermixer	24	DE: Instructions de use	Buttermixer	30	DE: Bedienungsanleitung	Stielmixer	36	DE: Instructions de use	Stielmixer	36	DE: Bedienungsanleitung	Stielmixer	42	DE: Bedienungsanleitung	Stielmixer	48	DE: Bedienungsanleitung	Stielmixer	54	DE: Bedienungsanleitung	Stielmixer	60	DE: Bedienungsanleitung	Stielmixer	66	DE: Bedienungsanleitung	Stielmixer	72	DE: Bedienungsanleitung	Stielmixer	78	DE: Bedienungsanleitung	Stielmixer	84	DE: Bedienungsanleitung	Stielmixer	90	DE: Bedienungsanleitung	Stielmixer	96	<p><a href="#"><u>SEVERIN SM 3771 / SM 3772 Stabmixer - Gebrauchsanweisung</u></a></p> <p>Umfassende Bedienungsanleitung für den SEVERIN Stabmixer SM 3771 und SM 3772. Enthält Sicherheitshinweise, Bedienung, Reinigung und technische Daten.</p>
DE: Gehäuse für Handmixer	Stielmixer	4																																																		
DE: Instruktion für die Verwendung	Handmixer	12																																																		
DE: Modus d'emploi	Buttermixer	18																																																		
DE: Bedienungsanleitung	Buttermixer	24																																																		
DE: Instructions de use	Buttermixer	30																																																		
DE: Bedienungsanleitung	Stielmixer	36																																																		
DE: Instructions de use	Stielmixer	36																																																		
DE: Bedienungsanleitung	Stielmixer	42																																																		
DE: Bedienungsanleitung	Stielmixer	48																																																		
DE: Bedienungsanleitung	Stielmixer	54																																																		
DE: Bedienungsanleitung	Stielmixer	60																																																		
DE: Bedienungsanleitung	Stielmixer	66																																																		
DE: Bedienungsanleitung	Stielmixer	72																																																		
DE: Bedienungsanleitung	Stielmixer	78																																																		
DE: Bedienungsanleitung	Stielmixer	84																																																		
DE: Bedienungsanleitung	Stielmixer	90																																																		
DE: Bedienungsanleitung	Stielmixer	96																																																		
 <p><b>SEVERIN</b> Friends for Life</p> <p>www.severin.com</p> <table><tr><td>DE: Gehäuse für Universalzerkleinerer</td><td>Universalzerkleinerer</td><td>4</td></tr><tr><td>DE: Instruktion für die Verwendung</td><td>Food-chopper</td><td>12</td></tr><tr><td>DE: Modus d'emploi</td><td>Handmixer</td><td>18</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Handmixer</td><td>24</td></tr><tr><td>DE: Instructions de use</td><td>Handmixer</td><td>30</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>36</td></tr><tr><td>DE: Instructions de use</td><td>Universalzerkleinerer</td><td>36</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>42</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>48</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>54</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>60</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>66</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>72</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>78</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>84</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>90</td></tr><tr><td>DE: Bedienungsanleitung</td><td>Universalzerkleinerer</td><td>96</td></tr></table>	DE: Gehäuse für Universalzerkleinerer	Universalzerkleinerer	4	DE: Instruktion für die Verwendung	Food-chopper	12	DE: Modus d'emploi	Handmixer	18	DE: Bedienungsanleitung	Handmixer	24	DE: Instructions de use	Handmixer	30	DE: Bedienungsanleitung	Universalzerkleinerer	36	DE: Instructions de use	Universalzerkleinerer	36	DE: Bedienungsanleitung	Universalzerkleinerer	42	DE: Bedienungsanleitung	Universalzerkleinerer	48	DE: Bedienungsanleitung	Universalzerkleinerer	54	DE: Bedienungsanleitung	Universalzerkleinerer	60	DE: Bedienungsanleitung	Universalzerkleinerer	66	DE: Bedienungsanleitung	Universalzerkleinerer	72	DE: Bedienungsanleitung	Universalzerkleinerer	78	DE: Bedienungsanleitung	Universalzerkleinerer	84	DE: Bedienungsanleitung	Universalzerkleinerer	90	DE: Bedienungsanleitung	Universalzerkleinerer	96	<p><a href="#"><u>SEVERIN UZ 3861 Universalzerkleinerer Bedienungsanleitung</u></a></p> <p>Die Bedienungsanleitung für den SEVERIN UZ 3861 Universalzerkleinerer bietet detaillierte Informationen zur sicheren Handhabung, Pflege und Anwendung des Küchengeräts.</p>
DE: Gehäuse für Universalzerkleinerer	Universalzerkleinerer	4																																																		
DE: Instruktion für die Verwendung	Food-chopper	12																																																		
DE: Modus d'emploi	Handmixer	18																																																		
DE: Bedienungsanleitung	Handmixer	24																																																		
DE: Instructions de use	Handmixer	30																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	36																																																		
DE: Instructions de use	Universalzerkleinerer	36																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	42																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	48																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	54																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	60																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	66																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	72																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	78																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	84																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	90																																																		
DE: Bedienungsanleitung	Universalzerkleinerer	96																																																		

 <p><b>SEVERIN</b></p> <p>DE - DE - WK 3472</p> <p>DE: Elektrische Wasserkocher EN: Electric kettle FR: Bouilloire électrique NL: Elektrische waterkoker ES: Hervidor de agua eléctrico DE: Brühautomat PT: Máquina de café PL: Brudziarka IT: Macchina per il caffè PT: Manual de instruções NL: Gebruiksaanwijzing DE: Ohne/aus, vorbereiten</p> <p>A 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100</p>	<p><b>SEVERIN Wasserkocher WK 3472 - Bedienungsanleitung und Sicherheitshinweise</b></p> <p>Finden Sie detaillierte Anleitungen und wichtige Sicherheitshinweise für den SEVERIN Wasserkocher WK 3472. Erfahren Sie mehr über Anschluss, Bedienung, Reinigung und Wartung.</p>
 <p><b>SEVERIN</b></p> <p>DE - DE - FKS 8841</p> <p>DE: Flaschenkühlschrank EN: Flaschenkühlschrank FR: Réfrigérateur à bouteilles NL: Fleskoelkast ES: Nevera para botellas IT: Refrigeratore per bottiglie PT: Refrigerador para garrafas PL: Chłodniówka do butelek DE: Brühautomat PT: Máquina de café PL: Brudziarka IT: Macchina per il caffè PT: Manual de instruções NL: Gebruiksaanwijzing DE: Ohne/aus, vorbereiten</p> <p>A 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100</p>	<p><b>SEVERIN FKS 8841 Bedienungsanleitung und Produktdatenblatt</b></p> <p>Entdecken Sie die detaillierte Bedienungsanleitung und das Produktdatenblatt für den SEVERIN FKS 8841 Flaschenkühlschrank. Erfahren Sie mehr über Installation, Bedienung, Sicherheitshinweise und technische Spezifikationen dieses hochwertigen Geräts von SEVERIN.</p>
 <p><b>SEVERIN</b></p> <p>DE - DE - JG 3521</p> <p>DE: Digitaler Joghurtbereiter EN: Digital yogurt maker FR: Dépôt de yaourt électrique NL: Digitale yoghurtbereider ES: Yogurtera digital IT: Yogurtiera digitale PT: Depósito de iogurte digital PL: Mleczarka cyfrowa IT: Macchina per la preparazione del yogurt PT: Manual de instruções NL: Gebruiksaanwijzing DE: Ohne/aus, vorbereiten</p> <p>A 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100</p>	<p><b>SEVERIN JG 3521 Digitaler Joghurtbereiter Bedienungsanleitung</b></p> <p>Entdecken Sie den SEVERIN JG 3521 Digitalen Joghurtbereiter. Diese Anleitung bietet detaillierte Informationen zur Verwendung, Sicherheit und Rezepten für die Zubereitung von hausgemachtem Joghurt.</p>