

Severin FM 7609

Severin FM 7609 Foot Massager User Manual

Model: FM 7609 | Brand: Severin

INTRODUCTION

Thank you for choosing the Severin FM 7609 Foot Massager. This manual provides essential information for the safe and effective use of your new appliance. Please read these instructions carefully before first use and keep them for future reference. Proper use and maintenance will ensure the longevity and optimal performance of your foot massager.

IMPORTANT SAFETY INFORMATION

To prevent injury or damage to the appliance, always adhere to the following safety guidelines:

- **Electrical Safety:** Always follow electrical safety precautions. Ensure the power cord and plug are in good condition. Do not use if damaged. Do not immerse the appliance in water beyond the specified fill line.
- **Intended Use:** This foot massager is designed exclusively for massaging the feet. Do not use it on any other body part to avoid injury.
- **Medical Conditions:** Consult a physician before use if you have any medical conditions, including but not limited to diabetes, circulatory problems, skin conditions, or if you are pregnant.
- **Heat Warning:** If the appliance includes a heating function, be aware that heat can cause burns. Use caution and monitor skin temperature.
- **Children and Impaired Individuals:** This appliance should not be used by children or individuals with reduced physical, sensory, or mental capabilities without supervision.
- **Supervision:** Never leave the appliance unattended while in use.
- **Cleaning:** Always unplug the appliance before cleaning.
- **Storage:** Store the appliance in a dry place, out of reach of children.

PRODUCT OVERVIEW

The Severin FM 7609 Foot Massager is designed to provide a relaxing foot spa experience. It features a robust plastic construction with integrated massage nubs and a central massage roller.



Figure 1: The Severin FM 7609 Foot Massager, shown with water and active bubbles, highlighting its white and light blue design. The central massage roller and textured footbed are visible.



Figure 2: A top-down view of the foot massager's interior, showcasing the textured massage nubs on the footbed and the removable central massage roller.



Figure 3: A close-up of the control knob, indicating different operational modes: Off (0), Bubble Massage (wave symbol), Heat (three 'S' symbols), and Combined Bubble Massage with Heat (wave and three 'S' symbols).

SETUP

- Placement:** Place the foot massager on a flat, stable surface in a comfortable location. Ensure it is near a power outlet and on a surface that can tolerate minor water splashes.

- Fill with Water:** Fill the foot massager with warm or cool water, depending on your preference. Do not exceed the maximum fill line indicated inside the basin.
- Connect Power:** Plug the power cord into a standard electrical outlet. Ensure your hands are dry before handling the plug.
- Optional:** You may add a small amount of foot bath salts or essential oils suitable for foot spas, ensuring they are compatible with the appliance and do not cause excessive foaming.

OPERATING INSTRUCTIONS

Once the foot massager is set up and filled with water, you can begin your massage session.

- Position Feet:** Gently place your feet into the water, resting them comfortably on the textured footbed.
- Select Mode:** Use the central control knob (refer to Figure 3) to select your desired operating mode:
 - Position 0:** Appliance is Off.
 - Wave Symbol:** Activates the bubble massage function.
 - Three 'S' Symbols:** Activates the heating function.
 - Wave + Three 'S' Symbols:** Activates both bubble massage and heating functions simultaneously.
- Massage Rollers:** For additional massage, move your feet back and forth over the integrated massage nubs and the central massage roller. The roller can be removed if preferred.
- Duration:** A typical massage session should last between 10 to 20 minutes. Avoid prolonged use.
- Turn Off:** After your session, turn the control knob to position '0' (Off) and unplug the appliance from the power outlet.

MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will help keep your foot massager in optimal condition.

- Unplug:** Always ensure the appliance is unplugged from the power outlet before cleaning.
- Empty Water:** Carefully empty the water from the basin.
- Clean Basin:** Wipe the interior of the basin with a soft cloth and mild detergent. Rinse thoroughly with clean water, ensuring no detergent residue remains.
- Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Drying:** Allow all parts to air dry completely before storing.
- Storage:** Store the foot massager in its original packaging or a clean, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your Severin FM 7609 Foot Massager, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; control knob not set correctly.	Ensure the power cord is securely plugged into a working outlet. Check the control knob is set to a function other than '0'.

Problem	Possible Cause	Solution
Weak or no bubbles.	Water level too low/high; air vents blocked; bubble function not selected.	Adjust water level to within recommended limits. Check for any obstructions in the air vents. Ensure the bubble function is selected on the control knob.
No heat.	Heating function not selected.	Ensure the heating function (three 'S' symbols) or combined function is selected on the control knob. Note that heating may take a few minutes to become noticeable.
Appliance is noisy.	Normal operation sound; resonance with surface.	Some operational noise is normal for appliances with motors and bubble functions. Try placing the massager on a rubber mat or towel to reduce resonance.

If the problem persists after attempting these solutions, please contact customer support. Do not attempt to repair the appliance yourself.

SPECIFICATIONS

Brand	Severin
Model Number	FM 7609 (Internal Model: 117864)
Power	62W
Dimensions (L x W x H)	20 x 12 x 25 cm
Item Weight	2.1 Kilograms
Color	White-light Blue
Material	Plastic
Special Features	Foot massage, Bubble function, Heating function
Power Source	Mains Powered (62W)

Note: Specifications are subject to change without prior notice for product improvement.

WARRANTY INFORMATION

This Severin product is covered by a manufacturer's warranty. The specific terms and duration of the warranty may vary depending on your region of purchase and local regulations. Please refer to the warranty card included with your product or your purchase receipt for detailed information. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

Should you have any questions, require technical assistance, or need to report a problem with your Severin FM 7609 Foot Massager, please contact Severin customer service or your retailer. Contact details can typically be found on the official Severin website or on your product packaging.

For more information, visit the official Severin website: www.severin.com

