Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Logitech /
- Logitech V100 3-Button USB Optical Mouse w/Tilt Wheel Plus Zoom Technology (Black/Dark Gray) User Manual

Logitech 931641-0403

Logitech V100 3-Button USB Optical Mouse User Manual

Model: V100 (931641-0403) | Brand: Logitech

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Logitech V100 3-Button USB Optical Mouse. Designed for comfort and precision, this mouse is suitable for both notebook and desktop computer use. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

KEY FEATURES

• Color: Black/Dark Gray

• Interface: USB (up to 2-foot cable length)

• Buttons: 3-button design

• Technology: Precise Optical Technology for accurate tracking

• Scroll Wheel: Tilt-Wheel Plus Zoom for side-to-side scrolling and effortless zooming

• Design: Contoured shape for ergonomic comfort, ideal size for notebook computers

· Connectivity: Plug and Play functionality

• Regulatory Approvals: FCC, CE, cULus, MIC, VCCI, C-Tick

SETUP GUIDE

Connecting the Mouse

- 1. Locate an available USB port on your computer (desktop or laptop).
- 2. Insert the USB connector of the Logitech V100 mouse firmly into the USB port.
- 3. The operating system will automatically detect and install the necessary drivers. This is a Plug and Play device, so no additional software installation is typically required.
- 4. Once installed, the mouse cursor should appear on your screen and respond to mouse movements.



Image: Top view of the Logitech V100 mouse, showing the left and right buttons and the scroll wheel. This image illustrates the general appearance of the mouse.

OPERATING INSTRUCTIONS

Basic Mouse Functions

- Left Button: Used for selecting items, clicking links, and performing primary actions.
- Right Button: Used for accessing context menus and secondary functions.
- Scroll Wheel (Middle Button):
 - Scrolling: Roll the wheel up or down to scroll through documents and web pages vertically.
 - Middle Click: Press the scroll wheel down to activate middle-click functions, often used for opening links in new tabs.
 - **Tilt-Wheel (Side-to-Side Scrolling):** Tilt the scroll wheel to the left or right to scroll horizontally in applications that support this feature, such as spreadsheets or wide web pages.
 - **Zoom:** In compatible applications, tilting the scroll wheel while holding down a modifier key (e.g., Ctrl on Windows, Command on Mac) may activate zoom functionality.

Optical Tracking

The Logitech V100 utilizes precise optical technology, allowing it to track movement accurately on a variety of surfaces. For best performance, use the mouse on a clean, non-reflective surface. Avoid highly reflective or transparent surfaces like glass, as these may interfere with tracking.



Image: Angled view of the Logitech V100 mouse, highlighting its ergonomic shape and dark gray and black color scheme. This view emphasizes the comfortable design.

MAINTENANCE AND CARE

- **Cleaning:** To clean the mouse, gently wipe its surface with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the device.
- Optical Sensor: Keep the optical sensor on the underside of the mouse clean and free from dust or debris to ensure accurate tracking. Do not attempt to open the mouse casing.
- Cable Care: Avoid sharp bends or excessive pulling on the USB cable to prevent internal wire damage.
- Storage: When not in use, store the mouse in a clean, dry environment away from extreme temperatures.

Troubleshooting

Problem	Possible Solution
Mouse cursor does not move or is erratic.	Ensure the USB cable is securely plugged into a working USB port. Try a different USB port. Clean the optical sensor on the underside of the mouse. Try using the mouse on a different surface. Avoid glass or highly reflective surfaces. Restart your computer.
Buttons or scroll wheel are unresponsive.	Check for any physical obstructions around the buttons or scroll wheel. Ensure the mouse is properly connected to the computer. Test the mouse on another computer if possible to determine if the issue is with the mouse or the computer.
Mouse is not detected by the computer.	Verify the USB connection. Try a different USB port. Check your computer's Device Manager (Windows) or System Information (Mac) to see if the mouse is listed. You may need to update or reinstall USB drivers for your computer.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	1 x 1 x 1 inches
Item Weight	7.2 ounces
Manufacturer	Logitech
Language	English
ASIN	B000FQ76IS
Item model number	931641-0403
Is Discontinued By Manufacturer	No
Date First Available	September 6, 2008
Brand	Logitech
Color	grey
Connectivity Technology	USB
Special Feature	Compact
Movement Detection Technology	Optical

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or to download the latest drivers (if applicable), please visit the official Logitech support website. Keep your purchase receipt as proof of purchase for warranty claims.

Logitech Support Website: www.logitech.com/support

© 2023 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners.

Related Documents - 931641-0403



Logitech MX Master 3 Getting Started Guide

A comprehensive guide to setting up and using the Logitech MX Master 3 mouse, covering quick setup, detailed connection options, software installation, and feature explanations.



Logitech MX Master 3 Getting Started Guide

A comprehensive guide to setting up and using the Logitech MX Master 3 Advanced Wireless Mouse, covering connection methods, features like MagSpeed scroll wheel, Easy-Switch, gesture controls, and app-specific settings.



Logitech M535 Bluetooth Mouse: Features, Setup, and Compatibility Guide

Discover the Logitech M535 Bluetooth Mouse. This guide covers its features, Bluetooth connection steps, customization with Logitech Options software, and compatibility with Windows, Mac OS, Chrome OS, and Android devices.



Logitech MX Master 3 Getting Started Guide

A comprehensive guide to setting up and using the Logitech MX Master 3 wireless mouse, covering connection methods, software features, button customization, and battery management.




Logitech MX Master 2S Wireless Mouse: Getting Started and Features Guide

A comprehensive guide to setting up and using the Logitech MX Master 2S wireless mouse, covering features like the speed-adaptive scroll wheel, thumb wheel, gesture button, and battery management.



Logitech MX Master 3 Getting Started Guide


A comprehensive guide to setting up and using the Logitech MX Master 3 Advanced Wireless Mouse, covering quick and detailed setup, pairing, MagSpeed scroll wheel functionality, thumb wheel and gesture button customization, app-specific settings, Logitech Flow, and battery management.

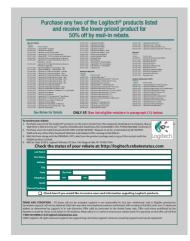

[pdf]

logtch85381 multipleRetailers multipleFiftyPercent 02 01 07 ai steven tucker Purchase any two of the Logitech products listed and TERMS AND CONDITIONS PO boxes will not be accepted is responsible for lost late misdirected mail or illegible submissions Incomplete requests validated 52354873 V45121107 ec1 images amazon G 00 52 35 48 80

Purchase any two of the Logitech products listed and receive the lower priced product for 50 off by ... Mouse 931755-0403 Logitech V150 Laser Mouse for Notebooks 931622-0403 Logitech LX3 Optical Mouse 931641-0403 Logitech V100 Optical Mouse for Notebooks 931073-0403 Logitech Notebook Optical Mouse P... lang:en score:23 filesize: 48.17 K page_count: 1 document date: 2007-01-30

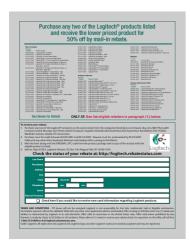

Logitech Product Rebate Offer: Get 50% Off Your Second Item

Details of the Logitech mail-in rebate offer: purchase any two Logitech products and receive 50% off the lower-priced item. Includes eligible products, retailers, and rebate submission instructions.

lang:en score:21 filesize: 47.88 K page count: 1 document date: 2007-02-20