

[Manuals.plus](#) /

› [REVLON](#) /

› Revlon 1875W Lightweight Hair Dryer User Manual

REVLON RV474

Revlon 1875W Lightweight Hair Dryer User Manual

Model: RV474

INTRODUCTION

This manual provides important information for the safe and effective use of your Revlon 1875W Lightweight Hair Dryer. Please read all instructions before use and retain for future reference.



Image: The Revlon 1875W Lightweight Hair Dryer in pink, featuring its sleek design and concentrator nozzle.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances, especially when children are present. This section outlines critical safety guidelines.

- **DANGER:** Keep away from water. Do not use while bathing, in the shower, or near a sink or tub.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - Unplug immediately after using.
 - Do not use while sleeping.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink.
 - Do not place in or drop into water or other liquid.
 - If an appliance falls into water, unplug it immediately. Do not reach into the water.
 - This appliance is for household use only.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or

damaged in any manner.

- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.

PRODUCT FEATURES

The Revlon 1875W Lightweight Hair Dryer is designed for efficient and smooth styling. Key features include:

- **1875 Watts:** Provides maximum drying power.
- **Ionic Technology:** Helps reduce hair frizz and static, leaving hair conditioned and smooth.
- **3 Heat/Speed Settings:** Offers versatility for precise styling.
- **Cold Shot Button:** Releases cold air to set and lock in your style.
- **Lightweight Design:** For comfortable and flexible styling.
- **Smoothing Concentrator:** For focused airflow and precise styling.
- **Removable End Cap:** For easy cleaning and maintenance.
- **Hanging Ring:** For convenient storage.



©2020 Helen of Troy. All rights reserved.

Image: A detailed diagram highlighting the key components of the Revlon hair dryer, including the smoothing concentrator, cold shot button, heat/speed settings, removable end cap, and hanging ring.



©2020 Helen of Troy. All rights reserved.

Image: Visual representation of the hair dryer's core technologies: Ionic Technology, Lightweight Design, 3 Heat/Speed Settings, and Cold Shot Button.

SETUP

1. **Unpacking:** Carefully remove the hair dryer and all accessories from the packaging. Inspect for any damage.
2. **Power Connection:** Ensure the power cord is fully extended and not tangled. Plug the hair dryer into a standard 120-volt electrical outlet.
3. **Attaching Concentrator (Optional):** If desired, attach the smoothing concentrator nozzle to the front of the hair dryer by aligning it with the barrel and pushing it firmly into place.

OPERATING INSTRUCTIONS

Follow these steps for optimal drying and styling:

1. **Preparation:** Towel-dry hair to remove excess moisture. For best results, section hair before drying.

2. **Power On:** Slide the ON/OFF switch to the desired heat and speed setting (LOW, MED, HIGH).



©2020 Helen of Troy. All rights reserved.

Image: A close-up view of the heat and speed selector switch, showing the HIGH, MED, LOW, and OFF positions.

3. **Drying:** Direct the airflow at your hair, moving the dryer continuously to prevent overheating any single area. Use a brush to style as you dry.
4. **Cold Shot:** Once hair is almost dry or styled, press and hold the Cold Shot button to release a burst of cool air. This helps to set the style and add shine.
5. **Power Off:** After use, slide the switch to the OFF position. Unplug the hair dryer from the electrical outlet.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your hair dryer.

1. **Always Unplug:** Before cleaning, always ensure the hair dryer is unplugged and completely cool.
2. **Cleaning the Air Filter:** The rear filter cap is removable for cleaning. Gently twist or pull off the cap. Use a soft brush or vacuum cleaner to remove any accumulated lint, dust, or hair from the filter screen. This prevents overheating and maintains airflow.



©2020 Helen of Troy. All rights reserved.

Image: The diagram shows the location of the removable end cap, which houses the air filter for cleaning.

3. **Wiping Down:** Wipe the exterior of the hair dryer with a damp cloth. Do not use abrasive cleaners or solvents.
4. **Storage:** Store the hair dryer in a cool, dry place. Do not wrap the cord around the appliance, as this can damage the cord. Use the hanging ring for convenient storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Hair dryer does not turn on.	Not plugged in; power outlet issue; internal fuse tripped.	Ensure plug is fully inserted. Test outlet with another appliance. If still no power, contact customer support.
Airflow is weak or unit overheats.	Blocked air intake filter; internal thermal cut-off activated.	Unplug and allow to cool for 10-15 minutes. Clean the rear air filter thoroughly. Ensure air vents are not blocked during use.
Hair dryer makes unusual noise.	Debris in fan; motor issue.	Unplug and check for any visible debris in the air intake. If noise persists, discontinue use and contact customer support.

Problem	Possible Cause	Solution
Hair is still frizzy after drying.	Improper use of ionic technology; not using cold shot.	Ensure you are using the dryer correctly. Finish drying with the cold shot to seal the hair cuticle and reduce frizz.

SPECIFICATIONS

- **Model Number:** RV474
- **Wattage:** 1875 watts
- **Voltage:** 120 volts
- **Power Source:** Corded Electric
- **Material:** Ceramic
- **Product Dimensions:** 3.8 x 9.9 x 9.6 inches
- **Item Weight:** 8 ounces
- **Manufacturer:** Helen of Troy

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Revlon website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Online Support: Visit the official Revlon website for FAQs, product registration, and support resources.www.revlon.com

Customer Service: Refer to the contact information provided with your product packaging or on the Revlon website for phone or email support.

© 2024 Revlon. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question