

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Logitech](#) /

› [Logitech LX3 Optical Mouse User Manual \(Model 931622-0403\)](#)

## Logitech 931622-0403

# Logitech LX3 Optical Mouse User Manual

Model: 931622-0403

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Logitech LX3 Optical Mouse. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

## SETUP

---

### Package Contents

- Logitech LX3 Optical Mouse
- User Manual (this document)

### Connecting the Mouse

The Logitech LX3 Optical Mouse supports both USB and PS/2 connections. Choose the appropriate port on your computer.



Figure 1: Top view of the Logitech LX3 Optical Mouse, showing the scroll wheel and primary buttons.

1. **USB Connection:** Locate an available USB port on your computer. Insert the USB connector of the mouse firmly into the USB port.
2. **PS/2 Connection:** If your computer has a PS/2 mouse port (typically green), you may use a USB to PS/2 adapter (not included) if desired. Ensure the computer is powered off before connecting or disconnecting PS/2 devices.

Your operating system should automatically detect and install the necessary drivers. No additional software installation is

typically required for basic functionality.

## OPERATING THE MOUSE

---

### Basic Functions

- **Left Button:** Primary click function, used for selecting items, opening files, and activating links.
- **Right Button:** Secondary click function, typically used to open context menus.
- **Scroll Wheel:** Scroll up or down through documents and web pages.



Figure 2: Side view of the Logitech LX3 Optical Mouse, highlighting its contoured design for comfortable grip.

### Advanced Features

- **Side-to-Side Scrolling:** Tilt the scroll wheel left or right to scroll horizontally in compatible applications.
- **Zoom:** In some applications, pressing and holding a specific button (often the scroll wheel itself or a dedicated side button, if present) while moving the scroll wheel can activate zoom functionality. Refer to your operating system or application settings for specific configurations.
- **Forward and Backward Buttons:** If present, these buttons (typically on the side of the mouse) allow for quick navigation in web browsers and file explorers.

The high-definition optical sensor provides precise tracking on various surfaces. For best performance, use on a clean, non-reflective surface.

## MAINTENANCE

---

### Cleaning the Mouse

To maintain optimal performance and hygiene, clean your mouse regularly.

- Disconnect the mouse from your computer before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the mouse surface.
- Do not allow liquids to enter the mouse body.
- Clean the optical sensor opening on the underside of the mouse with a dry cotton swab to remove any dust or debris.



Figure 3: Underside view of the Logitech LX3 Optical Mouse, indicating the location of the optical sensor.

## TROUBLESHOOTING

### Mouse Not Responding

- **Check Connection:** Ensure the mouse's USB or PS/2 connector is securely plugged into the correct port on your computer.
- **Try a Different Port:** Connect the mouse to a different USB or PS/2 port on your computer.
- **Restart Computer:** Sometimes a simple restart can resolve connectivity issues.
- **Test on Another Computer:** If possible, test the mouse on another computer to determine if the issue is with the mouse or your computer's setup.
- **Clean Sensor:** Ensure the optical sensor on the underside of the mouse is clean and free of obstructions.

### Erratic Cursor Movement

- **Surface Check:** Ensure you are using the mouse on a clean, non-reflective, and uniform surface. Avoid highly reflective or transparent surfaces like glass.
- **Clean Sensor:** Dust or debris on the optical sensor can cause erratic movement. Clean the sensor as described in the Maintenance section.

## SPECIFICATIONS

Feature	Detail
Brand	Logitech
Model Number	931622-0403
Movement Detection Technology	Optical
Connectivity Technology	PS/2, USB
Hardware Platform	PC
Operating System Compatibility	Mac OS X (and generally Windows PCs)
Item Weight	1 pound (approx. 450g)

Feature	Detail
<b>Product Dimensions (LxWxH)</b>	9.5 x 8.75 x 2 inches (approx. 24.1 x 22.2 x 5.1 cm)
<b>Color</b>	Black
<b>Special Feature</b>	Wireless <i>(Note: Product images and primary connectivity suggest wired. This specification may refer to a variant or be a general Logitech feature bullet.)</i>
<b>Power Source</b>	Battery Powered <i>(Note: Product images and primary connectivity suggest wired. This specification may refer to a variant or be a general Logitech feature bullet.)</i>

## WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Logitech website. Logitech provides customer support for product inquiries and technical assistance.

**Logitech Official Website:** [www.logitech.com](http://www.logitech.com)

Please have your product model number (931622-0403) and serial number ready when contacting support.

