

**BRIО 63347600**

# BRIО World 33476 Turntable & Figure Instruction Manual

Model: 63347600

## 1. INTRODUCTION

The BRIО World 33476 Turntable & Figure is an accessory designed to enhance your BRIО World railway system. This manual provides instructions for the proper setup, operation, and care of your turntable and accompanying figure. It is intended for users aged 3 years and older.



Figure 1.1: The BRIО World 33476 Turntable and Figure, fully assembled and ready for play.

## 2. SAFETY INFORMATION

Please read and understand all safety instructions before use. Keep these instructions for future reference.

- **Age Recommendation:** This product is suitable for children aged 36 months to 10 years. Small parts

may pose a choking hazard for younger children.

- **Supervision:** Adult supervision is recommended during play.
- **Material Safety:** The product is made from durable, child-safe materials, including wood from well-managed forests (FSC certified).
- **Intended Use:** Use this product only as intended for toy railway play. Do not modify the product.

### 3. PACKAGE CONTENTS

---

Verify that all items listed below are present in your package:

- 1 x Turntable
- 1 x Poseable Train Engineer Figure




Figure 3.1: The two main components included in the package: the turntable base and the train engineer figure.

### 4. SETUP INSTRUCTIONS

---

Follow these steps to set up your BRIO World 33476 Turntable:

1. **Unpack Components:** Carefully remove the turntable and figure from their packaging.
2. **Place Turntable:** Position the turntable on a flat, stable surface as part of your BRIO World railway layout.
3. **Connect Tracks:** The turntable features seven track connection points around its perimeter. Connect existing BRIO World railway tracks (sold separately) to any of these points to integrate the turntable into your railway system.
4. **Position Figure:** Place the poseable train engineer figure in the two-level control station on the turntable. The figure can be positioned to appear as if operating the turntable.

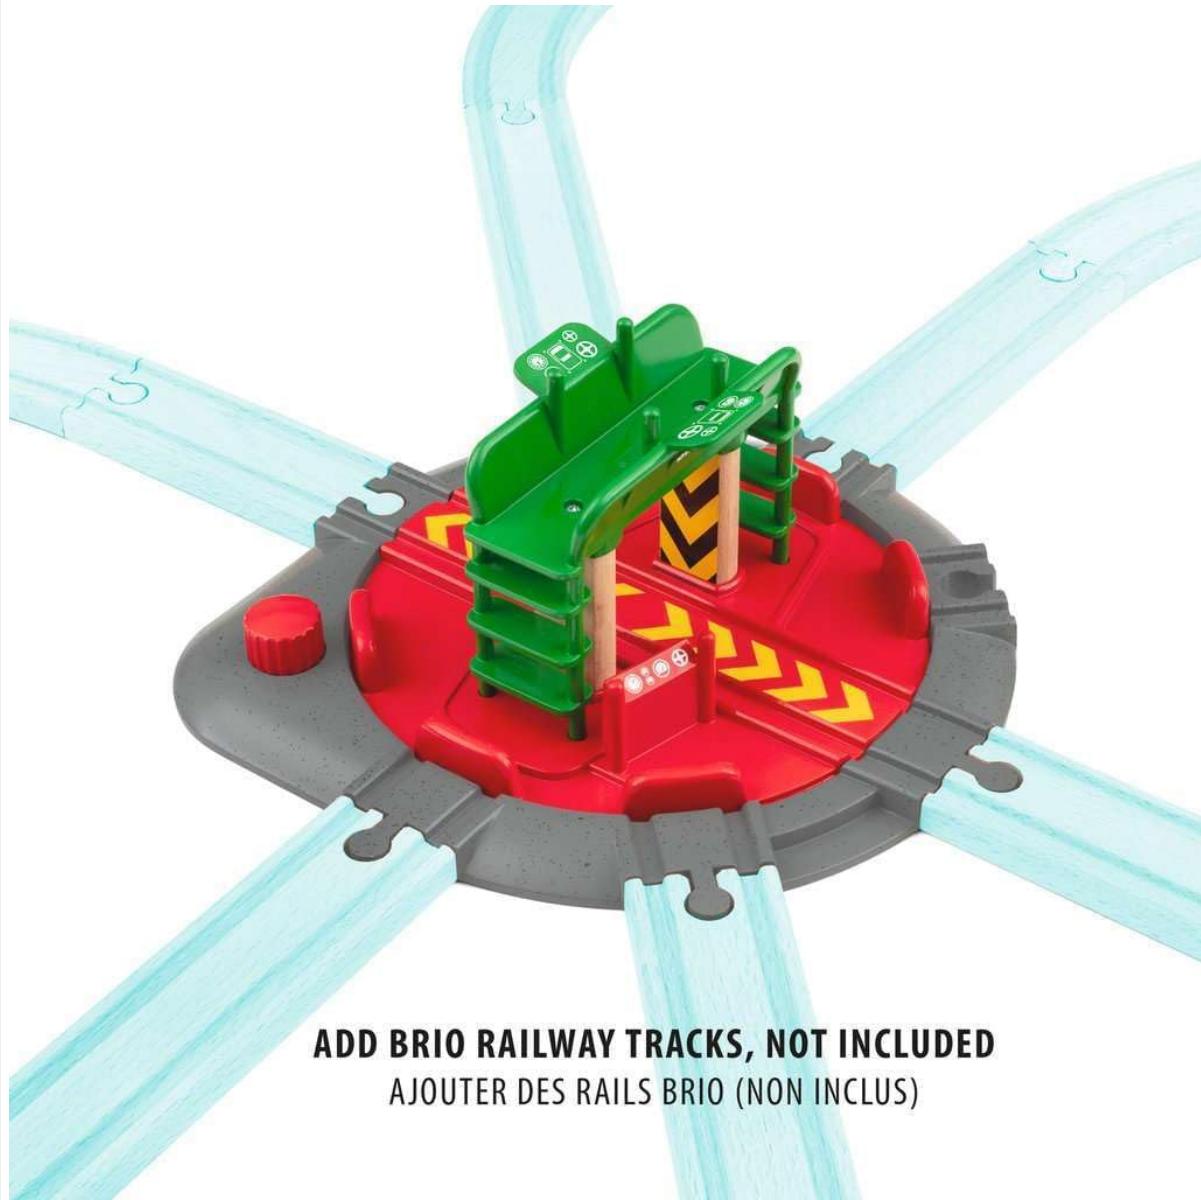

**ADD BRIO RAILWAY TRACKS, NOT INCLUDED**  
AJOUTER DES RAILS BRIO (NON INCLUS)

**Figure 4.1:** The turntable integrated into a railway layout, demonstrating multiple track connection points. Tracks are not included.




Figure 4.2: A close-up view of the two-level control station where the train engineer figure can be placed.

## 5. OPERATING INSTRUCTIONS

---

The turntable allows for easy redirection of trains within your railway system.

- 1. Place Engine:** Position any BRIO World engine (sold separately) onto the central rotating platform of the turntable. The platform is designed to accommodate various engine sizes.
- 2. Rotate Turntable:** To change the direction of the engine, twist the red knob located on the side of the turntable. This will cause the central platform to rotate.
- 3. Align Tracks:** Continue rotating the knob until the central platform aligns with the desired exit track. The platform will click into position when properly aligned with one of the seven connection points.
- 4. Move Engine:** Once aligned, the engine can be moved off the turntable onto the connected track.

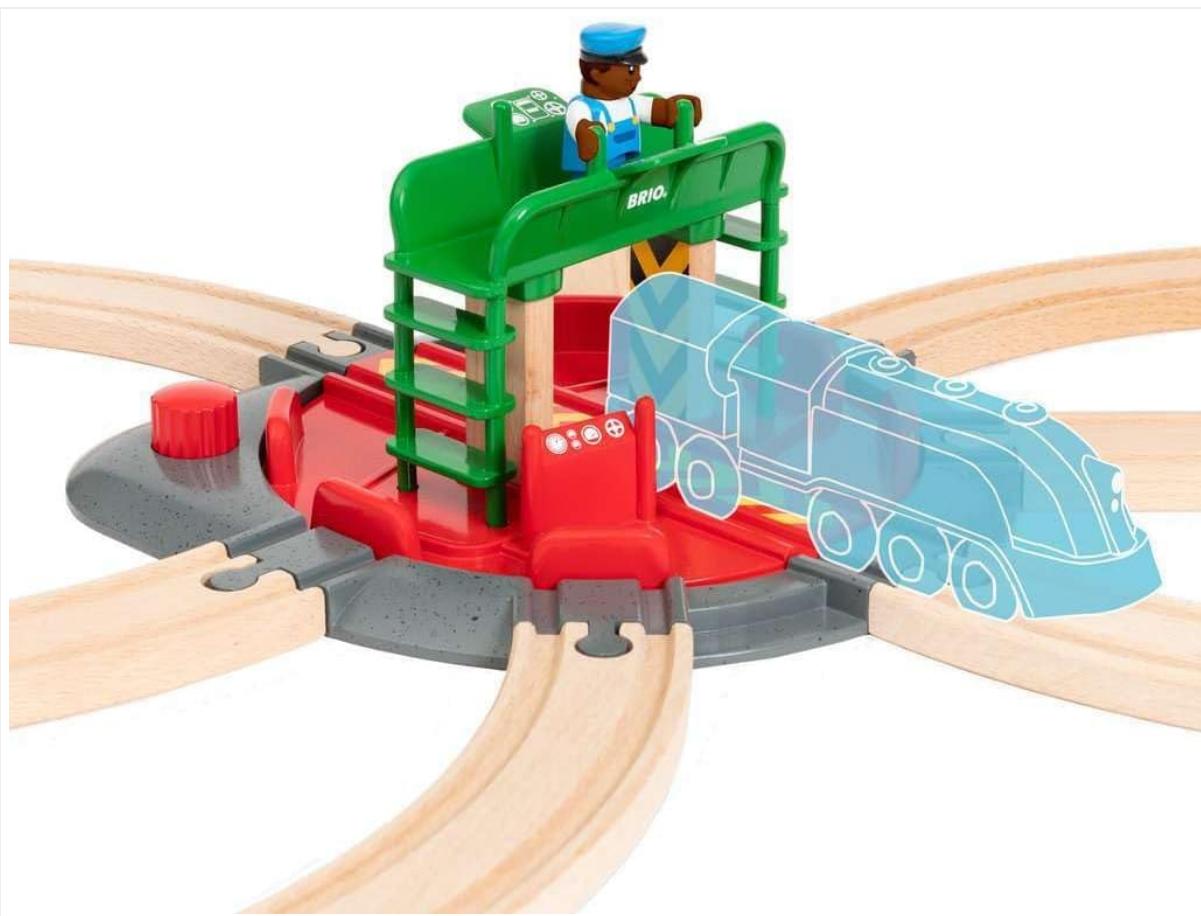

**Figure 5.1:** An engine placed on the turntable's central platform, ready for rotation.



**Figure 5.2:** Demonstrates how to twist the red knob to rotate the turntable platform and align tracks.

## 6. MAINTENANCE

---

To ensure the longevity and proper function of your BRIO World 33476 Turntable & Figure, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the turntable and figure with a clean, damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the product in a dry place away from direct sunlight and extreme temperatures when not in use.
- **Inspection:** Periodically inspect the product for any signs of damage or wear. Discontinue use if any parts are broken or loose.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your turntable, refer to the following common solutions:

Problem	Possible Cause	Solution
Turntable does not rotate smoothly.	Debris or dust in the mechanism.	Ensure the turntable is clean and free of obstructions.
Tracks do not connect securely.	Incorrect alignment or incompatible tracks.	Ensure tracks are BRIO World compatible and aligned correctly with the connection points.
Figure does not stay in place.	Figure not seated properly.	Ensure the figure's feet are securely placed in the designated slots on the control station.

## 8. SPECIFICATIONS

---

Feature	Detail
Product Model Number	63347600
Product Dimensions	9.21 x 9.21 x 3.9 inches
Item Weight	11 ounces
Recommended Age	36 months - 10 years
Material	Wood (FSC certified) and plastic
Track Connection Points	7

## 9. WARRANTY AND SUPPORT


---

**Warranty:** BRIO products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official BRIO website. Keep your proof of purchase for warranty claims.

**Customer Support:** If you have any questions, require assistance, or need to report a defect, please contact BRIO customer support through their official website or the retailer where the product was purchased. Provide the model number (63347600) when contacting support.

*Note: No official seller videos were provided for embedding in this manual.*

## Related Documents - 63347600

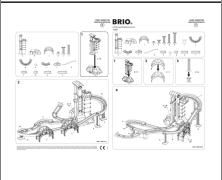	<p><a href="#"><u>BRIO World Remote Control Travel Train Troubleshooting Guide</u></a></p> <p>Provides essential troubleshooting steps for the BRIO World Remote Control Travel Train, helping users resolve issues related to infrared control, channel synchronization, remote operation, and battery performance.</p>
	<p><a href="#"><u>BRIO Battery-Operated Steaming Train - User Manual and Instructions</u></a></p> <p>Comprehensive guide for the BRIO Battery-Operated Steaming Train (model 33884). Learn how to install batteries, operate the train, generate steam, and understand safety precautions. Includes tips for optimal play and maintenance.</p>
	<p><a href="#"><u>BRIO Lift &amp; Load Warehouse Set 33887 Assembly Instructions</u></a></p> <p>Detailed assembly instructions and layout suggestions for the BRIO Lift &amp; Load Warehouse Set 33887, a wooden toy train accessory from BRIO.</p>
	<p><a href="#"><u>BRIO Remote Control Train - User Manual and Operating Instructions</u></a></p> <p>Comprehensive guide for the BRIO Remote Control Train, covering operation, battery installation, safety precautions, and FCC compliance. Learn how to set up and enjoy your BRIO RC train.</p>
	<p><a href="#"><u>BRIO Rote Lola 33592: Questions and Answers</u></a></p> <p>Find answers to common questions about the BRIO Rote Lola 33592 toy train, including operation, troubleshooting, and battery replacement. This guide provides information on how to use, maintain, and resolve issues with the toy.</p>
	<p><a href="#"><u>BRIO Central Train Station - Battery Replacement and Operation Guide</u></a></p> <p>Instructions and safety information for the BRIO Central Train Station toy, detailing how to replace batteries and operate its sound features. Includes important warnings and guidelines for safe use.</p>