

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic ER430K Nose, Ear, and Facial Hair Trimmer Instruction Manual](#)

## Panasonic ER430K

# Panasonic ER430K Nose, Ear, and Facial Hair Trimmer

Model: ER430K

## INTRODUCTION

The Panasonic ER430K vacuum ear/nose trimmer is a personal grooming tool designed for efficient hair removal from the nose, ears, and face. It features a revolutionary vacuum system to collect trimmed hairs, ensuring a clean grooming experience. The trimmer's ergonomic design facilitates easy handling and precise positioning. Equipped with hypoallergenic dual-edge blades set at a 60-degree angle, it provides clean and precise cuts without pulling. The head is washable for easy maintenance and is fully immersible, allowing for wet or dry use. It operates on one AA battery (not included) and includes a protective cap with a built-in mirror for convenience.

## PRODUCT FEATURES

- **Vacuum System:** Effectively whisks away hair clippings for easy clean-up.
- **Wet/Dry Operation:** Can be used in wet or dry conditions, and the trimmer head is fully immersible for easy rinsing.
- **Ergonomic Design:** Shaped for comfortable holding and precise positioning during use.
- **Dual-Edge Hypoallergenic Blades:** 60-degree angled blades cut cleanly and precisely, minimizing pulling.
- **Battery Operated:** Runs on 1 AA battery (not included) for approximately 90 minutes of operation.
- **Accessories:** Includes a travel pouch and a protective cap with a mirrored surface.



### **MICRO-VACUUM SYSTEM**

Collects cut hairs for easy clean-up



### **ROTATING CUTTING SYSTEM**

Circular blade action efficiently trims hair



### **SAFETY CONE DESIGN**

Guides hair into blades, helps protect skin



### **WET DRY CONVENIENCE**

Trim dry, or wet in the bath or shower



### **DUAL-EDGE TRIMMING BLADES**

COMFORTABLY TRIM NOSE, EAR AND FACIAL HAIR

*Image: Overview of the Panasonic ER430K's main features, including its micro-vacuum system, rotating dual-edge blades, safety cone design, and wet/dry functionality.*

Dual-edge blades trim  
from top & sides for  
more efficient cutting



*Image: Detailed view of the dual-edge blade system, highlighting its ability to cut hair from multiple angles for improved efficiency.*



*Image: Visual representation of the vacuum system in action, showing how it draws in trimmed hairs to keep the grooming area clean.*

## SAFETY INFORMATION


---

- Avoid submerging the trimmer in water to prevent electrical hazards.
- Always remove the battery before cleaning under running water.
- This product is not intended to diagnose, cure, mitigate, treat, or prevent any disease.

## SETUP

---

1. **Insert Battery:** Twist off the bottom cap of the trimmer. Insert one AA battery (not included) into the battery compartment, ensuring correct polarity (+/-). Replace the bottom cap by twisting it securely.
2. **Attach Protective Cap:** Place the clear protective cap over the trimmer head when not in use or for travel. The cap includes a mirrored surface for convenience.

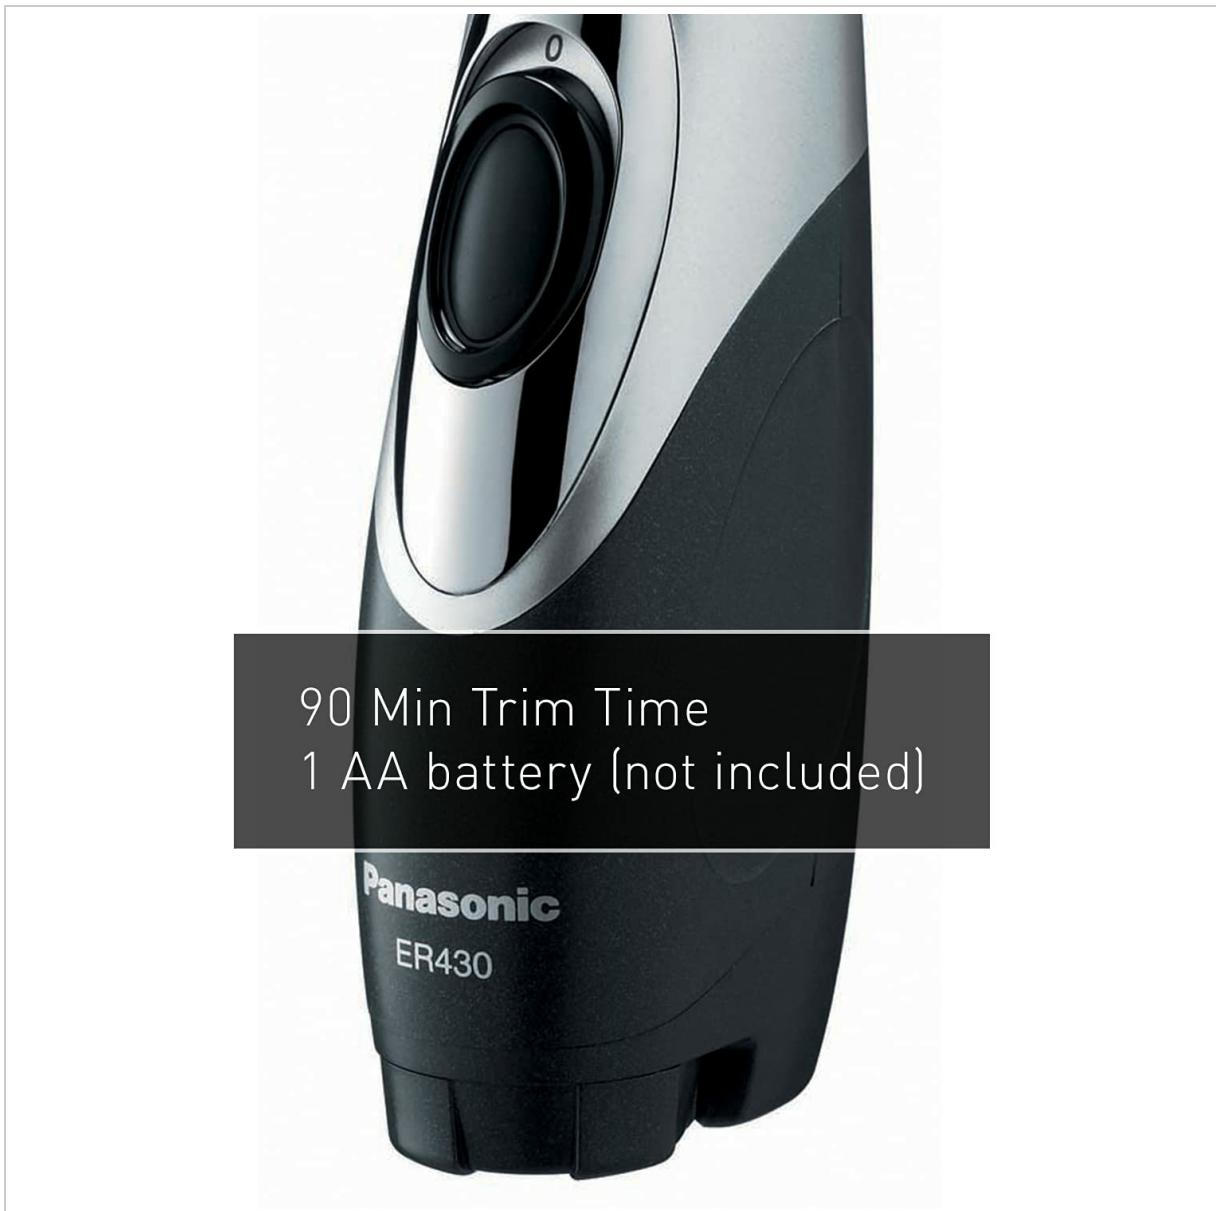

*Image: The base of the trimmer, showing battery information and operational duration.*

## OPERATING INSTRUCTIONS

1. **Power On:** Slide the power switch to the 'ON' position.
2. **Trimming Nose/Ear Hair:** Gently insert the trimmer tip into your nostril or ear canal. Move the trimmer slowly to cut unwanted hairs. The rotary blade system with a safety cone guides hair into the blades while preventing direct skin contact.
3. **Trimming Facial Hair:** Use the trimmer to carefully remove stray facial hairs.
4. **Wet or Dry Use:** The trimmer can be used dry or wet, even in the shower.
5. **Vacuum System:** The integrated vacuum system will automatically collect trimmed hairs.
6. **Power Off:** Slide the power switch to the 'OFF' position after use.



*Image: A user demonstrating the trimmer's application for both ear and nose hair removal.*



*Image: The trimmer shown in a wet environment, emphasizing its suitability for wet or dry operation.*

*Video: Official Panasonic video demonstrating the nose hair trimmer in use, highlighting its features and ease of operation.*

## MAINTENANCE

- Cleaning the Trimmer Head:** After each use, twist off the outer blade housing. Tap out any accumulated hair clippings. The trimmer head can be rinsed clean under running water.
- Vortex Cleaning System:** For thorough cleaning, turn on the trimmer and hold the head under running water. The vortex cleaning system will quickly flush out cut hairs.
- Drying:** After rinsing, shake off excess water and allow the trimmer head to air dry completely before reattaching or storing.
- Storage:** Store the trimmer with its protective cap in the included travel pouch to keep it clean and protected.



### Vortex Cleaning System Quickly Flushes Out Cut Hair

*Image: The trimmer head being rinsed under a faucet, illustrating the ease of cleaning with its washable design.*



*Image: The trimmer, protective cap, and travel pouch laid out, showing the complete set for storage and portability.*

## TROUBLESHOOTING

- **Trimmer Not Turning On:** Ensure the AA battery is inserted correctly with the proper polarity. Check if the battery needs replacement.
- **Reduced Trimming Performance:** Clean the trimmer head thoroughly to remove any lodged hair clippings. Ensure the blades are not dull; replacement blades may be available from Panasonic.
- **Excessive Vibration/Noise:** Check if the trimmer head is securely attached. Ensure no foreign objects are interfering with the blades.

## SPECIFICATIONS

<b>Brand</b>	Panasonic
<b>Model Number</b>	ER430K
<b>Power Source</b>	Battery Powered (1 AA battery, not included)
<b>Product Dimensions</b>	6 x 1 x 2 inches

<b>Item Weight</b>	3.81 ounces (108 Grams)
<b>Blade Type</b>	Dual-Edge Hypoallergenic Stainless Steel
<b>Special Features</b>	Wet/Dry Use, Washable Head, Vacuum Cleaning System, Mirrored Cap

## **WARRANTY AND SUPPORT**

For warranty information or product support, please refer to the documentation included with your Panasonic ER430K trimmer or visit the official Panasonic website. Contact information for customer service is typically provided in the user manual.