

Kichler 10563WH

Kichler 10563WH 3-Light Xenon Modular Under Cabinet Light Instruction Manual

Model: 10563WH

INTRODUCTION

The Kichler 10563WH is a 3-light xenon modular under cabinet light designed for flexible illumination in various settings. Its slim profile allows for discreet installation under cabinets. This fixture features extruded aluminum construction, a unique front-mount design, a hinged tempered frosted glass diffuser, and a built-in electronic transformer. It is a corded electric unit, not intended for hardwire installation.

SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- Read all instructions carefully before installing or using this fixture.
- Ensure the electrical rating of the fixture is compatible with your power supply.
- Do not install near flammable materials.
- This product is intended for indoor use only.
- Do not operate the fixture with a missing or damaged diffuser.
- Use only the specified bulb type and wattage.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Kichler 10563WH 3-Light Xenon Modular Under Cabinet Light Fixture
- (3) 18.5W S8 Wedge 12V Xenon Light Bulbs
- Mounting Hardware (screws, clips, etc.)
- Instruction Manual (this document)

SPECIFICATIONS

Feature	Detail
Model Number:	10563WH
Dimensions (L x W x H):	22 inches x 5 inches x 1 inch
Weight:	3.1 pounds
Finish:	White
Material:	Extruded Aluminum (fixture), Tempered Frosted Glass (diffuser)
Power Source:	Corded Electric
Bulb Type:	(3) 18.5W S8 Wedge 12V Xenon
Mounting:	Under-cabinet, Front-mount design
Transformer:	Built-in Electronic Transformer

INSTALLATION INSTRUCTIONS

Before you begin: Ensure power is disconnected at the circuit breaker. This fixture is a corded unit and does not require hardwiring. It is designed for under-cabinet, front-mount installation.

- 1. Prepare the Installation Area:** Identify the desired location under your cabinet. Ensure there is a nearby electrical outlet for the corded power supply.
- 2. Mark Mounting Points:** Hold the fixture in place and mark the screw locations for mounting. The unique front-mount design allows for easy access.
- 3. Secure the Fixture:** Using appropriate screws (provided), securely attach the light fixture to the underside of the cabinet. Ensure it is firmly in place to prevent movement.
- 4. Install Bulbs:** Gently open the hinged tempered frosted glass diffuser. Insert the three 18.5W S8 Wedge 12V Xenon bulbs into their respective sockets. Ensure bulbs are seated correctly.
- 5. Close Diffuser:** Carefully close the hinged glass diffuser until it is securely latched.
- 6. Connect Power:** Plug the power cord into a standard electrical outlet.
- 7. Restore Power:** Restore power at the circuit breaker.



Image: Kichler 10563WH 3-Light Xenon Modular Under Cabinet Light. This image shows the overall design of the under cabinet light fixture, highlighting its slim profile and white finish.

OPERATING INSTRUCTIONS

The Kichler 10563WH under cabinet light is designed for simple operation.

- **Power On/Off:** Use the integrated switch on the fixture to turn the light on or off.
- **Brightness Control:** This fixture may include a high/low switch for adjusting brightness. If connected to an external dimmer switch (sold separately), follow the dimmer's instructions for brightness adjustment.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your light fixture.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or glass diffuser.

- **Bulb Replacement:**
 - a. Disconnect power at the circuit breaker or by unplugging the fixture.
 - b. Allow bulbs to cool completely before handling.
 - c. Gently open the hinged tempered frosted glass diffuser.
 - d. Carefully remove the old 18.5W S8 Wedge 12V Xenon bulbs.
 - e. Insert new 18.5W S8 Wedge 12V Xenon bulbs. Avoid touching new bulbs directly with bare hands; use a clean cloth or gloves to prevent oil residue, which can shorten bulb life.
 - f. Close the glass diffuser securely.
 - g. Restore power.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the outlet. Bulbs are loose or burned out. Fixture switch is off.	Check circuit breaker or fuse. Test outlet with another device. Ensure bulbs are securely seated. Replace burned-out bulbs. Toggle the fixture switch to the ON position.
Light flickers or is dim.	Loose bulb connection. Incorrect bulb wattage or type. Faulty dimmer switch (if applicable).	Tighten bulbs. Ensure correct 18.5W S8 Wedge 12V Xenon bulbs are used. Consult dimmer switch manual or replace dimmer.
Glass diffuser does not close properly.	Obstruction or misalignment.	Check for anything blocking the hinge or latch. Realign carefully.

WARRANTY INFORMATION

Kichler Lighting warrants its products to be free from defects in material and workmanship for 1 (one) year following the date of shipment from the seller, with specific exceptions. This warranty does not cover light bulbs or the finish on outdoor polished brass products. If any warranted products are found to be defective, Kichler will, at its sole option and cost, replace, repair, or refund the product less an amount directly attributable to consumer's prior use. This warranty is not transferable. This warranty does not cover labor or other costs or expenses to remove or install any defective, repaired, or replaced product.

For full details and specific exceptions (e.g., landscape products, transformers, certain LED cabinet light models, ceiling fan motors), please refer to the complete warranty statement provided by Kichler Lighting or visit their official website.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Kichler Lighting customer service. You can find contact information and additional resources on the official Kichler website: www.kichler.com



