

Casio A178WA-1ACF

Casio Men's Vintage A178WA-1A Digital Watch User Manual

Brand: Casio | **Model:** A178WA-1ACF



INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Casio Men's Vintage A178WA-1A Digital Watch. This quartz-powered timepiece features a digital display, multi-alarm with snooze, and a durable stainless steel band, designed for reliable timekeeping and everyday use.

The Casio A178WA-1A is equipped with a digital dial face, a mineral dial window, and features such as a day-date-and-month calendar. Its silver-tone stainless steel band ensures a secure and comfortable fit. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

PRODUCT FEATURES

- Stainless steel watch featuring double-sided pushers and square digital dial with date display.
- Includes luminosity for low-light visibility and an alarm function.
- Features a 32 mm plastic case with a stainless steel case back and a durable mineral dial window.
- Powered by quartz movement with a clear digital display.
- Equipped with a stainless steel triple-row link bracelet and a secure fold-over clasp.
- Water resistant for daily use.

WATCH COMPONENTS AND CONTROLS



Image: Front view of the Casio A178WA-1A digital watch. The watch features a silver-colored stainless steel case and band. The digital display shows "DT" (Dual Time) and "7:39 28". Below the display, "SNZ ALM" (Snooze Alarm) and "WR DUAL TIME 10 YEAR BATTERY" are visible. Buttons are located on both sides of the watch case, labeled "ADJUST" and "MODE" on the left, and "LIGHT" and "START/STOP" on the right.

Your Casio A178WA-1A watch features four primary buttons for operation:

- **ADJUST Button (Top Left):** Used to enter and exit setting modes, and to confirm settings.
- **MODE Button (Bottom Left):** Used to cycle through different modes (Timekeeping, Alarm, Stopwatch, Dual Time).
- **LIGHT Button (Top Right):** Activates the illuminator for the display.
- **START/STOP Button (Bottom Right):** Used to start/stop stopwatch operations, and to increment values during setting.

SETUP AND INITIAL CONFIGURATION

Setting the Time and Date

1. In Timekeeping Mode, press and hold the **ADJUST** button until the seconds digits begin to flash, indicating the setting mode.
2. Press the **MODE** button to cycle through the settings: Seconds → Hour → Minutes → Year → Month → Day.
3. Use the **START/STOP** button to increase the flashing digit. For seconds, pressing **START/STOP** will reset them to 00.
4. Once all settings are correct, press the **ADJUST** button to exit the setting mode.

12/24-Hour Format Selection

In Timekeeping Mode, press the **START/STOP** button to toggle between 12-hour and 24-hour time formats. The 12-hour format will display a "P" (PM) indicator for afternoon times.

OPERATING INSTRUCTIONS

Using the Alarm

1. From Timekeeping Mode, press the **MODE** button repeatedly until you reach the Alarm Mode (indicated by "ALM" or similar on the display).
2. Press and hold the **ADJUST** button until the alarm hour digits flash.
3. Use the **START/STOP** button to set the alarm hour.
4. Press the **MODE** button to move to the alarm minute setting, then use **START/STOP** to set the minutes.
5. Press **ADJUST** to exit the alarm setting mode.
6. To turn the alarm on/off, press the **START/STOP** button in Alarm Mode. An indicator will appear when the alarm is active.
7. To activate the snooze function (SNZ), press the **LIGHT** button when the alarm sounds. The alarm will sound again approximately every five minutes.

Using the Stopwatch (CHRONO)

1. From Timekeeping Mode, press the **MODE** button repeatedly until you reach the Stopwatch Mode (indicated by "CHRONO" or "STW").
2. Press the **START/STOP** button to start the stopwatch.
3. Press **START/STOP** again to stop the stopwatch.
4. To reset the stopwatch to zero, press the **ADJUST** button while the stopwatch is stopped.

Using Dual Time (DT)

1. From Timekeeping Mode, press the **MODE** button repeatedly until you reach the Dual Time Mode (indicated by "DT").
2. Press and hold the **ADJUST** button until the hour digits of the dual time begin to flash.
3. Use the **START/STOP** button to set the hour.
4. Press the **MODE** button to move to the minute setting, then use **START/STOP** to set the minutes.
5. Press **ADJUST** to exit the dual time setting mode.

Using the Illuminator (LIGHT)

Press the **LIGHT** button (top right) at any time to illuminate the watch display for easy viewing in low-light conditions. The light will remain on for a few seconds.

MAINTENANCE AND CARE

Cleaning Your Watch

Wipe the watch with a soft, dry cloth to remove dirt and moisture. For stainless steel parts, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, as they may damage the watch's finish or seals.

Water Resistance

Your Casio A178WA-1A watch is water resistant. This means it is suitable for everyday use and can withstand splashes or brief immersion in water. However, it is not recommended for swimming, diving, or prolonged water activities. Do not operate buttons while the watch is wet or submerged.

Battery Replacement

This watch is equipped with a 10-year battery. When the display becomes dim or functions become erratic, it indicates that the battery power is low. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Refer to the "Battery Replacement" section.
- **Time is incorrect:** The time may need to be reset. Follow the instructions in the "Setting the Time and Date" section. Ensure you are in the correct 12/24-hour format.
- **Alarm does not sound:** Check if the alarm is activated. Ensure the alarm indicator is visible in Alarm Mode.
- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, a professional inspection may be required.

SPECIFICATIONS

Feature	Detail
Model Number	A178WA-1ACF
Product Dimensions	3 x 2 x 4.75 inches
Item Weight	3.21 ounces
Case Material	Plastic with Stainless Steel Case Back
Band Material	Stainless Steel
Dial Window Material Type	Mineral
Movement	Quartz
Water Resistance	Yes (General water resistance, not for swimming/diving)
Battery Type	1 Lithium Metal battery (10-year battery life)







WARRANTY AND SUPPORT

Your Casio watch is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Casio website.

For technical support, repairs, or further assistance, please contact Casio customer service or an authorized Casio service center. Contact information can typically be found on the Casio official website or in your product packaging.



Related Documents - A178WA-1ACF

	<p>Руководство пользователя CASIO GW-1401</p> <p>Подробное руководство пользователя для часов CASIO GW-1401 (Модуль 3357). Узнайте о водонепроницаемости, функциях, настройке времени, будильника, секундомера, подсветки, питания и уходе за вашими часами Casio.</p>
	<p>CASIO 3502 Watch User Manual</p> <p>Comprehensive user manual for CASIO watches, model 3502. Learn about water resistance, setting time and date, alarms, stopwatch, timer, backlight, and proper care.</p>
	<p>Casio GW-600 Watch User Manual Module 2972/2973 Instructions</p> <p>Comprehensive user manual for the Casio GW-600 watch (Module 2972/2973). Learn about water resistance, world time, alarms, stopwatch, timer, solar charging, power saving, and maintenance.</p>
	<p>MR-G Connected App Guide: Connecting Your G-SHOCK Watch</p> <p>Comprehensive guide to the MR-G Connected App, detailing how to connect your G-SHOCK watch, manage settings, explore features like World Time and Automatic Time Adjustment, and understand the advanced capabilities of MR-G models.</p>
	<p>CASIO MSG-140 Module 2495 User Manual - Operating Instructions and Features</p> <p>Comprehensive user manual for the CASIO MSG-140 watch with Module 2495. Learn about water resistance, world time, stopwatch, timer, alarm functions, and maintenance.</p>
	<p>CASIO BG-1000 Модуль 1565 Руководство Пользователя</p> <p>Полное руководство пользователя для часов CASIO BG-1000 с модулем 1565. Инструкции по настройке времени, даты, будильника, телефонной книги, водонепроницаемости и других функций.</p>