

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio W93H-1AV Multifunction Sport Watch User Manual](#)

Casio W93H-1AV

Casio W93H-1AV Multifunction Sport Watch User Manual

Model: W93H-1AV

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Casio W93H-1AV Multifunction Sport Watch. Designed for durability and functionality, this digital watch is water-resistant and features a resin case, polyurethane band, and mineral dial window. It includes a digital display with day and date calendars, and a quartz movement for precise timekeeping.

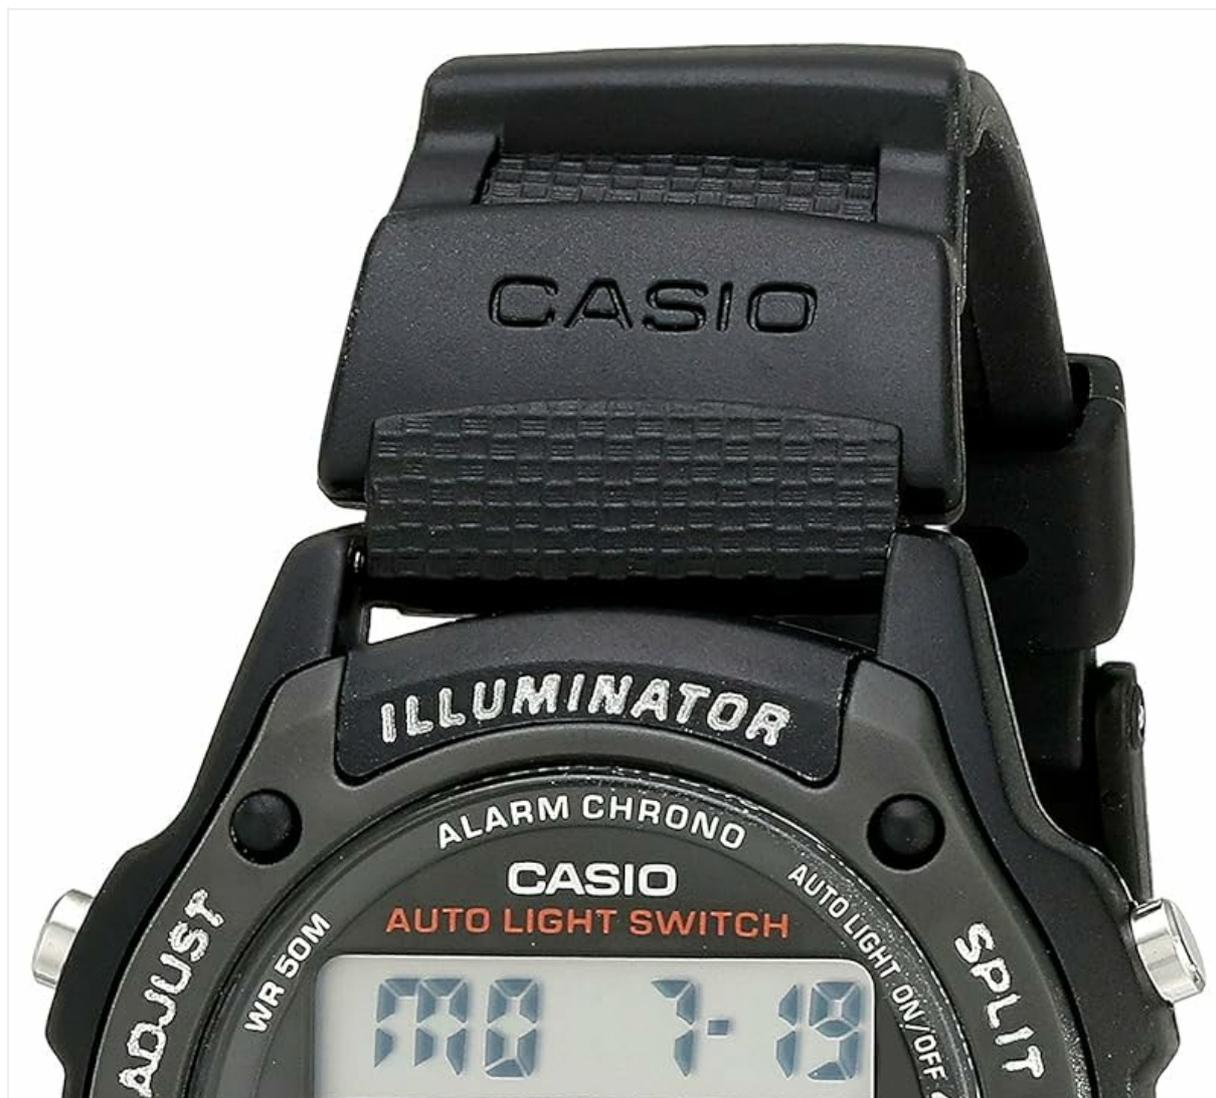




Figure 1: Front view of the Casio W93H-1AV Multifunction Sport Watch.

SETUP

Initial Time and Date Setting

1. In the Timekeeping Mode, press and hold the **ADJUST** button (top left) until the seconds digits start to flash. This indicates the setting mode.
2. Press the **MODE** button (bottom left) to cycle through the settings: Seconds → Hour → Minutes → Year → Month → Day.
3. Use the **START** button (bottom right) to increase the flashing value. Use the **SPLIT** button (top right) to decrease the flashing value (for time and date settings).
4. Once all settings are adjusted, press the **ADJUST** button again to exit the setting mode.

12/24 Hour Format

In the Timekeeping Mode, press the **12/24HR** button (top left, labeled ADJUST) to toggle between 12-hour and 24-hour time formats.



Figure 2: Watch face with measurement scale, illustrating the compact size of the Casio W93H-1AV.

Unboxing and Initial Overview

Your browser does not support the video tag.

Video 1: An unboxing and initial overview of the Casio W93H-1AV watch, demonstrating its appearance and basic functions right out of the box.

OPERATING INSTRUCTIONS

Mode Navigation

Press the **MODE** button (bottom left) to cycle through the different modes: Timekeeping, Stopwatch, Alarm, and Dual Time.

Light Function

Press the **LIGHT** button (bottom center) to illuminate the display for easy viewing in low-light conditions. The watch features an Auto EL Backlight with Afterglow.

Stopwatch Mode

1. Navigate to the Stopwatch Mode using the **MODE** button.
2. Press **START** (bottom right) to begin timing.
3. Press **SPLIT** (top right) to record lap times without stopping the main timer.
4. Press **START** again to pause the timer. Press **START** to resume.
5. Press **ADJUST** (top left) to reset the stopwatch to zero.

Alarm Mode

1. Navigate to the Alarm Mode using the **MODE** button.
2. Press the **ADJUST** button until the alarm time digits flash.

3. Use the **MODE** button to select between hour and minute settings.
4. Use the **START** button to adjust the alarm time.
5. Press **ADJUST** to confirm and exit.
6. Press **START** to toggle the alarm on/off. An alarm indicator will appear on the display when active.

Dual Time Mode

This mode allows you to keep track of a second time zone. Navigate to the Dual Time Mode using the **MODE** button. Press and hold **ADJUST** to enter setting mode, then use **START** and **MODE** to set the second time zone.

MAINTENANCE

Battery Replacement

The Casio W93H-1AV uses one Lithium Metal battery (CR1616). To replace the battery, carefully remove the four screws on the stainless steel back cover using a small screwdriver. Replace the battery, ensuring correct polarity, and then reattach the back cover securely. It is recommended to have the water resistance seal checked by a professional after battery replacement to maintain its integrity.

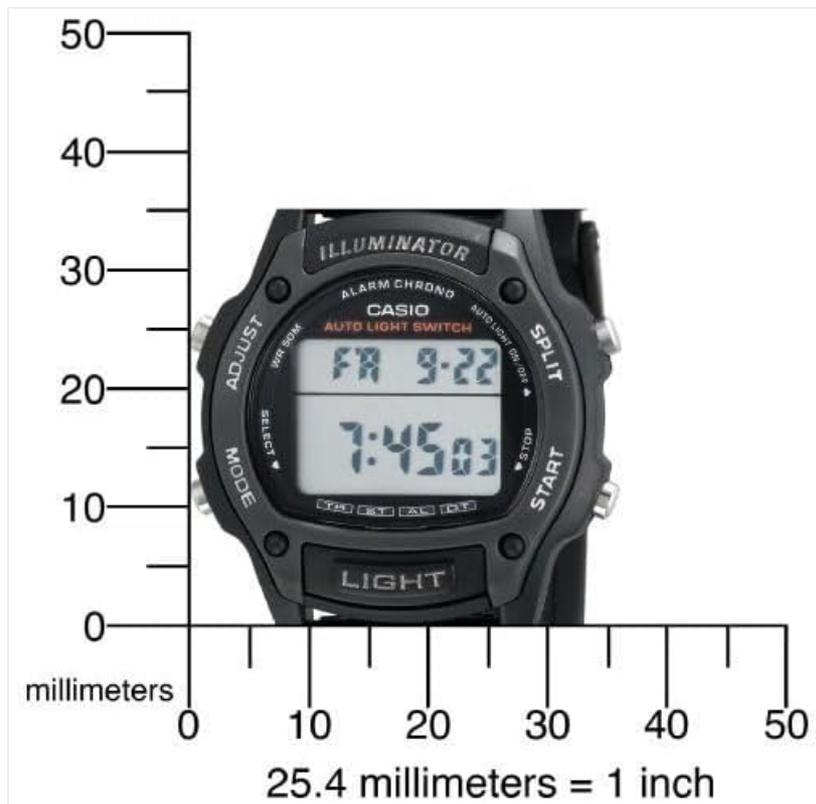


Figure 3: Rear view of the watch, displaying the stainless steel back and model information.

Water Resistance Care

This watch is water resistant to 165 feet (50 meters). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating buttons while the watch is wet or submerged to prevent water intrusion.

Cleaning

Clean the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Refer to the "Battery Replacement" section.
- **Time is incorrect:** Ensure the time and date settings are correctly configured as per the "Initial Time and Date Setting" section. Check if the 12/24 hour format is set as desired.
- **Light function not working:** This could indicate a low battery. If the battery has been recently replaced and the issue persists, contact customer support.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature a lock). If the watch is wet, dry it thoroughly before attempting to use buttons. If the issue persists, a reset may be necessary.
- **To perform a full reset:** In some cases, removing and reinserting the battery can perform a hard reset. Note that this will erase all settings, and you will need to reconfigure the time and date.

SPECIFICATIONS

Feature	Specification
Model Number	W93H-1AV (930102)
Display Type	Digital
Movement	Japanese Quartz
Water Resistance	165 Feet (50 Meters)
Case Material	Resin
Band Material	Resin
Battery Type	1 Lithium Metal (CR1616)
Case Diameter	36 Millimeters
Case Thickness	10 Millimeters
Item Weight	95 Grams



Figure 4: The Casio W93H-1AV watch as worn on a wrist.

WARRANTY AND SUPPORT

Manufacturer's Warranty

This Casio watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or service inquiries, please visit the official Casio website or contact their customer service department. You can also visit the [Casio Store on Amazon](#) for product information and resources.

Casio Brand Overview

Your browser does not support the video tag.

Video 2: A brief brand video from Casio, highlighting their commitment to innovation and quality in timepieces.