

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

**Casio W-96H-1AVCF**

# Casio W96H-1AV Sport Watch Instruction Manual

Model: W-96H-1AVCF

## INTRODUCTION

---

This manual provides detailed instructions for the proper use, setup, and maintenance of your Casio W96H-1AV Stainless Steel Sport Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

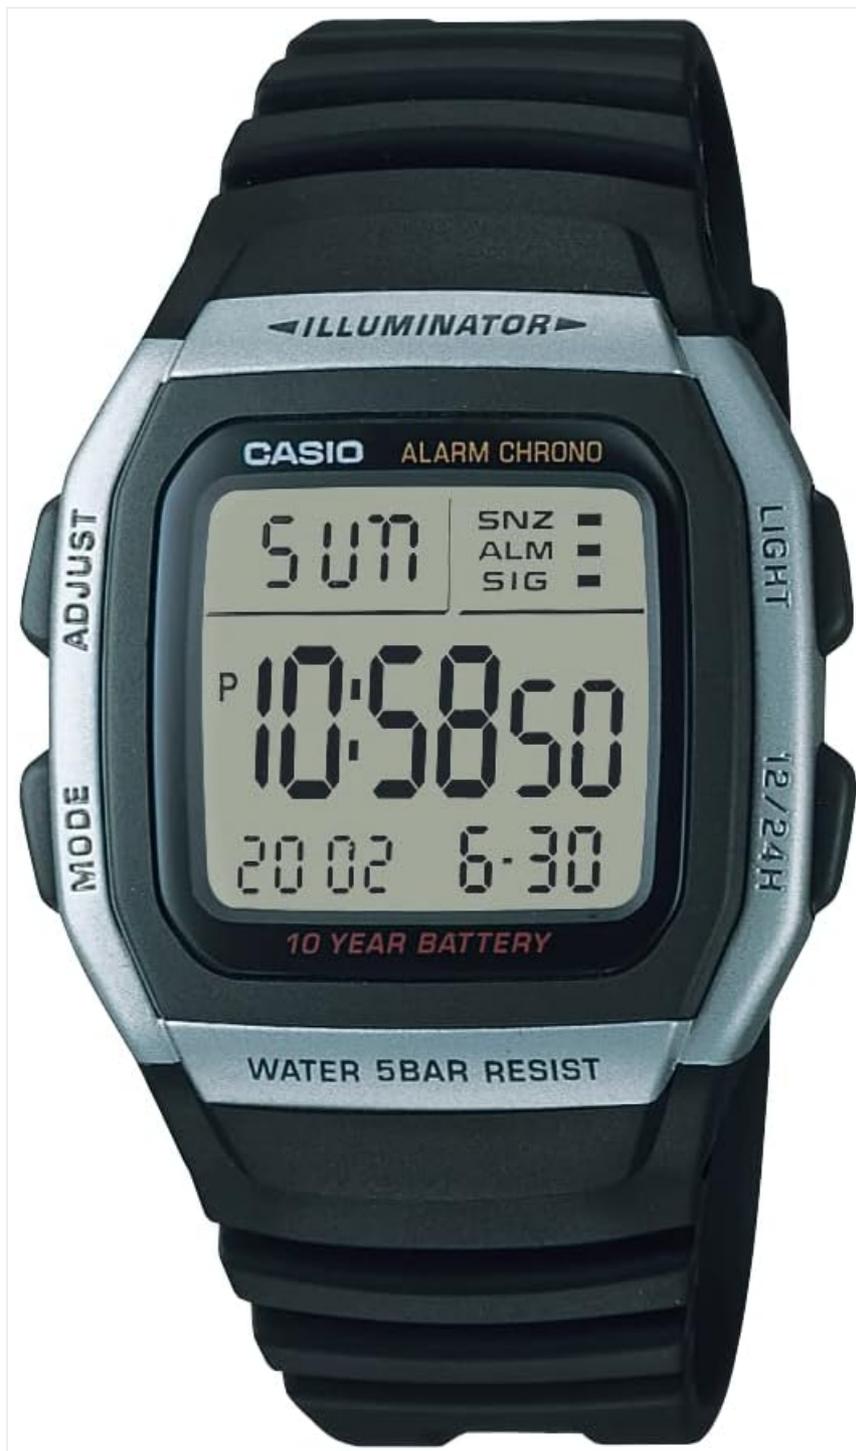


Image: Front view of the Casio W96H-1AV Sport Watch, displaying the digital time, date, and various function indicators. The watch features a black resin band and a silver-toned case with prominent buttons for adjustment and mode selection.

## SETUP

---

### Initial Time Setting

1. Press the **MODE** button repeatedly until the time setting screen appears. This is usually indicated by flashing digits.
2. Use the **ADJUST** button to select the digit or setting you wish to change (e.g., hours, minutes, year, month, day).
3. Use the **12/24H** button (or sometimes the **LIGHT** button) to increase the selected value. Hold to rapidly advance.
4. Once all settings are correct, press the **ADJUST** button again to exit the setting mode.

### 12/24-Hour Format

In the Timekeeping Mode, press the **12/24H** button to toggle between 12-hour and 24-hour time formats.

## OPERATING MODES

---

Your Casio W96H-1AV watch features several operating modes accessible via the **MODE** button.

- **Timekeeping Mode:** Displays the current time, date, and day of the week. This is the default mode.
- **Alarm Mode:** Allows setting daily alarms and hourly time signals.
  - To set an alarm: In Alarm Mode, use **ADJUST** to select hour/minute, and **12/24H** to change values. Press **ADJUST** to confirm.
  - To turn alarm/hourly signal on/off: In Alarm Mode, press **12/24H** to cycle through alarm on/off and hourly signal on/off.
- **Stopwatch Mode:** Measures elapsed time.
  - Press **12/24H** to start/stop the stopwatch.
  - Press **ADJUST** to reset to zero when stopped.
- **Dual Time Mode:** Displays a second time zone.
  - To set dual time: In Dual Time Mode, use **ADJUST** to select hour/minute, and **12/24H** to change values. Press **ADJUST** to confirm.

## Using the Illuminator Light

Press the **LIGHT** button (top right) to illuminate the display for easy viewing in low-light conditions. The light duration is preset and cannot be adjusted.

## MAINTENANCE

---

### Water Resistance

This watch is water resistant to 50 meters (165 feet). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating buttons while the watch is wet or submerged.

### Cleaning

Wipe the watch case and band with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild soap, then wipe dry thoroughly. Avoid using chemical cleaners or solvents as they may damage the watch's materials.

### Battery Replacement

The watch is equipped with a 10-year battery. When the display becomes dim or functions become erratic, it indicates the battery is low. Battery replacement should be performed by a qualified watch technician to ensure water resistance is maintained.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace battery. Consult a professional watch technician.

Problem	Possible Cause	Solution
Time is incorrect.	Time not set correctly or accidental button press.	Refer to "Initial Time Setting" in the Setup section to reset the time.
Buttons are unresponsive.	Watch may be wet or internal issue.	Ensure watch is dry. If problem persists, seek professional service.
Alarm does not sound.	Alarm is turned off or set incorrectly.	Check alarm settings in Alarm Mode and ensure it is activated.

## SPECIFICATIONS

**Model Number:** W-96H-1AVCF

**Display Type:** Digital

**Movement:** Quartz

**Case Material:** Resin / Stainless Steel Back

**Band Material:** Resin

**Water Resistance:** 50 meters (165 feet)

**Battery Life:** Approximately 10 years (CR2025)

**Functions:** Timekeeping, Dual Time, Daily Alarm, Hourly Time Signal, 1/100-second Stopwatch, LED Backlight (Illuminator), Full Auto-calendar

**Dimensions:** 3 x 2.5 x 4.5 inches (Product Dimensions)

**Weight:** 1.23 ounces



*Image: The Casio W96H-1AV Sport Watch displayed on a wrist, illustrating its size and fit. The black resin band and digital display are clearly visible.*

## WARRANTY AND SUPPORT

Casio watches typically come with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty duration and coverage details. For technical support, service, or inquiries regarding your watch, please visit the official Casio website or contact their customer service department. Keep your proof of purchase for warranty claims.

For more information, you may visit the official Casio Store: [Casio Store on Amazon](#)



## Related Documents

	<p><a href="#">Casio EFA-124 Watch User Manual</a></p> <p>User manual for the Casio EFA-124 watch, module 4398. Provides instructions on setting time, using world time, stopwatch, alarm, and care instructions.</p>
	<p><a href="#">CASIO Module 1320 User Manual - Digital Analog Watch Guide</a></p> <p>Comprehensive user manual for the CASIO Module 1320 watch, covering technical specifications, features, operation, water resistance, and care instructions. Learn how to set time, calendar, alarms, and use the stopwatch.</p>
	<p><a href="#">Casio LA-11 Digital Watch User Manual</a></p> <p>Detailed user guide for the Casio LA-11 digital watch, covering timekeeping, alarm, stopwatch, countdown timer, water resistance, and maintenance.</p>
	<p><a href="#">CASIO 3502 Watch User Manual</a></p> <p>Comprehensive user manual for CASIO watches, model 3502. Learn about water resistance, setting time and date, alarms, stopwatch, timer, backlight, and proper care.</p>