

[Manuals.plus](#) /

› [Jenga](#) /

› Jenga Wooden Blocks Stacking Tumbling Tower Game Instruction Manual

Jenga 53557

Jenga Wooden Blocks Stacking Tumbling Tower Game

Instruction Manual

INTRODUCTION

The Jenga game is a classic block-balancing game designed for fun and challenge. It involves carefully removing wooden blocks from a tower and placing them on top, aiming to keep the tower from tumbling. This manual provides detailed instructions for setting up, playing, and maintaining your Jenga game.

WHAT'S IN THE BOX

- 54 precision crafted hard wood blocks
- 1 stacking sleeve
- Instructions

SETUP

To set up the Jenga tower, use the included stacking sleeve. Arrange the 54 wooden blocks in layers of three, with each layer placed at a right angle to the previous one. Once all blocks are stacked, carefully remove the stacking sleeve. The tower should stand freely on a flat, stable surface.



Image: A fully constructed Jenga tower with several loose blocks on a white surface, demonstrating the game's components.

How to Play

Jenga is a game of skill, strategy, and patience. Players take turns removing one block at a time from any level of the tower below the highest completed level, and then placing it on top of the tower. The goal is to be the last player to successfully stack a block without causing the tower to fall.

Gameplay Steps:

1. The player whose turn it is selects a single block from any level below the topmost completed level.
2. Using only one hand, the player carefully removes the chosen block.
3. Once removed, the block must be placed on the very top of the tower, completing the current level before starting a new one. Blocks must be placed at right angles to the layer below.
4. Players can tap blocks to find a loose one, but only one hand can be used to remove and place the block.
5. The turn ends when the next player touches the tower, or after 10 seconds, whichever comes first.

The game concludes when the tower falls, or any block other than the one being moved falls from the tower. The player who caused the tower to fall is the loser.



**PULL BLOCK OUT AND
STACK CAREFULLY ON TOP**

Image: A person's hand carefully pulling a single wooden block from the middle of a Jenga tower.

A tall, slightly wobbly tower of light-colored wooden Jenga blocks is the central focus. The blocks have the 'Jenga' logo embossed on them. A person's hand, wearing a blue and white plaid shirt, is visible on the right side, with fingers hovering just above one of the blocks, ready to move it. The background is a plain, light-colored surface. An orange circle is overlaid on the left side of the image, containing the text 'KEEP YOUR HAND STEADY!' in white, bold, sans-serif capital letters.

**KEEP YOUR
HAND
STEADY!**

Image: A person's hand hovering near the Jenga tower, emphasizing the need for a steady hand during play.

AVOID TOPPLING THE TOWER TO WIN!



Image: Scattered Jenga blocks on a table, indicating the tower has toppled, marking the end of a game round.

MAINTENANCE

The Jenga wooden blocks are designed for durability. To ensure their longevity and smooth gameplay:

- Store blocks in their original tube-shaped container to prevent loss and protect them from dust and moisture.
- Avoid exposing blocks to extreme temperatures or humidity, which can cause warping.
- Clean blocks with a dry, soft cloth if necessary. Do not use harsh chemicals or abrasive cleaners.
- Handle blocks with care to prevent dents or scratches, which could affect stacking stability.

TROUBLESHOOTING

Jenga is a straightforward game, but here are some common points to consider:

- **Tower Instability:** Ensure the playing surface is perfectly flat and stable. Uneven surfaces can cause the tower to be inherently unstable.

- **Sticking Blocks:** If blocks feel sticky or difficult to slide, ensure they are clean and free of debris. Over time, natural oils from hands can accumulate; a gentle wipe with a dry cloth is usually sufficient.
- **Missing Blocks:** Always count the blocks before and after play to ensure all 54 pieces are present. Store them securely in the provided container.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5.04 x 11.26 x 7.6 inches
Item Weight	2.15 pounds
Model Number	53557
Manufacturer Recommended Age	6 years and up
Release Date	July 1, 2016
Language	English
Manufacturer	Hasbro

SAFETY INFORMATION

Choking Hazard: Small parts. Not for children under 3 years. Recommended for ages 6 and up.

WARRANTY AND SUPPORT

This Jenga game is manufactured by Hasbro. For any product-related inquiries, support, or warranty information, please refer to the official Hasbro customer service channels or visit their website. The product is designed for durability and enjoyment when used as intended.

A digital version of the user manual may also be available for download from the manufacturer's official website or via the following link: [Jenga User Manual \(PDF\)](#)